

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control User Manual

Redi-Remote RTV4297600

Redi-Remote Replacement Remote Control User Manual

MODEL: RTV4297600

1. Introduction

This manual provides instructions for the Redi-Remote Replacement Remote Control, designed to be compatible with various Yamaha audio/video units. This remote is a custom-built replacement and is not an original Yamaha product. It is engineered to perform all functions of the specific Yamaha units it is designed to control without requiring any programming.

Compatible Yamaha Models: V4297600, DSPA5, RXV596, HTR5250, RAV210

2. Setup

2.1 Battery Installation

Your Redi-Remote control requires **4 AAA batteries**, which are included with the remote. Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert the 4 AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Note: The remote is ready for use immediately after battery installation. No additional programming is required.



Image 1: Front view of the Redi-Remote Replacement Remote Control. The remote is black with a grey and white lower section that slides down to reveal additional buttons. Key buttons like Power, Volume, Channel, and a numeric keypad are visible on the upper section.

3. Operating Instructions

This remote control is designed for straightforward operation. Simply point the remote towards your Yamaha unit and press the desired button.

3.1 Basic Functions (Upper Section)

- **PWR (Power):** Turns the Yamaha unit on or off.
- **TV/VIDEO:** Switches between TV and video inputs.
- **SLEEP:** Activates the sleep timer function.
- **CH+ / CH-:** Changes channels up or down.
- **VOL+ / VOL-:** Increases or decreases the volume.
- **MUTE:** Mutes or unmutes the audio.
- **MENU:** Accesses the unit's main menu.
- **DISP (Display):** Changes the display mode or information.
- **RECALL:** Recalls the previously viewed channel or input.
- **Numeric Keypad (0-9, 100, ENT):** Used for direct channel entry or other numerical inputs.

3.2 Advanced Functions (Lower Section)

The lower half of the remote control features a sliding cover. Slide this cover downwards to reveal additional function buttons for advanced control of your Yamaha unit.

- **DOLBY/DTS:** Selects Dolby or DTS sound modes.
- **MOVIE THTR 1 / MOVIE THTR 2:** Selects specific movie theater sound modes.
- **MONO MOVIE:** Activates mono movie sound mode.
- **TV SPORTS:** Activates TV sports sound mode.
- **DISCO / ROCK / HALL / EFFECT:** Selects various sound effects or modes.
- **TEST:** Initiates a test tone or system test.
- **SET MENU:** Accesses setup menus.
- **TIME/LEVEL:** Adjusts time or level settings.
- **EXT DEC:** External decoder function.
- **A/B/C/D/E:** Selects specific inputs or functions labeled A, B, C, D, E.
- **PRESET + / -:** Navigates through radio presets.
- **>10:** For entering channel numbers greater than 9.
- **DISP A/B:** Toggles display information for A/B.
- **STANDBY:** Puts the unit into standby mode.

4. Product Features

- **No Programming Required:** Ready to use out of the box with compatible Yamaha models.
- **Dedicated Functionality:** Designed to control all functions for the specific unit it replaces; cannot be programmed for auxiliary devices.
- **Compact Design:** Measures approximately 7.5 inches (19 cm) x 2.25 inches (5.7 cm) x 0.75 inches (1.9 cm).
- **Infrared Technology:** Utilizes standard infrared signals for communication with your device.

- **No Laser Pointers or LED Lights:** This remote does not include these features.

5. Specifications

Feature	Detail
Brand	Redi-Remote
Model Number	RTV4297600
Product Dimensions	7 x 2.5 x 1 inches (approx. 17.8 x 6.35 x 2.54 cm)
Item Weight	4.5 ounces (approx. 127.57 grams)
Batteries Required	4 AAA (included)
Connectivity Technology	Infrared
Max Supported Devices	1
Compatible Devices	Stereo System (Yamaha V4297600, DSPA5, RXV596, HTR5250, RAV210)

6. Troubleshooting

Most issues with the remote control can be resolved with simple checks:

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with fresh ones.
 - Ensure there is a clear line of sight between the remote control and the Yamaha unit's infrared receiver. Obstructions can block the signal.
 - Make sure you are within the effective range of the remote control.
- **Specific buttons not working:**
 - Verify that the remote is pointed directly at the Yamaha unit.
 - Check for any physical damage to the button or remote.
- **Remote requires programming:**
 - This Redi-Remote is designed to work without programming. If you believe it requires programming, please re-check the compatibility with your specific Yamaha model.

7. Support

For any concerns or issues with your Redi-Remote Replacement Remote Control after purchase, please contact the seller directly for assistance. As a custom replacement remote, direct support is typically provided by the vendor from whom it was purchased.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B009H5ML42>

More documents and user manuals: **<https://manuals.plus/>**