

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control User Manual for Quasar VHQ820, VHQ950, VHQ830, VHQ860, VHQ840, VSQS1561

Redi-Remote RTVSQS1561

Redi-Remote Replacement Remote Control User Manual

MODEL: RTVSQS1561 - COMPATIBLE WITH QUASAR VHQ820, VHQ950, VHQ830, VHQ860, VHQ840, VSQS1561

1. Introduction

This manual provides instructions for the Redi-Remote replacement remote control, model RTVSQS1561. This remote is designed to function as a direct replacement for specific Quasar units, ensuring full functionality without the need for programming. Please read this manual thoroughly before use to ensure proper operation and longevity of your remote control.

2. Product Overview

The Redi-Remote replacement remote control is engineered to replicate the functions of your original Quasar remote. It features a durable design and a sliding cover to protect less frequently used buttons.



Image: Redi-Remote Replacement Remote Control. This image displays the front view of the remote control, highlighting its button layout and overall design.

Key Features:

- No programming required for compatible Quasar units.
- All functions of the original remote are supported.
- Features a sliding cover for lower half buttons.

3. Setup

The Redi-Remote is designed for immediate use with compatible Quasar devices. No complex programming steps are required.

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert four (4) AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Note: Four AAA batteries are included with the remote control.

3.2 Initial Use

Once batteries are installed, the remote control is ready to operate your compatible Quasar unit. Point the remote directly at the Quasar device and press the desired function button.

4. Operating Instructions

This remote control provides full functionality for your compatible Quasar VCR or TV. The buttons are typically laid out in a standard configuration, similar to the original remote.

- **Power Button:** Turns the Quasar unit on or off.
- **Channel Up/Down:** Changes channels.
- **Volume Up/Down:** Adjusts audio volume.
- **Number Pad:** For direct channel entry.
- **Playback Controls:** (Play, Stop, Pause, Rewind, Fast Forward) for VCR functions.

Sliding Cover: The lower half of the remote features a sliding cover. Slide this cover down to access additional buttons, which may include menu navigation, input selection, or advanced VCR controls.

Important: This Redi-Remote cannot be programmed to control any auxiliary devices. It is designed exclusively for the specific Quasar unit it replaces.

5. Maintenance

5.1 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

5.2 Storage

Store the remote control in a dry place, away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

6. Troubleshooting

If you experience issues with your Redi-Remote, please refer to the following common solutions:

- **Remote not responding:**
 - Ensure the batteries are inserted correctly with the proper polarity.
 - Replace old or depleted batteries with new ones.
 - Check for any obstructions between the remote and the Quasar unit's infrared sensor.
 - Ensure you are within the effective range of the Quasar unit.
- **Specific buttons not working:**
 - Clean the remote's surface, especially around the non-functioning buttons, to remove any dirt or debris that might be interfering.
 - Ensure the sliding cover is fully open if you are trying to access buttons beneath it.

If the problem persists after attempting these troubleshooting steps, please contact your retailer for further assistance.

7. Specifications

Feature	Detail
Model Number	RTVSQS1561
Compatible Devices	Quasar VHQ820, VHQ950, VHQ830, VHQ860, VHQ840, VSQS1561, VSQS1562 (VCR/TV)
Brand	Redi-Remote
Power Source	4 x AAA Batteries (included)
Special Feature	No Programming Required
Color	Black
Max Number of Supported Devices	1
Product Dimensions	7 x 2.5 x 1 inches (approximately)
Item Weight	4.5 ounces (approximately)

8. Warranty and Support

For information regarding warranty coverage or to obtain technical support, please refer to the documentation provided at the time of purchase or contact your original retailer. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B009H5NA60>

More documents and user manuals: **<https://manuals.plus/>**