

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control User Manual for AIWA Stereo Systems (Models NSXA888, NSXA777, CXNA888, CXNAJ80, NSXA555)

Redi-Remote RT8ZNF8701010

Redi-Remote Replacement Remote Control User Manual

FOR AIWA STEREO SYSTEMS: NSXA888, NSXA777, CXNA888, CXNAJ80, NSXA555, AND
COMPATIBLE MODELS

Introduction

This manual provides instructions for the Redi-Remote replacement remote control, designed for use with various AIWA stereo system models. This remote is a custom-built replacement and is not an original AIWA product. It is engineered to perform all functions for the specific AIWA units it is designed to control.

Compatible AIWA Models: NSXA888, NSXA777, CXNA888, CXNAJ80, NSXA555, 8ZNF8701010, CXNA777, CXNA767, NSXAJ80, XRC303RW, CXNAJ50U, NSXA767, CXNC3RW, CXNA555U, CXNA555, XRC3RW, NSXAJ50.

Package Contents

- 1 x Redi-Remote Replacement Remote Control
- 4 x AAA Batteries (included)

Setup

Battery Installation

The remote control requires 4 AAA batteries, which are included. Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.
3. Insert the 4 AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Note: Ensure batteries are inserted correctly to prevent damage to the remote control.

Operating the Remote Control

This Redi-Remote is pre-programmed to control your compatible AIWA stereo system. No additional programming is required. Point the remote directly at your AIWA unit's infrared sensor for optimal performance.

Remote Control Layout



Image: Full view of the Redi-Remote replacement remote control. The top section features power, volume, channel, and navigation buttons. The lower section, initially covered, contains advanced function buttons.

Button Functions

The remote control features two main sections of buttons:

- **Upper Section (Visible):** Contains primary controls for power, volume, channel selection, and basic navigation.
- **Lower Section (Hidden by Sliding Cover):** Contains advanced functions for CD, tuner, timer, and other system settings.

Upper Section Buttons:

- **PWR (Power):** Turns the AIWA stereo system on or off.
- **SLEEP:** Activates or adjusts the sleep timer function.
- **TV/VIDEO:** Switches input source to TV or Video.
- **DISP (Display):** Changes the display mode or information shown on the unit.
- **VOL + / - (Volume):** Increases or decreases the audio volume.
- **MUTE:** Silences the audio output.
- **CH + / - (Channel):** Changes radio channels or tracks.
- **MENU:** Accesses the system menu.
- **RECALL:** Recalls previous settings or channels.
- **Number Buttons (0-9, 100, ENT):** Used for direct input of channel numbers, track numbers, or other numerical settings. 'ENT' confirms the input.

Lower Section Buttons (Slide Down to Reveal):

To access these buttons, slide the lower cover of the remote control downwards.

- **FUNCTION:** Selects different operating modes (e.g., CD, Tuner, Tape).
- **CD EDIT/CHECK:** Functions related to CD editing or checking.
- **PROG (Program):** Used for programming sequences, such as CD tracks.
- **RANDOM/REPEAT:** Toggles random play or repeat modes for audio playback.
- **GEQ (Graphic Equalizer):** Adjusts equalizer settings.
- **T-BASS (Treble/Bass):** Adjusts treble and bass levels.
- **TIMER:** Sets or activates timer functions.
- **SLEEP:** (Duplicate, likely for specific sleep timer settings in lower menu).
- **CLOCK:** Sets or displays the system clock.
- **MONO TUNER:** Switches the tuner to monaural reception.
- **BAND:** Selects radio bands (e.g., AM/FM).
- **PRESET ◀▶ (Preset Up/Down):** Navigates through preset radio stations.
- **SET/PAUSE:** Sets a function or pauses playback.
- **TUNING ◀◀ / ▶▶ (Tuning Back/Forward):** Manually tunes radio frequencies or skips tracks.
- **CLEAR:** Clears current settings or inputs.

Maintenance

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these may damage the remote's surface or internal components.

Battery Replacement

Replace the batteries when the remote control's response becomes inconsistent or stops working. Always replace all four

AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

Troubleshooting

- **Remote not responding:**
 - Ensure the remote is pointed directly at the AIWA stereo system's infrared sensor.
 - Check if there are any obstructions between the remote and the stereo system.
 - Verify that the batteries are installed correctly with the correct polarity.
 - Replace the batteries with fresh ones.
- **Specific functions not working:**
 - Ensure you are in the correct operating mode on your AIWA stereo system (e.g., CD function for CD controls).
 - Confirm that the specific function is supported by your AIWA model.

Specifications

Feature	Detail
Brand	Redi-Remote
Model Number	RT8ZNF8701010
Compatible Devices	AIWA Stereo Systems
Connectivity Technology	Infrared
Max Number of Supported Devices	1
Special Feature	Ergonomic design, Sliding lower cover
Product Dimensions	7 x 2.5 x 1 inches (17.78 x 6.35 x 2.54 cm)
Item Weight	4.5 ounces (127.57 grams)
Batteries	4 AAA batteries (included)

Support

For any concerns or questions regarding your Redi-Remote replacement remote control after purchase, please contact the seller directly for assistance. This remote cannot be programmed to control auxiliary devices; it is designed exclusively for the specific AIWA unit it replaces.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B009H5NH6I>

More documents and user manuals: <https://manuals.plus/>