

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Replacement Remote Control for Koss KS4102

Redi-Remote RTKS4102

User Manual for Redi-Remote Replacement Remote Control

Model: RTKS4102

1. PRODUCT OVERVIEW

This manual provides instructions for the Redi-Remote Replacement Remote Control, specifically designed for compatibility with Koss KS4102 units. This remote is a custom-built replacement and is not an original Koss remote control. It is engineered to perform all functions for the specific unit it is designed to control.



Figure 1: Full view of the Redi-Remote Replacement Remote Control. Note the sliding cover at the bottom.

2. SETUP

2.1 Battery Installation

The remote control requires 4 AAA batteries, which are included. To install or replace batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert 4 AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

Important: Always replace all batteries at the same time. Do not mix old and new batteries, or different types of batteries.

3. OPERATING INSTRUCTIONS

This remote control is pre-programmed for the Koss KS4102 unit and does not require additional programming. It operates using infrared (IR) technology, requiring a clear line of sight to the device.

3.1 Top Section Buttons

The upper section of the remote contains primary control buttons:

- **PWR (Power):** Turns the connected device on or off.
- **SLEEP:** Activates the sleep timer function.
- **TV/VIDEO:** Switches between TV and video input modes.
- **DISP (Display):** Shows on-screen display information.
- **VOL + / VOL - (Volume):** Increases or decreases the volume level.
- **MUTE:** Mutes or unmutes the audio output.
- **CH+ / CH- (Channel):** Changes the channel up or down.
- **MENU:** Accesses the device's main menu.
- **RECALL:** Recalls the previously viewed channel.

The numeric keypad (0-9, 100, ENT) is used for direct channel entry and other numerical inputs.

3.2 Lower Section Buttons (Sliding Cover)

A protective cover slides down to reveal additional control buttons for advanced functions. To access these buttons, gently slide the lower half of the remote downwards.

- **OPEN/CLOSE:** Opens or closes the disc tray (for DVD/CD players).
- **V. SEL (Video Select):** Selects video input sources.
- **AV. SEL (Audio/Video Select):** Selects audio/video input sources.
- **DVD:** Switches to DVD mode.
- **TUNER:** Switches to Tuner mode.
- **MODE:** Cycles through various operating modes.
- **TONE:** Adjusts audio tone settings.
- **TITLE:** Accesses the DVD title menu.
- **INFO:** Displays information about the current program or media.
- **OK:** Confirms selections in menus.
- **EXIT:** Exits current menu or function.
- **Navigation Arrows (Up, Down, Left, Right):** Used for navigating menus and selections.

- **Playback Controls (Rewind, Play, Fast Forward, Stop, Pause, Skip Back, Skip Forward):** Standard controls for media playback.
- **ZOOM:** Activates or adjusts the zoom function.

4. MAINTENANCE

4.1 Cleaning the Remote

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

4.2 Battery Care

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure fresh batteries are installed correctly.
 - Check for any obstructions between the remote and the device's IR receiver.
 - Point the remote directly at the device.
- **Specific buttons not working:**
 - Verify that the remote is in the correct mode (e.g., DVD button pressed if controlling a DVD player).
 - Clean the button if it appears stuck or dirty.
- **Remote range is limited:**
 - Replace batteries if they are low.
 - Ensure no strong light sources (like direct sunlight) are interfering with the IR signal.

6. SPECIFICATIONS

Feature	Detail
Model Number	RTKS4102
Product Dimensions	7 x 2.5 x 1 inches
Item Weight	4.5 ounces
Batteries	4 AAA batteries (included)
Manufacturer	Redi-Remote
Special Feature	Ergonomic
Max Number of Supported Devices	1

Compatible Devices	Home Theater (Koss KS4102)
Connectivity Technology	Infrared

7. WARRANTY AND SUPPORT

7.1 Warranty Information

Specific warranty details for this Redi-Remote product are typically provided by the manufacturer or seller at the time of purchase. Please refer to your purchase documentation or contact the seller for warranty terms and conditions.

7.2 Customer Support

For any concerns or questions regarding the remote control after purchase, it is recommended to contact the seller directly. The seller for this product is [RemotesPro](#). You may also refer to the contact information provided with your purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B009H5NL46>

More documents and user manuals: <https://manuals.plus/>