

Redi-Remote RT147791511

Redi-Remote Replacement Remote Control Instruction Manual for AIWA Models 147791511, RMZ20019, XRMN5

Model: RT147791511

INTRODUCTION

This manual provides comprehensive instructions for the Redi-Remote replacement remote control, designed for use with specific AIWA audio/video systems. Please read this manual thoroughly before operating the remote control to ensure proper functionality and to maximize your user experience.

PRODUCT OVERVIEW

The Redi-Remote replacement remote control is a pre-programmed device intended to replicate the functions of the original AIWA remote control models 147791511, RMZ20019, and XRMN5. It requires no additional programming.

Remote Control Layout



Figure 1: Front view of the Redi-Remote replacement remote control. The upper section features primary control buttons, while the lower section, covered by a slide-down panel, contains additional function buttons.

SETUP

Battery Installation

The remote control requires 4 AAA batteries. These batteries are typically included with the remote. To install or replace batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover off in the direction indicated by the arrow (if present).
3. Insert 4 AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.

Note: Ensure batteries are inserted correctly to prevent damage to the remote control. Remove batteries if the remote will not be used for an extended period.

OPERATING INSTRUCTIONS

This remote control is pre-programmed and ready for immediate use with compatible AIWA units. Point the remote directly at your AIWA system's infrared receiver.

Upper Section Buttons

Button	Function
PWR (Power)	Turns the AIWA system on or off.
SLEEP	Activates the sleep timer function.
TVI/VIDEO	Selects TV or Video input source.
DISP (Display)	Changes or shows display information.
VOL + / VOL -	Increases or decreases the volume level.
MUTE	Mutes or unmutes the audio output.
CH+ / CH-	Changes channels up or down (if applicable).
MENU	Accesses the system menu.
RECALL	Recalls previous settings or channels.
Number Buttons (0-9, 100)	Direct input for channels, tracks, or other numerical selections.
ENT (Enter)	Confirms selections or inputs.

Lower Section Buttons (Slide Down Cover)

To access these functions, slide down the cover located at the bottom of the remote control.

Button	Function
DISC SELECT	Selects a specific disc in a multi-disc changer.
CLEAR	Clears current selection or input.

SHUFFLE	Activates or deactivates shuffle playback mode.
I-BASS	Enhances bass output.
REPEAT	Repeats current track, disc, or program.
ENTER	Confirms selections within menus or playback.
Navigation Arrows (Up, Down, Left, Right)	Navigates through menus and options.
Play/Pause (▶)	Starts or pauses playback.
Stop (■)	Stops playback.
Fast Forward (▶ ▶)	Fast forwards through content.
Rewind (◀ ◀)	Rewinds through content.
Skip Forward (▶)	Skips to the next track or chapter.
Skip Backward (◀)	Skips to the beginning of the current track or previous track/chapter.
TONE	Adjusts audio tone settings (bass, treble).
TUNER/BAND	Selects tuner mode (AM/FM) or changes radio bands.
AUX (Auxiliary)	Selects the auxiliary input source.
FUNCT (Function)	Cycles through various functions or modes.
DISP (Display)	Changes or shows display information.
DIMMER	Adjusts the brightness of the system's display.
CLOCK	Accesses clock settings.
TIMER	Sets or adjusts timer functions.
TUNER MODE	Switches between tuner modes (e.g., stereo/mono).
REV MODE	Activates or deactivates reverse playback mode (if applicable).
DISC/ALBUM	Selects disc or album.
CD EDIT	Accesses CD editing functions.

MAINTENANCE

To ensure the longevity and proper functioning of your remote control:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace all batteries at the same time with new ones of the same type.

- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal circuitry.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote not responding.	◦ Batteries are depleted or incorrectly inserted. Replace batteries, ensuring correct polarity. ◦ Obstruction between remote and AIWA unit. Ensure a clear line of sight to the unit's infrared receiver. ◦ Remote is too far from the unit. Move closer to the AIWA system.
Certain buttons do not work.	◦ The button may be stuck or damaged. Gently press the button multiple times. ◦ The function may not be supported by your specific AIWA model.
Remote is not controlling the correct device.	◦ This remote is specifically designed for AIWA models 147791511, RMZ20019, XRMN5. It cannot be programmed for other devices.

SPECIFICATIONS

- **Brand:** Redi-Remote
- **Compatible AIWA Models:** 147791511, RMZ20019, XRMN5
- **Model Number (Redi-Remote):** RT147791511
- **Power Source:** 4 x AAA Batteries (included)
- **Connectivity Technology:** Infrared
- **Dimensions:** Approximately 7 x 2.5 x 1 inches (17.8 x 6.4 x 2.5 cm)
- **Weight:** Approximately 4.5 ounces (127.6 grams)
- **Special Feature:** No Programming Required

WARRANTY AND SUPPORT

For any concerns with the remote after purchase, please contact the seller directly. This replacement remote is manufactured by Redi-Remote.

Redi-Remotes are designed to perform every function for the specific unit they are intended to control and cannot be programmed to control auxiliary devices.