

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control for Toshiba TV Models CF1926A, CF2027B, CT9612, CH20C01, 23120073

Redi-Remote RT23120073X

Redi-Remote Replacement Remote Control User Manual

MODEL: RT23120073X FOR TOSHIBA TV MODELS

1. Introduction

This document provides instructions for the Redi-Remote replacement remote control, model RT23120073X. This remote is designed to function as a direct replacement for the original Toshiba remote control number 23120073X and is compatible with a wide range of Toshiba television models. It is not an original Toshiba product but offers full functionality for the specified units.

Compatible Toshiba TV Models include:

- CF1926A, CF2027B, CT9612, CH20C01, 23120073
- CZ2084, CZ1484, 23120816, CX29682, 23120823
- CF916, CF13C20, CE30C10, 23120817, CX2034
- CT9172, CT9677, CT986, 23120039, CT9583
- CF2666R, 23120822, CF915, CE32C10, CF2768R
- CT9690, C1414M, CM940C, C2034M, CF316
- CF318, 23120724, CF924, CZ2094, CF2768B
- 23120320, CH20D02, 23120230, 23120794, C1914M
- 23120231, 23120307, CA20261, 23120037, CT9585
- CF1405, CF2026A, CX1414, CF914, CF2767A, CT9534

2. Product Overview

The Redi-Remote replacement remote control features a standard layout with essential television functions. A sliding cover conceals additional advanced controls.



Image: Front view of the Redi-Remote replacement remote control. The top section displays primary controls like power, volume, and channel. The lower section, initially covered, reveals advanced functions when slid down.

2.1 Button Layout and Functions

The remote control is divided into two main sections: the primary control area and a hidden panel for advanced functions.

Primary Control Area:

- **PWR (Power):** Turns the television on or off.
- **SLEEP:** Activates or adjusts the sleep timer function.
- **TV/VIDEO:** Switches between TV and video input sources.
- **DISP (Display):** Shows on-screen information such as channel number or time.
- **VOL +/- (Volume):** Increases or decreases the audio volume.
- **MUTE:** Silences the television audio.
- **CH +/- (Channel):** Changes the television channel up or down.
- **MENU:** Accesses the television's main menu.
- **RECALL:** Returns to the previously viewed channel.
- **Number Buttons (0-9, 100, ENT):** Used for direct channel entry. Press the desired channel number(s) and then 'ENT' if required by your TV model.

Hidden Panel (Slide Down to Reveal):

To access these functions, slide down the cover located at the bottom of the remote control.

- **RECALL:** (May offer additional recall functions depending on TV model).
- **TIMER:** Sets or adjusts the TV's timer functions.
- **CH SEARCH:** Initiates channel scanning or search functions.
- **TV/VIDEO:** (Additional input selection options).
- **MTS:** Multi-channel Television Sound selection (e.g., Stereo, SAP).
- **CH RTN (Channel Return):** Similar to Recall, returns to previous channel.
- **AUD (Audio):** Adjusts audio settings or modes.
- **PIC (Picture):** Adjusts picture settings or modes.
- **Left/Right Arrows:** Navigation within menus or picture adjustments.
- **PROG (Program):** Accesses program setup or programming features.
- **ADD/ERASE:** Adds or erases channels from the TV's memory.
- **SURROUND:** Activates or deactivates surround sound modes.
- **RESET:** Resets certain TV settings to default.
- **TV/CATV:** Switches between TV and Cable TV modes.
- **FUNCTION:** Accesses various special functions depending on the TV model.

3. Setup

3.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover off in the direction indicated by the arrow.
3. Insert four (4) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Note: Four AAA batteries are included with the remote control.

4. Operating Instructions

This remote control is pre-programmed to work with compatible Toshiba TV models. No additional programming is required. Simply point the remote at your television and press the desired function button.

4.1 Basic Operation

- **Power On/Off:** Press the **PWR** button.
- **Adjust Volume:** Use the **VOL +** to increase and **VOL -** to decrease volume.
- **Change Channel:** Use the **CH +** to go up a channel and **CH -** to go down a channel.
- **Mute Sound:** Press the **MUTE** button to silence the audio. Press again to restore.
- **Select Input:** Press the **TV/VIDEO** button to cycle through available input sources (e.g., TV, Video 1, Video 2).
- **Access Menu:** Press the **MENU** button to open the TV's on-screen menu. Use navigation buttons (if available on your TV) or the hidden panel arrows to navigate.

4.2 Advanced Operation (Hidden Panel)

Slide down the lower cover to access additional functions. Refer to your Toshiba TV's original manual for specific details on how these advanced functions operate with your model.

5. Specifications

Model Number	RT23120073X
Brand	Redi-Remote
Product Dimensions	7 x 2.5 x 1 inches
Item Weight	4.5 ounces
Batteries Required	4 AAA batteries (included)
Connectivity Technology	Infrared
Max Number of Supported Devices	1 (Television)
Special Feature	Ergonomic design

6. Troubleshooting

- **Remote not responding:**
 - Ensure fresh batteries are correctly installed.
 - Verify there is a clear line of sight between the remote's infrared emitter and the TV's sensor.
 - Check for any obstructions blocking the signal.
- **Remote controls some functions but not others:**
 - This remote is designed to replicate the original Toshiba remote's functions. Some advanced features may vary slightly depending on your specific TV model.
- **Remote does not control auxiliary devices:**
 - This Redi-Remote is specifically designed for your Toshiba TV and cannot be programmed to control other devices like DVD players or sound systems.

7. Warranty and Support

For any concerns or issues with your Redi-Remote replacement remote control after purchase, please contact the seller directly for assistance. This will ensure you receive prompt and accurate support for your specific product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B009H5REXU>

More documents and user manuals: <https://manuals.plus/>