

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control for LG BD530 (AKB73215301) User Manual

Redi-Remote RTAKB73215301

Redi-Remote Replacement Remote Control for LG BD530 (AKB73215301)

User Manual

1. INTRODUCTION

This manual provides comprehensive instructions for the Redi-Remote replacement remote control, model RTAKB73215301. This remote is designed to function as a direct replacement for the original LG remote control model AKB73215301, specifically for use with LG BD530 units. It offers full functionality without requiring any programming.

2. COMPATIBILITY

The Redi-Remote model RTAKB73215301 is specifically compatible with the following LG unit:

- LG BD530 Blu-ray Disc Player

This remote replaces the original LG remote control model AKB73215301.

3. FEATURES

- **No Programming Required:** Ready to use immediately after battery installation.
- **Direct Replacement:** Functions identically to the original LG AKB73215301 remote.
- **Compact Design:** Measures approximately 7.5 inches (19 cm) in length.
- **Sliding Cover:** A protective cover slides down to reveal additional buttons.

4. SETUP

4.1 Battery Installation

The remote control requires four (4) AAA batteries (included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert four new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Back of the remote control with the battery compartment cover. The cover is located on the lower half of the remote's back, designed to slide open for battery access.

5. OPERATION

5.1 Basic Functions

Once batteries are installed, the remote is ready for use. Point the remote directly at your LG BD530 unit and press the desired function button.



Image: Front view of the remote control, displaying the array of buttons for various functions such as power, volume, channel, navigation, and playback controls.

5.2 Sliding Cover for Additional Buttons

The remote features a sliding cover on its lower half. To access additional functions, gently slide this cover downwards to reveal the hidden buttons.

6. MAINTENANCE

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace all four AAA batteries simultaneously when the remote's performance diminishes. Do not mix old and new batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Damage:** Do not drop the remote or expose it to extreme temperatures or moisture.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly installed batteries	Replace batteries with new ones, ensuring correct polarity (+/-).
Remote range is poor	Weak batteries; Obstruction between remote and unit	Replace batteries. Ensure a clear line of sight to the LG BD530 unit.

Problem	Possible Cause	Solution
Certain buttons not working	Dust or debris under buttons; Remote damage	Clean the remote surface. If issue persists, contact support.

8. SPECIFICATIONS

Feature	Detail
Model Number	RTAKB73215301
Compatible LG Model	BD530
Replaces LG Remote	AKB73215301
Dimensions	7 x 2.5 x 1 inches (17.78 x 6.35 x 2.54 cm)
Item Weight	4.5 ounces (127.57 grams)
Batteries Required	4 x AAA (included)
Connectivity Technology	Infrared (IR)
Special Feature	No Programming Required

9. WARRANTY AND SUPPORT

For any concerns or issues with your Redi-Remote replacement remote control, please contact the manufacturer directly. Specific warranty details may vary; refer to your purchase documentation for more information.
Manufacturer: Redi-Remote

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B009H5RHYQ>

More documents and user manuals: <https://manuals.plus/>