

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control Instruction Manual for Pioneer CUVSX063, VSX452, AXD1338

Redi-Remote RTAXD1338

Redi-Remote Replacement Remote Control Instruction Manual

For Pioneer Models CUVSX063, VSX452, AXD1338

INTRODUCTION

This manual provides comprehensive instructions for the Redi-Remote replacement remote control, model RTAXD1338, designed for seamless compatibility with Pioneer audio/video receivers models CUVSX063, VSX452, and AXD1338. This remote is a direct replacement and requires no programming.

SETUP

1. Battery Installation

The remote control requires four AAA batteries (included). To install:

1. Locate the battery compartment cover on the back of the remote.
2. Slide the cover downwards to open.
3. Insert four AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Slide the cover back into place until it clicks securely.

2. Initial Use (No Programming Required)

This Redi-Remote is pre-programmed for the specified Pioneer models. No additional setup or programming is required. Once batteries are installed, the remote is ready for immediate use with your compatible Pioneer unit.

OPERATING INSTRUCTIONS

Familiarize yourself with the remote's button layout for optimal control of your Pioneer receiver. Refer to the image below for a visual guide to the buttons.



Image: Redi-Remote replacement remote control. The top section features power, volume, channel, mute, menu, recall, and number buttons. The lower section, revealed by sliding down a cover, contains advanced function buttons for disc, tape, audio modes, and power controls for receiver and CD.

Top Panel Buttons

- **PWR (Power)**: Turns the Pioneer unit on or off.
- **SLEEP**: Activates the sleep timer function.
- **TV/VIDEO**: Switches between TV and video input sources.
- **DISP (Display)**: Changes the display mode or information shown on the unit.
- **VOL +/- (Volume)**: Increases or decreases the audio volume.
- **MUTE**: Silences or restores the audio output.
- **CH +/- (Channel)**: Changes channels or navigates through menus.
- **MENU**: Accesses the unit's main menu.
- **RECALL**: Recalls the previously selected channel or setting.
- **Number Pad (0-9, 100)**: Direct input for channels or settings.
- **ENT (Enter)**: Confirms selections.

Lower Panel Buttons (Slide Down to Reveal)

The lower section of the remote contains advanced controls. Slide the cover downwards to access these buttons.

- **DISC SELECT**: Selects disc sources (e.g., CD, DVD).
- **TAPE SELECT**: Selects tape sources (e.g., Tape 1, Tape 2).
- **CD Playback Controls (||, K<, >, <, >>)**: Standard controls for CD playback (Pause, Rewind, Play, Stop, Fast Forward).
- **TAPE 1/2 Playback Controls (K<, >, <, >>)**: Standard controls for Tape 1 and Tape 2 playback (Rewind, Play, Stop, Fast Forward).
- **MPX**: Activates or deactivates multiplex sound.
- **SCAN**: Initiates a scan function for radio or disc tracks.
- **FUNCTION**: Cycles through various functions or modes.
- **MONITOR**: Selects monitor output.
- **RETURN**: Returns to the previous menu or setting.
- **SIMULATED STEREO**: Engages simulated stereo sound mode.
- **3CH LOGIC**: Activates 3-channel logic surround sound.
- **CENTER MODE**: Adjusts the center channel mode.
- **CENTER +/-**: Adjusts the level of the center channel.
- **TEST TONE**: Activates test tones for speaker setup.
- **DELAY TIME**: Adjusts audio delay time.
- **SURROUND MODE**: Cycles through various surround sound modes.
- **REAR +/-**: Adjusts the level of the rear channels.
- **RCVR POWER**: Controls the power of the receiver.
- **CD POWER**: Controls the power of a connected CD player.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's response becomes sluggish or inconsistent. Always replace all four AAA batteries simultaneously with new ones. Do not mix old and new batteries, or different types of batteries.

Cleaning

Wipe the remote control with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are installed correctly with proper polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote and the Pioneer unit's infrared sensor.
 - Confirm the remote is pointed directly at the unit.
- **Limited functionality:**
 - Verify that your Pioneer unit is one of the compatible models (CUVSX063, VSX452, AXD1338).
 - Ensure the sliding cover is fully open to access all advanced function buttons.

SPECIFICATIONS

Model Number	RTAXD1338
Compatible Pioneer Models	CUVSX063, VSX452, AXD1338
Dimensions	7 x 2.5 x 1 inches
Item Weight	4.5 ounces
Batteries Required	4 x AAA (included)
Connectivity Technology	Infrared (IR)
Special Feature	No Programming Required

SUPPORT

For further assistance or inquiries regarding your Redi-Remote replacement control, please refer to the seller's contact information provided at the point of purchase. This remote is designed for direct functionality and does not require programming.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B009H5RWBO>

More documents and user manuals: **<https://manuals.plus/>**