

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control User Manual for GE TV Models 13GP236F01, 20GT604, 20GT456, 25GC703, 09GP103

Redi-Remote RT250099

Redi-Remote Replacement Remote Control User Manual

COMPATIBLE WITH GE TV MODELS: 13GP236F01, 20GT604, 20GT456, 25GC703, 09GP103,
AND OTHERS

Brand: Redi-Remote

INTRODUCTION

This manual provides instructions for the Redi-Remote replacement remote control, designed for seamless operation with various GE television models. This remote is a custom-built replacement and is not an original GE product. It is engineered to perform all functions of the specific GE units it is designed to control without requiring any programming.

PRODUCT OVERVIEW AND BUTTON LAYOUT

The Redi-Remote features a standard layout for easy navigation and control of your GE television. A sliding cover conceals additional functions.



Image 1: Front view of the Redi-Remote replacement remote control. The top section shows primary controls like Power, Volume, Channel, Mute, and number buttons. The lower section, initially covered, reveals additional function buttons when slid down.

Key Button Functions:

- **PWR (Power):** Turns the television on or off.
- **TV/VIDEO:** Switches between TV and video input sources.
- **CH+ / CH-:** Changes channels up or down.
- **VOL+ / VOL-:** Adjusts volume up or down.
- **MUTE:** Silences the television audio.
- **MENU:** Accesses the television's on-screen menu.
- **DISP (Display):** Shows current channel information or other on-screen display.
- **RECALL:** Switches to the previously viewed channel.
- **Number Buttons (0-9, 100):** Directly enters channel numbers.
- **ENT (Enter):** Confirms channel selection or menu options.
- **SLEEP:** Activates the sleep timer function (if supported by TV).

Hidden Functions (Slide Down Cover):

The lower half of the remote has a cover that slides down to reveal additional buttons. These buttons provide access to advanced functions such as ON/OFF (for specific components), LCV, FM, RESET, CLEAR, VIDEO, and SETUP, depending on your GE television model's capabilities.

SETUP

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert four (4) AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Note: This Redi-Remote control does not require any programming. It is pre-configured to work with the specified GE television models immediately after battery installation. It cannot be programmed to control auxiliary devices.

OPERATING INSTRUCTIONS

To operate your GE television using the Redi-Remote, point the remote directly at the television's infrared sensor.

- **Power On/Off:** Press the **PWR** button once to turn the television on or off.
- **Changing Channels:** Use the **CH+** or **CH-** buttons to cycle through channels. Alternatively, use the number buttons (0-9, 100) to directly enter a channel number, then press **ENT** if required by your TV model.
- **Adjusting Volume:** Press **VOL+** to increase volume or **VOL-** to decrease volume.
- **Muting Audio:** Press the **MUTE** button to temporarily silence the audio. Press again to restore sound.
- **Selecting Input Source:** Press the **TV/VIDEO** button to switch between different video input sources (e.g., TV, AV1, Component).
- **Accessing Menus:** Press the **MENU** button to bring up the television's on-screen menu. Use the directional buttons (often integrated with CH/VOL) to navigate and **ENT** to select.

- **Using Hidden Functions:** Slide down the cover at the bottom of the remote to access additional buttons for specific functions like LCV, FM, RESET, CLEAR, VIDEO, and SETUP. Refer to your GE television's original manual for detailed usage of these advanced functions.

MAINTENANCE

Battery Replacement:

When the remote control's performance degrades or buttons become unresponsive, it is likely time to replace the batteries. Follow the battery installation steps outlined in the "Setup" section. Always replace all four AAA batteries simultaneously with new ones.

Cleaning:

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or excessive moisture, as this can damage the remote's electronics.

TROUBLESHOOTING

- **Remote is not working or unresponsive:**
 - Ensure fresh AAA batteries are correctly installed with proper polarity.
 - Check for any obstructions between the remote control and the television's infrared sensor.
 - Verify that you are pointing the remote directly at the television.
 - Confirm that the remote is compatible with your specific GE television model (refer to the list in the header).
- **Certain buttons do not function:**
 - Some advanced functions may not be supported by all GE television models. Refer to your television's original manual.
 - Ensure the sliding cover is correctly positioned to access the desired buttons.
 - Clean the remote control, as dirt or debris might be interfering with button contacts.

SPECIFICATIONS

Feature	Detail
Brand	Redi-Remote
Model Number	RT250099
Product Dimensions	7 x 2.5 x 1 inches
Item Weight	4.5 ounces
Batteries Required	4 AAA batteries (included)
Connectivity Technology	Infrared
Programming	No programming required
Supported Devices	1 (Television)

SUPPORT

For any concerns or issues with your Redi-Remote replacement control after purchase, please contact the seller directly for assistance. This remote is designed to be fully functional out of the box for the specified GE models.