

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control Instruction Manual for AUDIOVOX CD2773 (Model RTCD2773)

Redi-Remote RTCD2773

Redi-Remote Replacement Remote Control Instruction Manual

For AUDIOVOX CD2773 Units (Model: RTCD2773)

1. INTRODUCTION

This manual provides detailed instructions for the Redi-Remote replacement remote control, specifically designed for use with AUDIOVOX CD2773 units. This remote is a custom-built replacement and is pre-programmed for immediate compatibility with the specified AUDIOVOX models. It is not an original AUDIOVOX remote control.

2. SETUP

2.1 Battery Installation

The remote control requires 4 AAA batteries (included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert 4 AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

2.2 Initial Use

This Redi-Remote is pre-programmed for the AUDIOVOX CD2773. No additional programming or setup is required. Once batteries are installed, the remote is ready for use with your compatible AUDIOVOX unit.

3. OPERATING INSTRUCTIONS

3.1 Remote Control Layout

The remote control features a primary set of buttons for common functions and a secondary set located under a sliding

cover for additional controls.



Image: Front view of the Redi-Remote replacement remote control for AUDIOVOX CD2773. The upper section shows power, channel, volume, mute, and number buttons. The lower section, initially covered, reveals additional function buttons for audio and disc control.

3.2 Button Functions

Below is a description of the buttons and their primary functions:

Upper Section Buttons:

- **PWR (Power):** Turns the AUDIOVOX unit on or off.
- **TV/VIDEO:** Switches between TV and video input sources.
- **DISP (Display):** Toggles display information on the unit's screen.
- **SLEEP:** Activates or adjusts the sleep timer function.
- **CH+ / CH- (Channel Up/Down):** Changes channels or navigates menus.
- **VOL+ / VOL- (Volume Up/Down):** Adjusts the audio volume level.
- **MUTE:** Silences or restores the audio output.
- **MENU:** Accesses the main menu of the unit.
- **RECALL:** Recalls the previously selected channel or function.
- **Number Buttons (0-9, 100):** Directly input channel numbers or menu selections.
- **ENT (Enter):** Confirms selections or inputs.

Lower Section Buttons (Under Sliding Cover):

To access these buttons, slide the lower cover downwards. This section contains controls primarily for audio and disc playback functions.

- **SLEEP:** (Repeated function) Activates or adjusts the sleep timer.
- **TIMER:** Sets or adjusts timer functions.
- **MEMORY:** Stores or recalls settings.
- **BAND:** Selects radio bands (e.g., AM/FM).
- **TUNING+ / TUNING-:** Manually tunes radio frequencies or navigates tracks.
- **RANDOM:** Enables random playback (shuffle) for discs.
- **REPEAT:** Repeats the current track or disc.
- **X-BASS:** Enhances bass output.
- **FUNCTION:** Cycles through various unit functions or modes.
- **STEREO WIDE:** Adjusts stereo sound field.
- **HOUR / MIN:** Adjusts hour and minute settings for clock or timer.
- **SKIP / PRESET:** Skips tracks forward/backward or navigates radio presets.
- **OPEN/CLOSE:** Opens or closes the disc tray.
- **DISC SKIP:** Skips to the next disc in a multi-disc changer.
- **Play/Pause (▶ / ||):** Starts or pauses disc playback.
- **Stop (■):** Stops disc playback.
- **Fast Forward (▶ ▶):** Fast forwards through disc content.
- **Rewind (◀ ◀):** Rewinds through disc content.

4. MAINTENANCE

4.1 Cleaning

To maintain the remote control's appearance and functionality:

- Wipe the remote with a soft, dry cloth.

- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote's performance diminishes or it stops responding. Always replace all batteries at the same time with new ones of the same type (AAA). Do not mix old and new batteries or different types of batteries.

5. TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common problems and solutions:

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote and the AUDIOVOX unit's infrared sensor.
 - Confirm the remote is pointed directly at the unit.
- **Limited range or intermittent response:**
 - Batteries may be low; replace them.
 - Ensure the remote's infrared emitter and the unit's sensor are clean and free of dust.
- **Specific buttons not working:**
 - Check for physical damage or debris lodged under the button.
 - If only lower section buttons are affected, ensure the sliding cover is fully open.

If problems persist after trying these steps, please refer to the Support Information section.

6. SPECIFICATIONS

Feature	Detail
Model Number	RTCD2773
Product Dimensions	7 x 2.5 x 1 inches
Item Weight	4.5 ounces
Batteries Required	4 AAA batteries (included)
Connectivity Technology	Infrared
Compatible Devices	AUDIOVOX CD2773 Stereo System
Max Number of Supported Devices	1
Special Feature	Ergonomic design

7. SUPPORT INFORMATION

For any concerns or issues with your Redi-Remote replacement remote control after purchase, please contact the seller

directly for assistance. Specific warranty details are not provided in this manual; please refer to your purchase documentation or contact the seller for warranty information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question