

Redi-Remote RT274398

Redi-Remote Replacement Remote Control User Manual

Model: RT274398 for RCA 274398, RS2130I

INTRODUCTION

This manual provides detailed instructions for the Redi-Remote Replacement Remote Control, model RT274398. This remote is specifically designed as a custom replacement for RCA units 274398 and RS2130I. It is engineered to perform all functions of the original remote for these specific models without requiring any programming.

PRODUCT OVERVIEW

The Redi-Remote RT274398 is a dedicated replacement remote control. It is not an original RCA product but a custom-built unit by Redi-Remote to ensure full compatibility with the specified RCA models. This remote is designed for straightforward use, requiring no complex setup.

- **Dedicated Functionality:** This remote is designed to control only the specific RCA unit it is intended for. It cannot be programmed to control auxiliary devices.
- **Dimensions:** The remote measures approximately 7.5 inches (19 cm) in length, 2.25 inches (5.7 cm) in width, and 0.75 inches (1.9 cm) in thickness.
- **Sliding Cover:** A protective cover is present over the lower half of the remote. This cover slides down to reveal additional buttons for extended functionality.
- **No Advanced Features:** This remote is not equipped with laser pointers or LED lights.



Image showing the Redi-Remote Replacement Remote Control, highlighting its design and button layout.

SETUP

The Redi-Remote RT274398 is designed for immediate use with compatible RCA units without any programming steps.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert four (4) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. *Note: Batteries are included with the remote.*
4. Close the battery compartment cover securely.

First Use

Once batteries are installed, the remote is ready to operate your RCA 274398 or RS2130I unit. No additional programming or syncing is required.

OPERATING INSTRUCTIONS

To operate your RCA unit with the Redi-Remote RT274398, ensure there is a clear line of sight between the remote's infrared emitter and the RCA unit's receiver.

1. **Point the Remote:** Aim the front of the remote control directly at your RCA unit.
2. **Press Buttons:** Press the desired function button (e.g., Power, Volume Up/Down, Channel Up/Down, Play, Pause, etc.).
3. **Access Hidden Buttons:** If the desired button is not visible, gently slide down the cover located on the lower half of the remote to reveal additional controls.

The remote will replicate the functions of your original RCA remote for the compatible models.

MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, solvents, or abrasive materials, as these can damage the remote's surface or internal components.
- **Battery Replacement:** If the remote's response becomes sluggish or inconsistent, replace all four AAA batteries with new ones. Do not mix old and new batteries, or different types of batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal circuitry.

TROUBLESHOOTING

If you encounter issues with your Redi-Remote, refer to the following troubleshooting steps:

- **Remote Not Responding:**

- Ensure batteries are correctly installed with proper polarity.
- Replace old batteries with fresh AAA batteries.
- Check for any obstructions between the remote and the RCA unit's infrared receiver.
- Ensure you are within the effective operating range and pointing the remote directly at the unit.

• **Limited Functionality:**

- Confirm that your RCA unit is one of the compatible models (274398 or RS2130I).
- Remember that this remote is designed only for the specified RCA unit and cannot control other devices or auxiliary functions.

• **Buttons Not Working:**

- Check if the sliding cover is fully open to reveal all buttons.
- Ensure the remote is clean and free from debris that might obstruct button presses.

If issues persist after following these steps, please refer to the support information below.

SPECIFICATIONS

Feature	Specification
Model Number	RT274398
Compatible RCA Models	274398, RS2130I
Product Dimensions	7 x 2.5 x 1 inches (17.78 x 6.35 x 2.54 cm)
Item Weight	4.5 ounces (127.57 grams)
Batteries Required	4 AAA batteries (included)
Special Feature	No Programming Required
Max Number of Supported Devices	1
Compatible Devices	Stereo System
Connectivity Technology	Infrared

WARRANTY AND SUPPORT

This Redi-Remote Replacement Remote Control is designed for reliable performance. While specific warranty details are not provided in this manual, if you have any concerns or require assistance with your remote control after purchase, please contact the seller directly for support. They can provide guidance and resolve any issues you may encounter.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B009HWDWQQ>

More documents and user manuals: <https://manuals.plus/>