

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control for Jensen VM9021TS Main Instruction Manual

Redi-Remote RT3070127

Redi-Remote Replacement Remote Control for Jensen VM9021TS Main

Model: RT3070127

INTRODUCTION

This instruction manual provides essential information for the setup, operation, maintenance, and troubleshooting of your Redi-Remote replacement remote control. This remote is specifically designed to be compatible with Jensen VM9021TS Main units, model number 3070127. It is a custom-built replacement and not an original Jensen product.

PRODUCT OVERVIEW

The Redi-Remote replacement control offers full functionality for your Jensen VM9021TS Main unit. It is designed for ease of use and immediate operation without complex programming.

- Redi-Remotes are designed to control the specific unit they are intended for and cannot be programmed for auxiliary devices.
- The remote measures approximately 7.5 inches (L) x 2.25 inches (W) x 0.75 inches (H).
- This remote does not feature laser pointers or LED lights.
- A sliding cover conceals the lower half of the buttons, which can be revealed by sliding it down.



Image of the Redi-Remote replacement control, showing its ergonomic design and button layout.

Your Redi-Remote is designed to work immediately with your Jensen VM9021TS Main unit without any programming. Simply install the batteries to begin use.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert four (4) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Four AAA batteries are included with your remote.
4. Replace the battery compartment cover, ensuring it clicks securely into place.

The remote is now ready for use.

OPERATING INSTRUCTIONS

To operate your Jensen VM9021TS Main unit with the Redi-Remote, point the remote directly at the unit and press the desired function button.

Basic Operation

- Ensure there are no obstructions between the remote control and the Jensen unit.
- Press the 'Power' button to turn the unit on or off.
- Use the 'Volume Up' and 'Volume Down' buttons to adjust the audio level.
- Navigate through menus and selections using the directional arrow buttons and the 'Enter' or 'OK' button.
- For additional functions, slide down the cover on the lower half of the remote to access more buttons.

Refer to your Jensen VM9021TS Main unit's original manual for specific functions and their corresponding buttons.

MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your remote control.

Cleaning

- Wipe the remote control with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the remote's surface or internal components.

Battery Replacement

- When the remote's range decreases or buttons become unresponsive, it is likely time to replace the batteries.
- Always replace all four (4) AAA batteries at the same time. Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries according to local regulations.

TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly installed batteries	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote has short range	Weak batteries	Replace batteries with new AAA batteries.
Remote not controlling unit	Obstruction between remote and unit; remote not pointed correctly	Ensure a clear line of sight to the Jensen unit. Point the remote directly at the unit.
Some buttons not working	Sliding cover is not fully open	Slide down the cover on the lower half of the remote to reveal all buttons.

SPECIFICATIONS

Feature	Detail
Brand	Redi-Remote
Model Number	RT3070127
Compatible Devices	Jensen VM9021TS Main (3070127) Car DVD Receiver
Connectivity Technology	Infrared
Special Feature	Ergonomic design
Maximum Number of Supported Devices	1
Button Quantity	58
Controller Type	Button Control
Maximum Range	20 Feet
Batteries Required	4 AAA batteries (included)
Item Weight	4.5 Ounces
Item Dimensions (L x W x H)	7.5" x 2.25" x 0.75"

WARRANTY AND SUPPORT

For specific warranty information regarding your Redi-Remote replacement control, please refer to the documentation provided at the time of purchase or contact the seller directly. As a custom-built replacement, warranty terms may vary.

Customer Support

If you encounter any issues or have questions about your Redi-Remote after purchase, it is recommended to contact the seller or manufacturer for assistance. They can provide specialized support for your specific replacement remote control.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B009HWEE22>

More documents and user manuals: <https://manuals.plus/>