

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Replacement Remote Control for MAGNAVOX VR9720, VR9740AT01, 483521917076, VR9722AT01 User Manual

Redi-Remote RT483521917076

Redi-Remote Replacement Remote Control User Manual

Model: RT483521917076

INTRODUCTION

This manual provides instructions for the Redi-Remote replacement remote control, designed for use with various MAGNAVOX VCR models. This remote is a custom-built replacement and is not an original MAGNAVOX product. It is pre-programmed to control the specific MAGNAVOX unit it is intended for and does not require additional programming.

The remote measures approximately 7.5 inches in length, 2.25 inches in width, and 0.75 inches in thickness. It operates using infrared technology and requires 4 AAA batteries, which are included.

Note: This remote cannot be programmed to control auxiliary devices and does not feature laser pointers or LED lights.

PRODUCT OVERVIEW



Image: Front view of the Redi-Remote replacement remote control. The remote is dark gray with black and blue buttons. The top section features power, channel, volume, mute, menu, display, and recall buttons, along with a numeric keypad. The lower section, initially covered by a sliding panel, reveals additional VCR function buttons such as play, record, fast forward, rewind, pause, and tracking controls.

The remote control features a sliding cover on its lower half. This cover conceals additional function buttons, which are revealed by sliding the cover downwards.

Compatible MAGNAVOX Models:

- VR9720
- VR9740AT01
- 483521917076
- VR9722AT01
- VR9725AT01
- VSQS0673
- VR1225A
- 483521917077
- VSQS0667
- VC4020AT01
- VT3020AT01
- 483521917078
- VR9720AT
- VR9750AT01
- 483521917075
- VR9730AT01
- VR1260AT01
- VR9745AT01
- VSQS0674
- VR9720AT01
- VSQS0668

SETUP

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert 4 AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

This remote control is pre-programmed for the specified MAGNAVOX models and does not require any additional setup or programming steps. Once batteries are installed, it is ready for use.

OPERATING INSTRUCTIONS

The remote control is divided into two main sections: the upper primary control section and the lower VCR function section, accessible by sliding down the cover.

Upper Section Buttons:

- **PWR (Power):** Turns the connected MAGNAVOX unit on or off.
- **SLEEP:** Activates the sleep timer function (if supported by the unit).
- **TV/VIDEO:** Switches between TV and Video input modes.
- **DISP (Display):** Shows on-screen display information.
- **VOL +/- (Volume):** Adjusts the audio volume up or down.
- **MUTE:** Mutes or unmutes the audio.
- **CH +/- (Channel):** Changes the channel up or down.
- **MENU:** Accesses the unit's main menu.
- **RECALL:** Recalls the previously viewed channel.
- **Numeric Keypad (0-9, 100, ENT):** Used for direct channel entry or inputting numerical values.

Lower Section Buttons (Slide Down to Reveal):

Slide the bottom cover downwards to access these VCR-specific functions.

- **VCR/TV:** Toggles control between VCR and TV modes (if applicable).
- **CH MEMORY:** Manages channel memory settings.
- **ADD/DEL:** Adds or deletes channels.
- **COUNTER:** Displays the tape counter.
- **TIME:** Displays the current time or recording time.
- **CHANNEL:** Direct channel access (may duplicate upper section).
- **CLEAR:** Clears current input or settings.
- **PROG (Program):** Accesses programming functions.
- **COUNTER RESET:** Resets the tape counter.
- **COUNTER MEMORY:** Stores or recalls counter memory.
- **STANDBY:** Puts the unit in standby mode.
- **OTR (One Touch Recording):** Initiates immediate recording.
- **REC (Record):** Starts recording.
- **STOP:** Stops playback or recording.
- **PLAY:** Starts tape playback.
- **REW (Rewind):** Rewinds the tape.
- **FF (Fast Forward):** Fast forwards the tape.
- **PAUSE/STILL:** Pauses playback or creates a still frame.
- **F.ADV (Frame Advance):** Advances the tape frame by frame.
- **X2:** Activates 2x speed playback.
- **SPEED:** Adjusts playback speed.
- **SLOW:** Activates slow motion playback.
- **SLOW - / SLOW +:** Adjusts slow motion speed.
- **TRACKING:** Adjusts video tracking for optimal picture quality.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops functioning. Always replace all 4 AAA batteries at the same time.

- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Environment:** Avoid exposing the remote to extreme temperatures, direct sunlight, or high humidity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries. Obstruction between remote and unit. Remote out of range.	Check battery polarity and replace batteries. Ensure clear line of sight to the unit's infrared receiver. Move closer to the unit.
Some buttons not working.	Specific button malfunction. Unit not in correct mode (e.g., VCR/TV).	Ensure the remote's lower cover is fully slid down to access all buttons. Verify the MAGNAVOX unit is in the correct operating mode.
Remote controls other devices.	This remote is designed for specific MAGNAVOX VCRs and cannot be programmed for other devices.	This is not a universal remote. It is intended only for the listed MAGNAVOX VCR models.

SPECIFICATIONS

- **Brand:** Redi-Remote
- **Model Number:** RT483521917076
- **Product Dimensions:** 7 x 2.5 x 1 inches (approximate)
- **Item Weight:** 4.5 ounces
- **Batteries:** 4 AAA batteries (included)
- **Connectivity Technology:** Infrared
- **Compatible Devices:** MAGNAVOX VCRs (specific models listed in Introduction)
- **Special Feature:** No Programming Needed
- **Max Number of Supported Devices:** 1

WARRANTY AND SUPPORT

For any concerns with the remote after purchase, please contact the seller directly. Redi-Remote products are designed to function as direct replacements for the specified original equipment.

For further assistance or inquiries, refer to the contact information provided by your retailer or the Redi-Remote official channels.

© 2023 Redi-Remote. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question