

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control Instruction Manual for Admiral Models 64532340, JSA12670, JSJ12687, JSA12677, 64565222

Redi-Remote RT64565222

Redi-Remote Replacement Remote Control Instruction Manual

For Admiral Models: 64532340, JSA12670, JSJ12687, JSA12677, 64565222

1. INTRODUCTION

This manual provides instructions for the Redi-Remote replacement remote control, designed for specific Admiral television models. This remote is a custom-built replacement and is not an original Admiral product. It is pre-programmed to be compatible with the listed Admiral units, requiring no additional programming for basic functionality.

Compatible Admiral Models:

- 64532340
- JSA12670
- JSJ12687
- JSA12677
- 64565222
- 12687
- 614205102

2. SETUP

2.1 Battery Installation

The remote control requires four (4) AAA batteries for operation. These batteries are typically included with your purchase.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert four AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

2.2 Initial Use

This Redi-Remote is designed to function immediately with compatible Admiral models without requiring any programming. Simply point the remote at your Admiral television and begin operation.

3. OPERATING INSTRUCTIONS

The remote control features a standard layout for easy navigation of your Admiral television. A sliding cover conceals additional functions located on the lower half of the remote.



Image 1: Front view of the Redi-Remote replacement remote control. The top section shows primary controls like Power, Volume, Channel, and Mute. The lower section, visible after sliding down the cover, reveals additional function buttons.

3.1 Top Section Buttons

- **PWR (Power):** Turns the television on or off.
- **SLEEP:** Activates the sleep timer function.
- **TV/VIDEO:** Switches between TV and video input sources.
- **DISP (Display):** Shows on-screen display information.
- **VOL + / - (Volume):** Increases or decreases the volume level.
- **CH + / - (Channel):** Changes the television channel up or down.
- **MUTE:** Silences or restores the television audio.
- **MENU:** Accesses the television's main menu.
- **RECALL:** Switches to the previously viewed channel.
- **Number Pad (0-9, 100, ENT):** Used for direct channel entry. Press 'ENT' after entering a two or three-digit channel number.

3.2 Lower Section Buttons (Slide Down Cover)

To access these functions, slide the lower cover of the remote control downwards. The cover is marked with "SLIDE DOWN".

- **MAIN/SAP:** Toggles between main audio and Secondary Audio Program (SAP).
- **PROG (Program):** Accesses program setup or guide functions.
- **AUTO:** Initiates auto-programming or auto-scan for channels.
- **ADD/DEL:** Adds or deletes channels from the channel list.
- **Q.REV (Quick Reverse):** For quick review of recorded content or previous scenes.
- **CLK/TIM (Clock/Timer):** Sets the clock or timer functions.
- **SET:** Confirms settings or enters setup modes.
- **TV/CAP/TEXT:** Toggles between TV, Closed Captioning, or Teletext modes.
- **CH 1/2:** Switches between primary and secondary channels or functions.
- **PICTURE:** Adjusts picture settings.
- **MUTE/RESET:** Mutes audio or resets certain settings.
- Additional unmarked buttons are typically for specific functions related to picture adjustments, sound modes, or other advanced television features. Refer to your Admiral television's original manual for their specific uses.

4. MAINTENANCE

4.1 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops functioning. Always replace all four AAA batteries simultaneously with new ones. Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or excessive moisture, as this can damage the remote's electronics.

5. TROUBLESHOOTING

- **Remote not responding:**

- Ensure there is a clear line of sight between the remote and the television's infrared sensor.
- Check battery orientation and ensure they are fresh. Replace if necessary.
- Verify that the remote is pointed directly at the television.
- **Specific buttons not working:**
 - Clean the remote surface, especially around the unresponsive buttons, to remove any debris.
 - Ensure the sliding cover is fully open if you are trying to access lower-section buttons.
- **Remote controls other devices:**
 - This Redi-Remote is designed specifically for the listed Admiral television models and cannot be programmed to control auxiliary devices. If it is affecting other devices, ensure it is only being used with the intended Admiral television.

If issues persist after following these troubleshooting steps, please refer to the support information in Section 7.

6. SPECIFICATIONS

Feature	Detail
Brand	Redi-Remote
Model Number	RT64565222
Product Dimensions	7 x 2.5 x 1 inches
Item Weight	4.5 ounces
Batteries Required	4 AAA batteries (included)
Connectivity Technology	Infrared
Max Number of Supported Devices	1 (Specific Admiral TV models)
Special Feature	Ergonomic design

7. SUPPORT INFORMATION

For any concerns or issues with your Redi-Remote replacement remote control after purchase, please contact the seller directly for assistance. This ensures you receive prompt and accurate support tailored to your specific product.

Note: Redi-Remotes are not equipped with laser pointers or LED lights.