

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control User Manual for SANYO Projectors (Models PLVZ5, CXVT, 9450871451, PLVZ60)

Redi-Remote RT9450871451

Redi-Remote Replacement Remote Control User Manual

For SANYO Projector Models: PLVZ5, CXVT, 9450871451, PLVZ60

INTRODUCTION

This manual provides instructions for the Redi-Remote replacement remote control, designed for use with specific SANYO projector models including PLVZ5, CXVT, 9450871451, and PLVZ60. This remote is pre-programmed and requires no additional setup for compatible devices. It is intended to replicate the functionality of the original SANYO remote control number 9450871451.

SETUP

1. Battery Installation

The remote control requires four (4) AAA batteries, which are included. To install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert four AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

2. Initial Use

This Redi-Remote is pre-programmed for the specified SANYO projector models. No additional programming or code entry is required. Once batteries are installed, the remote is ready for immediate use with your compatible SANYO projector.

OPERATING INSTRUCTIONS

The remote control features a primary set of buttons for common functions and a hidden panel for advanced projector controls. To access the advanced controls, slide the lower half of the remote downwards.



Image: Redi-Remote replacement remote control. The top section shows power, volume, channel, and numeric buttons. The middle section, revealed by sliding down, contains projector-specific controls like LAMP, IMAGE, CONTRAST, IRIS, and input selections. The bottom section indicates 'SLIDE DOWN' to reveal the hidden buttons.

Primary Button Functions (Top Section)

- **PWR (Power):** Turns the projector on or off.
- **SLEEP:** Activates the sleep timer function (if supported by the projector).
- **TV/VIDEO:** Switches between TV and Video input modes.
- **DISP (Display):** Adjusts display settings or information.
- **CH+ / CH- (Channel Up/Down):** Navigates through channels or menu options.
- **VOL+ / VOL- (Volume Up/Down):** Adjusts the audio volume.
- **MUTE:** Mutes or unmutes the audio.
- **MENU:** Opens or closes the projector's on-screen menu.
- **RECALL:** Recalls the previous channel or setting.
- **Numeric Buttons (0-9, 100):** Directly enters channel numbers or menu selections.
- **ENT (Enter):** Confirms a selection or input.

Advanced Projector Functions (Hidden Section)

To access these buttons, slide the lower panel of the remote control downwards.

- **LAMP:** Controls lamp settings or information.
- **NO SHOW:** Temporarily blanks the projector screen.
- **FREEZE:** Pauses the current image on the screen.
- **RESET:** Resets certain projector settings.
- **SCREEN:** Adjusts screen mode or aspect ratio.
- **IMAGE:** Accesses image adjustment menus.
- **BRIGHT:** Adjusts image brightness.
- **CONTRAST:** Adjusts image contrast.
- **COLOR:** Adjusts color settings.
- **IRIS:** Controls the projector's iris settings.
- **PRESET:** Selects predefined image presets.
- **USER:** Accesses user-defined settings.
- **VIDEO:** Selects video input.
- **C1/C2:** Selects specific component video inputs.
- **H1/H2:** Selects specific HDMI inputs (if applicable).
- **S-VIDEO:** Selects S-Video input.
- **PC:** Selects PC input.
- **INFO:** Displays information about the current input or projector status.
- **Directional Arrows (Up, Down, Left, Right) & OK:** Navigates menus and confirms selections.

MAINTENANCE

Cleaning the Remote Control

To maintain optimal performance and appearance:

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals, solvents, or abrasive cleaning materials, as these can damage the remote's surface or internal components.

Battery Replacement

Replace the batteries when the remote control becomes unresponsive or its range decreases significantly. Always replace all four AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control is not working.	Dead or incorrectly installed batteries.	Check battery orientation. Replace all four AAA batteries with new ones.
Remote control range is limited.	Weak batteries. Obstruction between remote and projector.	Replace batteries. Ensure a clear line of sight to the projector's IR receiver.
Certain buttons do not respond.	Projector does not support the function. Remote malfunction.	Verify your SANYO projector model supports the specific function. If other buttons work, contact support.
Remote does not control auxiliary devices.	This remote is designed only for the specified SANYO projectors.	This remote cannot be programmed to control other devices.

SPECIFICATIONS

- **Model Number:** RT9450871451
- **Compatible SANYO Projector Models:** PLVZ5, CXVT, 9450871451, PLVZ60
- **Dimensions:** Approximately 7 x 2.5 x 1 inches (17.8 x 6.4 x 2.5 cm)
- **Item Weight:** Approximately 4.5 ounces (127.6 grams)
- **Batteries:** 4 x AAA (included)
- **Connectivity Technology:** Infrared (IR)
- **Special Features:** No programming required, pre-programmed for specific SANYO models.
- **Limitations:** Not equipped with laser pointers or LED lights. Cannot be programmed to control auxiliary devices.

WARRANTY AND SUPPORT

For any concerns or issues with your Redi-Remote replacement remote control after purchase, please contact Redi-Remote directly for assistance. Refer to your purchase documentation for specific warranty details and contact information.

