



Manuals.plus /

› Case Logic /

› Case Logic 14.1-Inch Slim Laptop and iPad Case (Model AUA-314ANTH) User Manual

Case Logic AUA-314ANTH

Case Logic 14.1-Inch Slim Laptop and iPad Case (Model AUA-314ANTH) User Manual

Model: AUA-314ANTH | Brand: Case Logic

1. INTRODUCTION

This manual provides essential information for the proper use and care of your Case Logic 14.1-Inch Slim Laptop and iPad Case, model AUA-314ANTH. Designed for practicality and protection, this slim case offers dedicated compartments for your laptop, iPad, and essential accessories, making it ideal for daily commutes or travel.

2. KEY FEATURES

- **Dedicated Device Protection:** Separate, protective pockets are designed for a laptop up to 14.1 inches and an iPad, ensuring both devices are securely stored and protected from scratches.
- **Organized Storage:** Files remain crisp and unbent in their designated pocket, separated from electronics. A front pocket neatly stores bulky power cords at the bottom, keeping them out of the way.
- **Quick Access Pocket:** A zippered front pocket provides secure yet easily accessible storage for your smartphone or other small essentials.
- **Accessory Panel:** The front pocket includes an organizer panel with dedicated slots for an external hard drive, pens, and other small accessories.
- **Comfortable Portability:** Features a comfortable, removable shoulder strap and a padded handle for versatile carrying options.
- **Travel-Friendly Design:** A luggage strap allows for secure attachment of the slim case to most rolling luggage handles, simplifying travel.
- **Compact Dimensions:** Designed to fit devices up to 13.5 x 1.2 x 9.6 inches, maintaining a slim profile.



Figure 1: Front view of the Case Logic Slim Case, highlighting its sleek design and front pocket.

3. SETUP

1. **Unpack the Case:** Remove the case from its packaging.
2. **Attach Shoulder Strap (Optional):** Locate the removable shoulder strap. Attach the swivel hooks on each end of the strap to the D-rings located on the sides of the case. Adjust the strap length for comfortable carrying.
3. **Prepare Compartments:** Open all zippered compartments to familiarize yourself with the internal layout and pockets.



Figure 2: Side view of the case showing the attachment points for the removable shoulder strap.

4. OPERATING INSTRUCTIONS

4.1. Inserting Your Laptop and iPad

1. **Open Main Compartment:** Unzip the main compartment of the case.
2. **Insert Laptop:** Carefully slide your laptop (up to 14.1 inches) into the larger padded sleeve. Ensure it sits snugly within the compartment.
3. **Insert iPad:** Place your iPad into the dedicated, smaller padded sleeve.
4. **Secure Devices:** Close the main compartment zipper completely.



Figure 3: Interior view showing a laptop and iPad securely placed in their respective padded sleeves.

4.2. Organizing Accessories

- **Front Zippered Pocket:** Use this pocket for quick access items like your smartphone, keys, or wallet.



Figure 4: Front pocket designed for easy access to a smartphone.

- **Main Front Compartment:** This larger front compartment features an organizer panel. Store pens, cards, and an external hard drive in the designated slots. The bottom section is ideal for power

adapters and charging cables.



Figure 5: The main front compartment showing space for a power adapter and other accessories.

- **Document Pocket:** Utilize the dedicated pocket within the main compartment to keep documents and files flat and protected.



Figure 6: A separate compartment for keeping documents flat and secure.

4.3. Attaching to Rolling Luggage

For convenient travel, slide the luggage strap located on the back of the case over the handle of your rolling luggage. This secures the case on top of your suitcase, allowing for easier transport.



Figure 7: The luggage strap on the back of the case, designed to slide over a rolling luggage handle.

5. MAINTENANCE

- **Cleaning:** Wipe the exterior of the case with a damp cloth and mild soap. Do not use harsh chemicals or abrasive cleaners. Allow to air dry completely.
- **Zipper Care:** Periodically check zippers for any debris and clean as needed. Lubricate with a zipper lubricant if they become stiff.

- **Storage:** Store the case in a cool, dry place away from direct sunlight when not in use.

6. TROUBLESHOOTING

Issue	Possible Cause	Solution
Zipper sticking or difficult to close.	Debris in zipper teeth, lack of lubrication.	Clean zipper teeth with a small brush. Apply a small amount of zipper lubricant or wax.
Devices do not fit snugly.	Device dimensions exceed case specifications.	Ensure your devices (laptop up to 14.1 inches, iPad) fit within the specified dimensions (13.5 x 1.2 x 9.6 inches).
Shoulder strap detaches.	Improper attachment or excessive force.	Verify swivel hooks are securely fastened to D-rings. Avoid overloading the case.

7. SPECIFICATIONS

Feature	Detail
Brand	Case Logic
Model Number	AUA-314ANTH
Color	Anthracite (Grey)
Item Weight	14.7 ounces
Product Dimensions (LxWxH)	14.6 x 2.8 x 11.4 inches
Max Device Dimensions (Laptop/iPad)	13.5 x 1.2 x 9.6 inches
Material	Durable fabric
Shoulder Strap	Removable, adjustable
Luggage Pass-Through	Yes

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Case Logic website or contact their customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

Note: Specific warranty terms may vary by region and retailer.