

OXO 1351680UK

OXO Small Straight Salad Spinner Instruction Manual

Model: 1351680UK | Brand: OXO

INTRODUCTION

Thank you for purchasing the OXO Small Straight Salad Spinner. This product is designed to efficiently dry washed greens and vegetables, enhancing their crispness and allowing dressing to adhere better. Its user-friendly design features a one-handed pump mechanism and a patented brake button for immediate stopping. The clear lid allows you to monitor the drying process, and the components are easily detachable for thorough cleaning. This manual provides essential information for safe and effective use.

SAFETY INFORMATION

- Read all instructions before use.
- Keep out of reach of children.
- Do not use in a microwave oven.
- Avoid using abrasive cleaners or scourers, as they may damage the surface.
- Ensure the spinner is placed on a stable, flat surface during operation.
- Exercise caution when handling the product, especially when wet, to prevent drops.

PRODUCT COMPONENTS

The OXO Small Straight Salad Spinner consists of three main parts:

1. **Outer Bowl:** The clear container that holds the water spun from the greens.
2. **Inner Basket (Colander):** The perforated basket where greens are placed for washing and spinning.
3. **Lid:** Contains the pump mechanism and brake button.



Key features include a one-handed pump, a brake button for instant stopping, a removable colander basket, and a lid that disassembles for thorough cleaning.

SETUP

1. Unpack all components from the packaging.
2. Wash all parts (outer bowl, inner basket, and lid) with warm, soapy water before first use. Rinse thoroughly and dry.
3. Place the inner basket inside the outer bowl.
4. Position the lid securely on top of the outer bowl, ensuring it is properly aligned and seated.



The OXO Small Straight Salad Spinner, ready for use.

OPERATING INSTRUCTIONS

1. **Prepare Greens:** Wash your greens or vegetables thoroughly under running water.
2. **Load Basket:** Place the washed greens into the inner basket. Do not overfill.
3. **Secure Lid:** Place the lid onto the outer bowl, ensuring it is securely closed.
4. **Spin:** Press the large, soft knob on the lid repeatedly to start the spinning action. The basket will rotate rapidly, using centrifugal force to remove water from the greens.
5. **Brake:** To stop the spinning action immediately, press the brake button located on the side of the lid.
6. **Remove Greens:** Once the greens are dry, unlock the knob (if locked for storage), remove the lid, and lift out the inner basket. Your greens are now ready for use.

一人暮らし
から2~3人
向け

サラダ
ボウル
として

シンプル
デザイン

PUSH!

To operate, simply press the large knob on the lid to initiate spinning.



The spinner effectively dries greens, making them ready for serving in the bowl.

MAINTENANCE AND CLEANING

Regular cleaning will ensure the longevity and hygiene of your salad spinner.

- **Disassembly:** The lid can be disassembled for thorough cleaning. Refer to the product diagram for how to detach the inner lid components.
- **Washing:** All parts (outer bowl, inner basket, and lid components) can be washed by hand with warm, soapy water. The inner basket is also dishwasher safe.
- **Drying:** Ensure all parts are completely dry before reassembling or storing.
- **Reassembly:** Reassemble the lid components and place the inner basket back into the outer bowl.



分解・洗浄が
可能で
お手入れも簡単



ボウル



ザル

カバー



蓋



ボウル



ザル



カバー

洗えます

The spinner disassembles into three main parts: the outer bowl, the inner basket, and the lid, all designed for easy cleaning.

STORAGE

For compact storage, the pump knob on the lid can be locked down. This allows for easier stacking of other items on top of the spinner or storage in tighter spaces.

- To lock the knob: Press the knob down completely and then slide the locking tab (if present) to secure it in the down position.
- To unlock the knob: Slide the locking tab back to its original position, and the knob will pop up.
- The outer bowl can also be used for storing washed greens in the refrigerator.



The knob can be locked down for compact storage, enabling other items to be placed on top of the lid.

TROUBLESHOOTING

- **Spinner not spinning:** Ensure the lid is securely placed on the bowl and the pump mechanism is not locked. Check for any obstructions in the spinning mechanism.
- **Greens not drying sufficiently:** Do not overfill the basket. Spin for a longer duration or perform multiple short spins. Ensure the greens are not excessively wet before placing them in the spinner.
- **Lid difficult to remove/attach:** Ensure the lid is aligned correctly with the bowl. If the knob is locked down, unlock it before attempting to remove or attach the lid.

SPECIFICATIONS

Model Number	1351680UK
Dimensions (W x H)	20.5 cm x 12 cm (8.1 in x 4.7 in)
Weight	674 g (1.48 lbs)

Capacity	2.29 Liters
Materials	Lid: AS resin, Thermoplastic elastomer, Polypropylene, Polyacetal, Stainless steel. Inner Lid: AS resin. Bowl: AS resin, Thermoplastic elastomer. Basket: Polypropylene.
Country of Origin	China
Dishwasher Safe	Basket only
Microwave Safe	No

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the official OXO website or contact OXO customer service. Keep your purchase receipt for warranty claims.

Additional product information may be available via the QR code on the product packaging:
<http://www.oxoqr.com/001>



The product comes in a box, suitable for gifting. A QR code on the box provides additional product information.

