

Perel 141999

PEREL E305WOG Weekly Timer User Manual

Model: 141999

1. INTRODUCTION

Thank you for choosing the PEREL E305WOG Weekly Timer. This device is designed to provide convenient and precise control over your electrical appliances, allowing you to automate their operation based on your schedule. Please read this manual carefully before use to ensure proper operation and to maximize the lifespan of your timer.

2. PRODUCT OVERVIEW

The PEREL E305WOG is a versatile weekly timer with advanced features for home and outdoor use.



Image 1: Front view of the PEREL E305WOG Weekly Timer. The image shows the white timer unit with a German (Type F) protective contact socket at the top, covered by a hinged lid that is currently open. Below the socket is a digital display showing '13:28' and a control panel with several buttons, all protected by a clear plastic cover.

Key Features:

- Up to 98 ON/OFF programs per week for flexible scheduling.
- Integrated Countdown function for temporary control.
- Random function for enhanced security (e.g., simulating presence).

- Automatic Summer/Winter time change for convenience.
- Selectable AM/PM or 24-hour display format.
- Equipped with a German (Type F) protective contact socket.
- Suitable for outdoor use.

3. SETUP

Before initial use, ensure the timer is fully charged and reset to clear any previous settings.

Initial Setup:

1. **Charging:** Plug the timer into a live electrical outlet for at least 30 minutes to charge its internal battery. This battery retains settings during power outages.
2. **Reset:** Locate the small 'RESET' button (often recessed to prevent accidental presses). Use a pointed object (e.g., a pen tip) to press this button. The display will clear, and the timer will return to its default settings.
3. **Time Format:** Press the 'CLOCK' button repeatedly to toggle between 12-hour (AM/PM) and 24-hour display formats. Select your preferred format.

4. OPERATING INSTRUCTIONS

Setting Current Time:

1. Press and hold the 'CLOCK' button.
2. While holding 'CLOCK', press the 'WEEK' button to set the current day of the week (MO, TU, WE, TH, FR, SA, SU).
3. While holding 'CLOCK', press the 'HOUR' button to set the current hour.
4. While holding 'CLOCK', press the 'MINUTE' button to set the current minute.
5. Release the 'CLOCK' button. The current time is now set.

Programming ON/OFF Times:

The timer allows for up to 98 ON/OFF programs. Each program consists of an ON time and an OFF time.

1. Press the 'PROG' button once. The display will show '1 ON'.
2. Press 'WEEK' to select the day(s) for this program (e.g., individual days, weekdays, weekends, all days).
3. Press 'HOUR' to set the desired ON hour.
4. Press 'MINUTE' to set the desired ON minute.
5. Press 'PROG' again. The display will show '1 OFF'.
6. Repeat steps 2-4 to set the desired OFF time for this program.
7. Press 'PROG' to advance to the next program ('2 ON') or press the 'CLOCK' button to exit programming mode and return to the current time display.
8. To review or edit programs, repeatedly press 'PROG'.

Countdown Function:

The countdown function allows you to set a specific duration after which the connected appliance will turn ON or OFF.

- Press the 'CD' (Countdown) button.
- Use 'HOUR', 'MINUTE', and 'SEC' (if available) buttons to set the countdown duration.
- Press 'CD' again to start the countdown. The display will show the remaining time.
- The appliance will switch state (ON to OFF or OFF to ON) once the countdown reaches zero.

Random Function:

The random function is useful for security purposes, making it appear as if someone is home by randomly switching the connected appliance ON and OFF within a set period.

- Press the 'RANDOM' button to activate this function. An 'R' or 'RANDOM' indicator will appear on the display.
- The timer will now randomly turn the appliance ON and OFF for varying durations within a specific time window (e.g., 6 PM to 6 AM).
- Press 'RANDOM' again to deactivate the function.

Automatic Summer/Winter Time Change:

This timer supports automatic adjustment for Daylight Saving Time (DST).

- Refer to the specific button on your timer, often labeled 'DST' or a sun/snowflake icon.
- Press this button to toggle between standard time and daylight saving time. The display will adjust accordingly.

AM/PM or 24-Hour Display:

As mentioned in initial setup, you can switch between 12-hour (AM/PM) and 24-hour formats by pressing the 'CLOCK' button.

5. MAINTENANCE

Proper maintenance ensures the longevity and reliable operation of your PEREL E305WOG timer.

- **Cleaning:** Wipe the timer with a soft, dry cloth. Do not use abrasive cleaners, solvents, or immerse the unit in water.
- **Storage:** If storing for an extended period, ensure the internal battery is charged. Store in a cool, dry place away from direct sunlight.
- **Environmental Conditions:** While suitable for outdoor use, avoid exposing the timer to extreme temperatures, heavy rain, or direct water jets. Ensure the protective cover for the socket and display is always securely closed when in use outdoors.

6. TROUBLESHOOTING

If you encounter issues with your timer, please refer to the following table:

Problem	Possible Cause	Solution
Display is blank or dim.	Internal battery is low or depleted.	Plug the timer into a live outlet for at least 30 minutes to charge.

Problem	Possible Cause	Solution
Timer does not switch ON/OFF at programmed times.	Incorrect program settings; Manual override active; Timer not in AUTO mode.	Review and correct program settings. Ensure the timer is set to 'AUTO' mode (usually indicated on the display).
Buttons are unresponsive.	Temporary software glitch; Unit needs reset.	Perform a full reset using the 'RESET' button.
Appliance connected to timer does not work.	Appliance is faulty; Timer is not supplying power.	Test the appliance directly in a wall socket. Check timer's mode (ON/OFF/AUTO).

7. SPECIFICATIONS







Feature	Detail
Brand	Perel
Model Number	141999
ASIN	B009L38WNO
Socket Type	German (Type F) Protective Contact
Programs	Max. 98 ON/OFF programs per week
Functions	Countdown, Random, Automatic Summer/Winter Time Change
Display	AM/PM or 24-hour display
Material	PTFE (Polytetrafluoroethylene), Stainless Steel
Package Dimensions	15 x 9 x 5 cm
Weight	260 g
First Available Date	January 15, 2020

8. WARRANTY AND SUPPORT

This product is covered by the standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation provided with your purchase or contact Perel customer support.

For technical support, troubleshooting assistance beyond this manual, or spare parts inquiries, please visit the official Perel website or contact their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.

Related Documents - 141999

 <p>PEREL WC201</p> <p>HOME PEREL GUEST 0:00 0:00</p> <p>USER MANUAL WARRANTY CARD PEREL STORE PEREL DEL. COMPANY BOSTON/MASSACHUSETTS BOSTON/MASSACHUSETTS PEREL DEL. COMPANY</p> <p>CE</p>	<p>PEREL WC201 Sports Timer & Scoreboard User Manual</p> <p>This user manual provides comprehensive guidance for the PEREL WC201 sports timer and scoreboard. It covers setup, operation for various sports like basketball, volleyball, judo, and boxing, stopwatch functions, metronome, clock, and technical specifications. Essential for sports officials and enthusiasts.</p>
 <p>PEREL EDIN305N</p> <p>CE</p>	<p>Perel EDIN305N Digital Timer Switch User Manual</p> <p>User manual for the Perel EDIN305N digital timer switch, providing detailed instructions on installation, operation, programming, safety guidelines, and technical specifications. Learn how to efficiently manage your electrical devices with this programmable timer.</p>
 <p>PEREL E305DM-1 E305DM-G(-1)</p> <p>CE</p>	<p>Perel E305DM-1 / E305DM-G(-1) User Manual - Digital Timer</p> <p>User manual for the Perel E305DM-1 and E305DM-G(-1) 24-hour plug-in digital timer. Provides instructions on setup, operation, safety precautions, cleaning, maintenance, and technical specifications.</p>
 <p>Velleman VTSI80</p> <p>CE</p>	<p>Velleman VTSI80 Soldering Iron User Manual</p> <p>Comprehensive user manual for the Perel VTSI80 soldering iron, providing essential safety instructions, operating guidelines, maintenance tips, and technical specifications. Covers environmental information and warranty details.</p>
 <p>PEREL TC78011LCD</p> <p>CE</p>	<p>Perel TC78011LCD Oil-Filled Radiator User Manual</p> <p>User manual for the Perel TC78011LCD oil-filled radiator, detailing safe operation, installation, features, and maintenance for efficient home heating.</p>
 <p>PEREL WC202</p> <p>CE</p>	<p>Perel WC202 Scoreboard Stand - User Manual and Instructions</p> <p>User manual for the Perel WC202 scoreboard stand. This document provides essential information on introduction, safety instructions, general guidelines, product overview with parts list, installation steps, care and maintenance, and technical specifications. It is intended for safe and proper use of the product.</p>

no relevant documents