

[manuals.plus](#) /

› [Altura Photo](#) /

› [Altura Photo Screen Cleaner Spray & Wipe Kit Instruction Manual](#)

Altura Photo KC0338

Altura Photo Screen Cleaner Spray & Wipe Kit Instruction Manual

Model: KC0338

PRODUCT OVERVIEW

The Altura Photo Screen Cleaner Spray & Wipe Kit is designed for effective and safe cleaning of various electronic screens and delicate surfaces. This kit provides a streak-free and scratch-free cleaning experience, ensuring optimal clarity for your devices.



Image: The Altura Photo Screen Cleaner Spray bottle with two MagicFiber microfiber cleaning cloths, one black and one grey.

WHAT'S IN THE BOX

- 1 x Altura Photo 2 oz. (60 ml) Cleaning Solution Spray Bottle
- 1 x MagicFiber Microfiber Cleaning Cloth (Extra Large 16"x16")
- 1 x MagicFiber Microfiber Cleaning Cloth (Original 6"x7")

magicfiber®

STREAK-FREE &
ZERO RESIDUE

2 Magicfiber cloths included



Image: Two MagicFiber cloths, highlighting their different sizes: an extra-large 16x16 inch black cloth and an original 6x7 inch grey cloth.

SETUP

No assembly is required for this kit. Ensure all components are present and undamaged upon unboxing. The cleaning solution is pre-filled and ready for use.

OPERATING INSTRUCTIONS: SCREEN CLEANING

This cleaning kit is suitable for various screen types, including LCD, LED, OLED, touchscreen, flat, and smart TV screens, as well as monitors, laptops, and car screens. It is also effective for cleaning camera lenses and glasses.

Important Safety Information:

- The cleaning solution is alcohol-free, ammonia-free, and odor-free.
- **DO NOT spray the cleaning solution directly onto any electronic screen or delicate surface.**
- Always spray the solution onto the microfiber cloth first.
- Do not ingest or use in eyes. Keep out of reach of children.

Cleaning Procedure:

1. **Prepare the Surface:** Ensure the electronic device is turned off and cooled down. Remove any loose dust or debris from the screen surface using a dry microfiber cloth or a soft brush.
2. **Apply Solution to Cloth:** Lightly spray the Altura Photo cleaning solution onto one of the MagicFiber microfiber cloths. Do not oversaturate the cloth; a few sprays are usually sufficient.
3. **Wipe the Screen:** Gently wipe the screen surface in a circular motion. Apply light pressure. The MagicFiber cloth is designed to clean without leaving scratches, streaks, or marks.
4. **Buff (Optional):** For optimal results and to remove any remaining moisture or faint streaks, use the dry side of the same cloth or a separate dry cloth to buff the screen until it is completely clean and clear.

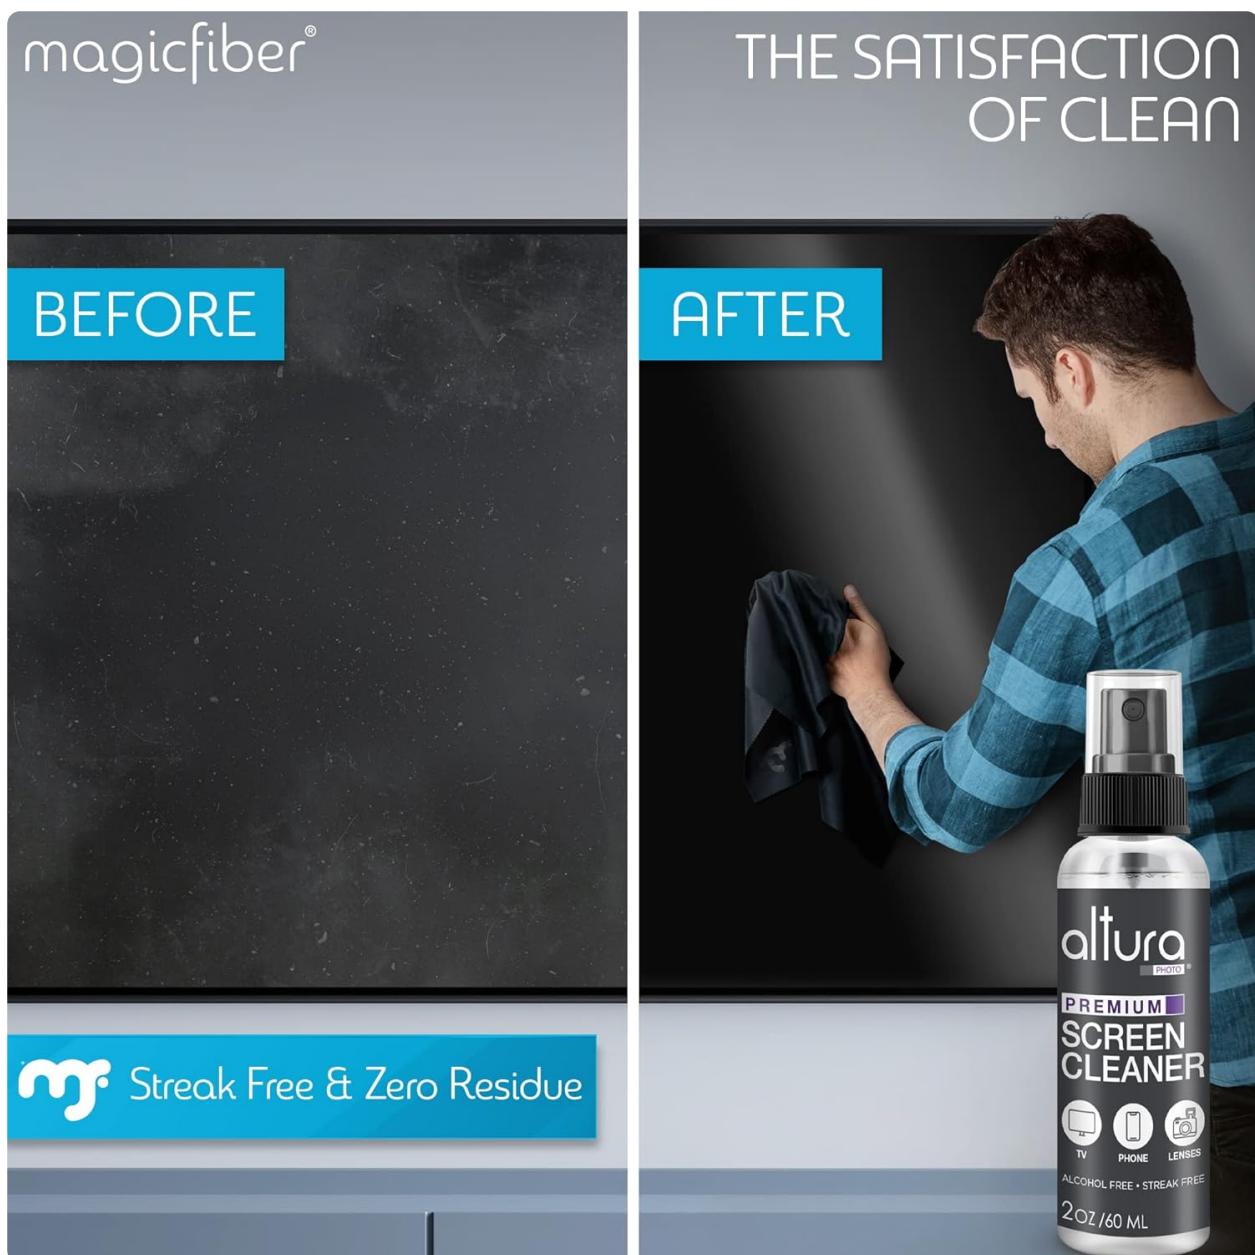


Image: A visual comparison showing a dirty screen "Before" cleaning and a perfectly clean screen "After"

using the Altura Photo kit.

altura
PHOTO®

SAFE FOR
ALL SCREENS



DO NOT SPRAY DIRECTLY ON SCREENS



SMARTPHONES



CAR SCREENS



GAMING



CAMERA LENSES

Image: Demonstrates cleaning a car screen, emphasizing the product's safety for various screens including smartphones, gaming devices, and camera lenses.

SEE THE WORLD MORE CLEARLY

Works on glasses



Image: Shows the product being used to clean eyeglasses, highlighting its versatility.

Official Product Video:

Your browser does not support the video tag.

Video: A demonstration of the Altura Photo Screen Cleaner Kit being used on various screens, including TVs, laptops, and computers, showcasing its effectiveness.

MAINTENANCE

Caring for MagicFiber Microfiber Cloths:

- **Washing:** Hand wash only in warm water.
- **Detergents:** Do not use any detergents, fabric softeners, or bleach, as these can damage the microfiber and reduce its effectiveness.
- **Drying:** Air dry only. Do not tumble dry or iron.

- **Storage:** Store cloths in a clean, dry place to prevent dust accumulation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Streaks or Residue Left Behind	Cloth is oversaturated with solution. Cloth is dirty or has residue from other cleaning agents. Not enough buffering after cleaning.	Use fewer sprays of solution on the cloth. Ensure the microfiber cloth is clean and dry before use. Wash according to maintenance instructions. Use a dry part of the cloth or a separate dry cloth to buff the screen until clear.
Screen Not Getting Clean	Not enough cleaning solution applied. Excessive dirt or grime.	Apply a few more sprays to the cloth. Repeat the cleaning process, ensuring thorough wiping.

SPECIFICATIONS

- **Product Dimensions:** 2.4 x 2.4 x 8 inches
- **Item Weight:** 1 pounds
- **Model Number:** KC0338
- **Brand:** Altura Photo
- **Material:** Microfiber (cloths)
- **Liquid Volume:** 2 Fluid Ounces (60 ml)
- **Color:** White, Black (referring to product components)
- **Country of Origin:** China
- **UPC:** 799422843479

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the contact information provided on the product packaging or visit the official Altura Photo website. Keep your purchase receipt for warranty claims.

Manufacturer: Altura Photo

