

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

### Manuals.plus /

- › [Diesel](#) /
- › Diesel Mega Chief DZ4280 Chronograph Watch User Manual

## Diesel DZ4280

# Diesel Mega Chief DZ4280 Chronograph Watch User Manual

---

## INTRODUCTION

---

This manual provides detailed instructions for the setup, operation, and maintenance of your Diesel Mega Chief DZ4280 Chronograph Watch. Please read this manual thoroughly to ensure proper use and care of your timepiece.

The Diesel Mega Chief DZ4280 is a 51mm chronograph watch featuring a gunmetal case, brown leather strap, and a white dial. It is designed for robust performance and distinctive style.

## PRODUCT OVERVIEW

---



Front view of the Diesel Mega Chief DZ4280 Chronograph Watch, showcasing the white dial, gunmetal case, and brown leather strap.



The Diesel Mega Chief DZ4280 Chronograph Watch worn on a wrist, illustrating its size and fit.



Rear view of the watch, showing the stainless steel case back and the leather strap.

## SETUP

---

### Setting the Time and Date

1. **Pull out the crown:** Gently pull the crown (the knob on the side of the watch) to position 2 for setting the date, or to position 3 for setting the time.
2. **Set the date:** In position 2, turn the crown clockwise or counter-clockwise until the correct date appears in the date window.
3. **Set the time:** In position 3, turn the crown to move the hour and minute hands to the correct time. Ensure you differentiate between AM and PM if your watch has a 24-hour indicator or if setting the date.
4. **Push in the crown:** Once the time and date are set, push the crown back into position 1 (normal operating position) to start the watch.

### Adjusting the Leather Strap

The brown leather strap features a buckle closure. To adjust the fit, simply move the buckle pin to the desired hole on the strap. Ensure the watch is snug but comfortable on your wrist, allowing for proper blood circulation.

## OPERATING THE CHRONOGRAPH FUNCTION

Your Diesel Mega Chief watch is equipped with a chronograph (stopwatch) function, controlled by two pushers located above and below the crown.

1. **Start/Stop:** Press the upper pusher to start the chronograph. Press it again to stop the timing.
2. **Reset:** After stopping the chronograph, press the lower pusher to reset all chronograph hands to their zero positions.

The three subdials on your watch track minutes, seconds, and 24-hour time for the chronograph function.

Your browser does not support the video tag.

Official video demonstrating the Diesel Men's Mega Chief Stainless Steel Chronograph Quartz Watch. This video provides a visual overview of the watch's features and design.

Your browser does not support the video tag.

Official video showcasing the Diesel Men's DZ4280 Mega Chief Gunmetal Brown Leather Watch, highlighting its design and functionality.

## MAINTENANCE

---

### Water Resistance

Your watch is water resistant up to 100 meters (330 feet) or 10 ATM. This means it is suitable for bathing, swimming, snorkeling, and shallow diving. However, it is **not** suitable for scuba diving. Always ensure the crown is fully pushed in before exposing the watch to water.

### Cleaning

- **Case and Crystal:** Wipe with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials.
- **Leather Strap:** Clean the leather strap with a soft, dry cloth. Avoid prolonged exposure to water, direct sunlight, and extreme temperatures, as these can damage the leather.

### Battery Replacement

The watch uses 1 LR44 battery. When the watch stops running or the second hand begins to jump erratically, it is an indication that the battery needs to be replaced. It is recommended to have the battery replaced by a qualified watch technician to ensure the water resistance seal is maintained.

### Storage

When not wearing your watch, store it in a cool, dry place away from direct sunlight and strong magnetic fields. The original watch box is ideal for storage.



The black Diesel watch box, suitable for safe storage.

## TROUBLESHOOTING

- **Watch not running:** Check if the crown is fully pushed in. If it is, the battery may need replacement.
- **Incorrect time/date:** Refer to the "Setting the Time and Date" section to re-adjust.
- **Chronograph hands not resetting to zero:** This may require a professional adjustment. Consult a watch technician.
- **Condensation inside the watch:** This indicates a potential breach in the water resistance. Seek immediate professional service to prevent further damage.

## SPECIFICATIONS

Feature	Detail
Model Name	DZ4280
Case Diameter	51 Millimeters
Case Thickness	12 Millimeters
Band Width	26 Millimeters
Band Material Type	Leather (Calfskin)

Case Material Type	Stainless Steel
Dial Color	White
Watch Movement Type	Quartz
Water Resistance Depth	330 Feet (100 Meters / 10 ATM)
Crystal	Mineral
Included Components	Chronograph, Date display
Power Source	Battery Powered (1 LR44 battery included)

## **WARRANTY**

---

This Diesel watch is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

## **SUPPORT**

---

For further assistance, product inquiries, or service requests, please visit the official Diesel website or contact their customer support. You can also refer to the brand store on Amazon for additional information and resources: [Diesel Store on Amazon](#).