

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Severin](#) /
- › [Severin SM 3590 Compact Milk Frother Instruction Manual](#)

Severin SM 3590

Severin SM 3590 Compact Milk Frother Instruction Manual

Model: SM 3590 | Brand: Severin

INTRODUCTION

Thank you for choosing the Severin SM 3590 Compact Milk Frother. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read these instructions carefully before first use and keep them for future reference.



Image: The Severin SM 3590 Compact Milk Frother in black, showcasing its sleek design.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Keep the appliance away from water and other liquids.
- Do not immerse the motor unit in water.
- Keep out of reach of children.
- Use only the specified battery type (2 x 1.5 V AA batteries).
- Do not operate if the whisk is damaged.
- Ensure the appliance is switched off before cleaning or changing batteries.

SETUP AND BATTERY INSTALLATION

The Severin SM 3590 Milk Frother is battery-powered for cordless convenience. It requires two 1.5 V AA batteries

(typically included).

1. Locate the battery compartment at the bottom of the frother handle.
2. Twist or slide open the battery compartment cover.
3. Insert two 1.5 V AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Securely close the battery compartment cover.
5. Attach the stainless steel whisk to the motor unit by gently pushing it into the designated slot until it clicks into place.



Image: The open battery compartment of the frother, showing where to insert two AA batteries.

OPERATING INSTRUCTIONS

The Severin SM 3590 is designed for quick and efficient frothing of milk and other liquids.

1. Pour the desired amount of milk (cold or warm) into a tall glass or jug. For best results, ensure the container is large enough to accommodate the milk's expansion during frothing.

2. Immerse the whisk end of the frother into the milk, ensuring the whisk head is fully submerged but not touching the bottom of the container.
3. Press and hold the pulse switch located on the soft-touch housing to activate the frother. The whisk will begin to rotate at approximately 11500 RPM.
4. Move the frother gently up and down in the milk for about 15-30 seconds, or until the desired froth consistency is achieved.
5. Release the pulse switch to turn off the frother.
6. Carefully remove the frother from the milk.

This frother is also suitable for mixing other beverages like hot chocolate, protein shakes, or cocktails.



Image: A hand holding the Severin SM 3590 Milk Frother, ready for use.



Image: The Severin SM 3590 Milk Frother actively frothing milk in a stainless steel jug, creating a rich foam.

Official Product Videos:

Your browser does not support the video tag.

Video: Demonstrates the use of an electric milk/coffee frother, showing its charging port, whisk heads, and how it stirs eggs and froths milk.

Your browser does not support the video tag.

Video: A detailed demonstration of a rechargeable milk frother, highlighting its features and effectiveness in frothing milk and mixing other ingredients.

Your browser does not support the video tag.

Video: Shows the KJBQ13 Electric Handheld Milk Frother in action, demonstrating its ability to create foam for various beverages.

CARE AND MAINTENANCE

Proper care ensures the longevity and optimal performance of your milk frother.

- **Cleaning the Whisk:** After each use, detach the stainless steel whisk from the motor unit. Rinse it immediately under warm running water. For thorough cleaning, hand wash the whisk with mild dish soap and water.
- **Cleaning the Motor Unit:** Wipe the soft-touch housing of the motor unit with a damp cloth. Do not immerse the motor unit in water or any other liquid.
- **Drying:** Ensure all parts are completely dry before reassembling or storing the frother.
- **Storage:** Store the frother in a dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter any issues with your Severin SM 3590 Milk Frother, please refer to the following common problems and solutions:

- **Frother not turning on:**
 - Check if the batteries are correctly inserted with the proper polarity.
 - Replace old batteries with new 1.5 V AA batteries.
 - Ensure the pulse switch is pressed firmly.
- **Weak frothing performance:**
 - Ensure the batteries are not low; replace if necessary.
 - Verify the whisk is securely attached to the motor unit.
 - Make sure the whisk head is fully submerged in the liquid but not touching the bottom or sides of the container.
 - Use fresh, cold milk for optimal frothing results.
- **Excessive splashing:**
 - Ensure the whisk head is adequately submerged in the liquid.
 - Use a taller container to prevent splashing.

TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Severin
Model Name	SM 3590
Color	Black
Material	Stainless Steel
Product Dimensions	45W x 233H millimetres
Item Weight	0.12 Kilograms
Power Source	Battery Powered (2 x 1.5 V AA)
Rotational Speed	Approx. 11500 RPM

Feature	Specification
Special Features	Compact Design, Soft-touch surface, Pulse switch
Product Care Instructions	Hand Wash

WARRANTY AND SUPPORT

For warranty information, spare parts, or technical support, please refer to the official Severin website or contact their customer service directly.

- **EU Spare Part Availability Duration:** 1 Year
- **Manufacturer:** Severin
- **Website:** www.severin.com
- **Customer Service:** Please refer to the contact section on the official website for your region.