

[manuals.plus](#) /

› [Spares4us](#) /

› [Replacement HIFI Remote Control for AIWA NSX-S223 User Manual](#)

Spares4us NSX-S223

Replacement HIFI Remote Control User Manual

MODEL: AIWA NSX-S223

Brand: Spares4us

Introduction

This manual provides essential information for the proper use and maintenance of your Spares4us Replacement HIFI Remote Control, specifically designed for the AIWA NSX-S223 system. This remote is a direct replacement, offering full functionality without the need for complex setup procedures. It is manufactured to be 100% compatible with the original remote, ensuring access to all features, including tuning capabilities.

Product Overview

The replacement remote control features a standard button layout for intuitive operation of your AIWA NSX-S223 HIFI system. Familiarize yourself with the button functions before use.



Figure 1: Front view of the remote control, showing all buttons and their layout. This is the primary interface for controlling your HIFI system.



Figure 2: Angled view of the remote control, highlighting its ergonomic design and button accessibility.



Figure 3: A different angled perspective of the remote, showcasing its slim profile and button arrangement.



Figure 4: Back view of the remote control, showing the battery compartment cover and overall casing design.

Setup

1. Battery Installation:

Locate the battery compartment on the back of the remote control (refer to Figure 4). Slide the battery cover downwards to open it.

Insert two new **Alkaline** batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.

Slide the battery cover back into place until it clicks securely.

2. Initial Use:

No setup code or programming is required. The remote is pre-configured for the AIWA NSX-S223 system. Once batteries are installed, it is ready for immediate use.

Operating Instructions

Point the remote control directly at the infrared receiver on your AIWA NSX-S223 HIFI system. Ensure there are no obstructions between the remote and the system.

- **Power Button:** Press the **Power** button (usually red, located at the top) to turn the HIFI system on or off.
- **Volume Control:** Use the **VOL+** and **VOL-** buttons to adjust the audio volume.
- **Channel/Track Selection:** Use the **CH+** and **CH-** buttons for radio tuning or track navigation on CD/USB playback. Number buttons (0-9) can be used for direct input.
- **Mute:** Press the **MUTE** button to temporarily silence the audio output. Press again to restore sound.
- **Source Selection:** Use buttons like **CD**, **TUNER**, **AUX**, or **AV** (if present) to switch between different audio sources.
- **Navigation Buttons:** The central **OK** button and surrounding arrow keys (**UP**, **DOWN**, **LEFT**, **RIGHT**) are used to navigate menus and confirm selections.
- **Playback Controls:** Buttons such as **PLAY**, **PAUSE**, **STOP**, **REWIND**, and **FAST FORWARD** control media playback.
- **Tuning Functions:** The remote provides full access to tuning functions for radio, allowing you to scan and save stations.

Maintenance

- **Cleaning:** To clean the remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use abrasive cleaners, solvents, or alcohol, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new ones of the same type (Alkaline).
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote. Store it in a cool, dry place away from direct sunlight and extreme temperatures.

Troubleshooting

Problem	Possible Cause	Solution
Remote control not working.	Dead or incorrectly inserted batteries.	Replace batteries with new Alkaline ones, ensuring correct polarity (+/-).

Problem	Possible Cause	Solution
Remote control range is poor.	Weak batteries; Obstruction between remote and HIFI system; Remote not pointed directly at receiver.	Replace batteries. Remove any objects blocking the line of sight. Ensure the remote is pointed directly at the HIFI system's infrared sensor.
Specific buttons not responding.	Dirt or debris under the button; Internal malfunction.	Clean the remote surface. If the issue persists after battery replacement and cleaning, the remote may require replacement.

Specifications

Brand	Spares4us
Model Number	NSX-S223 (Replacement for AIWA)
Connectivity Technology	Infrared
Controller Type	Button Control
Battery Type	Alkaline (Quantity: 2, not included)
Special Feature	Ergonomic Design
First Available Date	9 Oct. 2012

Warranty and Support

This product is a direct replacement remote control. For any issues or support, please contact the seller, Spares4us, directly through your purchase platform.

Return Policy: A 30-day refund/replacement policy is typically offered from the date of purchase. Please refer to your purchase details for specific terms and conditions.

For further assistance, please visit the Spares4us seller page on Amazon or contact their customer service.