

## Spares4us DEC-647

# Spares4us Replacement Remote Control for Audi DEC-647 User Manual

Model: DEC-647

## 1. INTRODUCTION

This manual provides instructions for the Spares4us Replacement Remote Control, model DEC-647, designed specifically for Audi DEC-647 devices. This remote control is a direct replacement for your original remote and offers all the same functionalities without requiring complex setup procedures. Please read this manual carefully before using your new remote control to ensure proper operation and to familiarize yourself with its features.

## 2. PACKAGE CONTENTS

Verify that your package contains the following items:

- Spares4us Replacement Remote Control (Model: DEC-647)
- This User Manual

*Note: Batteries are typically not included and must be purchased separately.*

## 3. SETUP

### 3.1. Installing Batteries

The remote control requires two AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks.



*Image 1: Back view of the remote control, highlighting the battery compartment.*

### **3.2. Initial Use**

This Spares4us remote control is pre-programmed for the Audi DEC-647 device. No setup codes or programming are required. Once batteries are installed, the remote is ready for immediate use. Point the remote control directly at your Audi DEC-647 device and press any function button to test its operation.

## **4. OPERATING THE REMOTE CONTROL**

The Spares4us DEC-647 remote control provides full functionality for your Audi DEC-647 device. Below is a general overview of common button functions. Refer to your Audi DEC-647 device's manual for specific functions if needed.



Image 2: Front view of the remote control, showing all buttons.

#### 4.1. Basic Functions

- **Power (Red Button):** Turns the device on or off.
- **Number Buttons (0-9):** For direct channel selection.
- **Volume Up/Down (VOL +/-):** Adjusts the audio volume.
- **Channel Up/Down (CH +/-):** Changes channels sequentially.
- **Mute:** Silences the audio output.
- **Menu:** Accesses the device's main menu.
- **OK/Enter:** Confirms selections within menus.
- **Navigation Arrows (Up, Down, Left, Right):** Navigates through menus and options.
- **Back/Exit:** Returns to the previous screen or exits a menu.

#### 4.2. Advanced Functions

- **Guide:** Displays the electronic program guide (EPG).
- **Info:** Shows information about the current program.
- **Text:** Accesses teletext services.

- **AV:** Switches between input sources (e.g., HDMI, AV).
- **Shift:** May activate secondary functions on certain buttons (refer to original device manual).
- **Colored Buttons (Red, Green, Yellow, Blue):** These buttons typically correspond to specific functions displayed on-screen within menus or interactive services.

## 5. MAINTENANCE

### 5.1. Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild cleaning solution. **Do not** use abrasive cleaners, alcohol, or solvents, as these can damage the remote's surface and buttons.

### 5.2. Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA). Do not mix old and new batteries, or different types of batteries.

### 5.3. Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can damage the device.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control does not work.	<ul style="list-style-type: none"> <li>• Batteries are dead or incorrectly inserted.</li> <li>• Obstruction between remote and device.</li> <li>• Remote control is too far from the device.</li> </ul>	<ul style="list-style-type: none"> <li>• Replace batteries with new ones, ensuring correct polarity.</li> <li>• Remove any objects blocking the signal path.</li> <li>• Move closer to the device and ensure direct line of sight.</li> </ul>
Some buttons do not respond.	<ul style="list-style-type: none"> <li>• Dirty contacts under the button.</li> <li>• Button malfunction.</li> </ul>	<ul style="list-style-type: none"> <li>• Try pressing the button firmly several times.</li> <li>• Ensure the remote is pointed correctly.</li> <li>• If problem persists, contact customer support.</li> </ul>
Device responds intermittently.	<ul style="list-style-type: none"> <li>• Low battery power.</li> <li>• Interference from other electronic devices.</li> </ul>	<ul style="list-style-type: none"> <li>• Replace batteries.</li> <li>• Move other electronic devices away from the remote's line of sight.</li> </ul>

## 7. SPECIFICATIONS

- **Brand:** Spares4us
- **Model:** DEC-647
- **Compatibility:** Specifically designed for Audi DEC-647 devices.
- **Power Source:** 2 x AAA Batteries (not included)

- **Type:** Direct Replacement Remote Control

## 8. WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the documentation provided with your purchase or contact your retailer. As this is a replacement product, specific warranty terms may vary. For further assistance, you may also visit the [Spares4us brand page](#) or contact their customer service directly.

---

© 2026 Spares4us. All rights reserved.

This manual is for informational purposes only. Spares4us is not responsible for any damages or issues arising from improper use of this product.