

## Bajaj 2800 TMCSS

# Bajaj Majesty 2800 TMCSS 28 Liter Oven Toaster Grill Instruction Manual

Model: 2800 TMCSS | Brand: Bajaj

## INTRODUCTION

---

Thank you for choosing the Bajaj Majesty 2800 TMCSS 28 Liter Oven Toaster Grill. This appliance is designed for versatile cooking, including toasting, grilling, and baking, with the added convenience of a motorized rotisserie and convection function. Please read this manual carefully before using the appliance to ensure safe and efficient operation. Keep this manual for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

---

- Always place the appliance on a stable, heat-resistant surface.
- Ensure proper ventilation around the appliance during operation.
- Do not touch hot surfaces. Use oven mitts or gloves when handling hot components.
- Unplug the appliance from the power outlet when not in use and before cleaning.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep children and pets away from the appliance during operation.
- Do not operate the appliance with a damaged cord or plug. Contact customer service for repairs.
- Avoid using abrasive cleaners or sharp objects for cleaning, as they may damage the surfaces.
- Do not place any objects on top of the appliance while it is in use.
- This appliance is for household use only.

## PRODUCT OVERVIEW

---

The Bajaj Majesty 2800 TMCSS Oven Toaster Grill features a durable stainless steel body and a transparent glass door for easy monitoring of cooking progress. It includes multiple controls for temperature, function selection, and a

timer.

## Components and Controls

- **Temperature Control Knob:** Adjusts temperature from 0-250 degrees Celsius.
- **Function Selector Knob:** Selects cooking modes (e.g., Toast, Bake, Grill, Rotisserie, Warm).
- **Timer Knob:** Sets cooking time up to 60 minutes with a 'Stay On' option and 'Keep Warm' function.
- **Power Indicator Light:** Illuminates when the appliance is operating.
- **Heating Elements:** Upper and lower heating elements for even cooking.
- **Cool Touch Handle:** Designed for safe opening and closing of the oven door.
- **Motorized Rotisserie:** For even roasting of meats.
- **Convection Fan:** Circulates hot air for faster and more even cooking.



Image: Front view of the Bajaj Majesty 2800 TMCSS Oven Toaster Grill, highlighting the control knobs for temperature, function, and timer, along with the power indicator light.



Image: Interior view of the oven, showing the motorized rotisserie rod and the grill rack in place, ready for cooking.



## BAJAJ MAJESTY 2800 TMCSS (28 LITRE) OVEN TOASTER GRILLER (OTG)

Image: An infographic illustrating the main features of the Bajaj Majesty 2800 TMCSS OTG, including its stainless steel body, transparent glass door, motorized rotisserie, convection function, and 28-liter capacity.

### INCLUDED ACCESSORIES

Your Bajaj Majesty 2800 TMCSS Oven Toaster Grill comes with the following accessories:

- Cooking Tray
- Grill and Barbeque Tray
- Tong
- Skewer Rods

### SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the appliance and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the OTG on a flat, stable, and heat-resistant surface. Ensure there is adequate space (at

least 10-15 cm) around the appliance for proper ventilation. Do not place it near flammable materials.

3. **Cleaning:** Before first use, wipe the interior and accessories with a damp cloth. Wash the cooking tray, grill rack, and skewer rods with warm soapy water, rinse, and dry thoroughly.
4. **Initial Burn-in:** To eliminate any manufacturing odors, operate the empty oven for approximately 15 minutes at the maximum temperature (250°C) on the "Bake" function. Ensure the area is well-ventilated during this process. A slight odor or smoke is normal during initial use.
5. **Power Connection:** Plug the appliance into a grounded electrical outlet with the correct voltage (220-240V).

## OPERATING INSTRUCTIONS

---

### General Operation

1. Place food on the appropriate accessory (cooking tray, grill rack) and insert it into the oven.
2. Close the oven door securely.
3. Set the **Temperature Control Knob** to the desired temperature (0-250°C).
4. Select the desired cooking function using the **Function Selector Knob**.
5. Turn the **Timer Knob** to the desired cooking time (up to 60 minutes). The power indicator light will illuminate. For continuous operation, turn the timer past the 60-minute mark to the "Stay On" position.
6. When the cooking time is complete, the timer will chime, and the appliance will turn off automatically (unless "Stay On" is selected).
7. Carefully remove cooked food using oven mitts and the provided tong.

### Toasting

- Place items to be toasted on the grill rack.
- Set the Function Selector to "Toast".
- Adjust the Temperature Control as needed (typically 180-200°C for toast).
- Set the Timer for the desired browning level.

### Grilling

- Place food on the grill and barbeque tray. For best results, place the tray on the upper rack position.
- Set the Function Selector to "Grill".
- Preheat the oven for 5-10 minutes at the desired grilling temperature (e.g., 230-250°C).
- Place food inside and set the Timer. Monitor closely to prevent burning.

### Baking

- Place baking dish on the cooking tray or grill rack, typically on the middle or lower rack position.
- Set the Function Selector to "Bake".
- Preheat the oven to the recipe's specified temperature.
- Set the Timer for the required baking duration.

### Motorized Rotisserie with Convection

- Secure the food (e.g., whole chicken) onto the skewer rods.
- Insert the skewer rods into the rotisserie sockets inside the oven.

- Set the Function Selector to the rotisserie icon (often combined with convection).
- Set the Temperature Control and Timer as per your recipe. The convection fan will circulate hot air for even cooking.

## Keep Warm Function

- After cooking, you can use the "Keep Warm" setting on the Function Selector to maintain food temperature without further cooking.
- Set the Timer to the desired duration for keeping warm.

Your browser does not support the video tag.

Video: A short preview highlighting key features of the Bajaj Majesty 2800 TMCSS Oven Toaster Grill, including its stainless steel body, motorized rotisserie with convection, 0-250 degree thermostat range, 60-minute timer with keep warm function, unique heating element selection, cool touch handles, 28-liter capacity, and 2800 watts power.

## MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your appliance.

1. **Before Cleaning:** Always unplug the OTG from the power outlet and allow it to cool completely before cleaning.
2. **Interior Cleaning:** Wipe the interior surfaces with a damp cloth and mild detergent. For stubborn stains, a non-abrasive cleaner can be used. Avoid harsh chemicals or abrasive pads.
3. **Exterior Cleaning:** Wipe the exterior stainless steel body with a soft, damp cloth. Dry thoroughly.
4. **Accessories:** Wash the cooking tray, grill rack, and skewer rods in warm, soapy water. Rinse and dry completely before storing or reusing.
5. **Crumb Tray:** Regularly remove and clean the crumb tray located at the bottom of the oven to prevent grease buildup and potential fire hazards.
6. **Do Not Immerse:** Never immerse the main unit, power cord, or plug in water or any other liquid.

## TROUBLESHOOTING

| Problem                                 | Possible Cause                                                                | Solution                                                                                                                                        |
|-----------------------------------------|-------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| Appliance does not turn on.             | Not plugged in; power outage; timer not set.                                  | Ensure plug is securely in outlet; check power supply; set the timer knob.                                                                      |
| Food not cooking evenly.                | Incorrect temperature/function; uneven food placement; convection not active. | Verify temperature and function settings; arrange food evenly; ensure convection is selected for even cooking.                                  |
| Smoke or unusual odor during operation. | Food spills; residue from previous cooking; initial burn-in odor.             | Clean the interior thoroughly; ensure crumb tray is clean. Initial odor is normal and will dissipate. If excessive, unplug and contact support. |
| Rotisserie not rotating.                | Food too heavy or improperly secured; rotisserie function not selected.       | Ensure food is within weight limits and securely attached; select the rotisserie function.                                                      |

## SPECIFICATIONS

- **Model:** Bajaj Majesty 2800 TMCSS
- **Capacity:** 28 Liters
- **Power:** 2800 Watts
- **Power Input:** 220 - 240 V
- **Temperature Range:** 0-250°C
- **Timer:** 0-60 minutes with 'Stay On' and 'Keep Warm' functions
- **Body Material:** Stainless Steel
- **Door Material:** Tempered Glass
- **Dimensions (LxWxH):** 55.8 cm x 40.3 cm x 39.2 cm
- **Control Type:** Knob
- **Special Features:** Motorized Rotisserie, Convection, Cool Touch Handles



Image: Diagram illustrating the overall dimensions of the Bajaj Majesty 2800 TMCSS Oven Toaster Grill, with measurements for length, width, and height.

## WARRANTY AND SUPPORT

Your Bajaj Majesty 2800 TMCSS Oven Toaster Grill comes with a **2-year warranty** from the date of purchase. Please retain your purchase receipt for warranty claims.

For any product-related queries, service requests, or technical assistance, please contact Bajaj Customer Service:

**Customer Service Number: 18001025963**

You can also visit the official Bajaj website for more information and support resources.

