

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

### Manuals.plus /

- › [Bajaj](#) /
- › Bajaj Majesty 1603 TSS 16 Litres Oven Toaster Griller User Manual

## Bajaj 1603 TSS

# Bajaj Majesty 1603 TSS 16 Litres Oven Toaster Griller User Manual

Model: 1603 TSS

## 1. INTRODUCTION

Thank you for choosing the Bajaj Majesty 1603 TSS 16 Litres Oven Toaster Griller. This appliance is designed to provide versatile cooking options, including baking, grilling, toasting, and roasting, making it a valuable addition to your kitchen. Please read this manual carefully before operating the appliance to ensure safe and efficient use. Keep this manual for future reference.



Image: The Bajaj 1603 16L OTG, designed for various cooking requirements.



**Choose the  
right OTG**  
to suit your  
cooking needs

*Image: A family enjoying baking with the Bajaj OTG, highlighting its user-friendly design.*

## 2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or anything similar.

- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Do not attempt to dislodge food when the appliance is plugged in.

### 3. PRODUCT OVERVIEW

---

The Bajaj Majesty 1603 TSS OTG is equipped with various components and controls to facilitate diverse cooking tasks.

#### 3.1 Components

- **Baking Tray:** For baking cakes, cookies, and other items.
- **Grill Rack:** Used for grilling and roasting.
- **Tong:** For safely handling hot trays and racks.
- **Crumb Tray:** Collects crumbs and drips for easy cleaning.
- **Skewer Rods:** For grilling kebabs and other skewered items.



*Image: Front view of the Bajaj Majesty 1603 TSS 16 Litres Oven Toaster Griller.*



*Image: The Bajaj OTG with its tempered glass door open, revealing the interior rack.*

### 3.2 Controls

- **Temperature Control Knob:** Adjusts the oven temperature from 100°C to 250°C.
- **Function Selector Knob:** Selects the cooking mode (e.g., upper heating, lower heating, both, grill).
- **Timer Knob:** Sets the cooking time up to 60 minutes with an auto shut-off feature. It also has a 'Stay On' option for continuous operation.

# Master Precision with Every Meal



*Image: The control panel of the Bajaj OTG, indicating the multi-level thermostat, function selection switch, and 60-minute timer.*




*Image: A close-up view of the precise control knobs on the Bajaj OTG.*

### 3.3 Included Accessories

## A COMPLETE BAKING & GRILLING PACK



Cooking tray

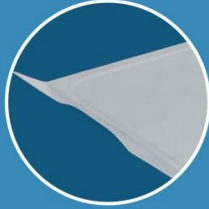

Crumb tray



Wire grill/  
BBQ tray



Skewer rods



Tongs



*Image: All included accessories for the Bajaj OTG, featuring the cooking tray, crumb tray, wire grill, skewer rods, and tongs.*



*Image: The baking tray, crumb tray, grill rack, tong, and skewer rods provided with the Bajaj OTG.*

## 4. SETUP AND FIRST USE

### 4.1 Unpacking

1. Carefully remove the appliance and all accessories from the packaging.
2. Remove any protective films or stickers from the appliance.
3. Retain the packaging for future storage or transportation.

### 4.2 Placement

- Place the OTG on a stable, heat-resistant, and flat surface.
- Ensure there is adequate ventilation around the appliance (at least 10-15 cm clearance on all sides).
- Do not place the appliance near flammable materials like curtains or paper.
- Ensure the power cord is not kinked or touching hot surfaces.



*Image: Rear view of the Bajaj OTG, illustrating the power cord connection and ventilation slots.*

### 4.3 Initial Cleaning

1. Before first use, wipe the interior and exterior of the oven with a damp cloth.
2. Wash all accessories (baking tray, grill rack, crumb tray, tongs, skewer rods) in warm, soapy water, rinse thoroughly, and dry completely.

### 4.4 First Use (Burn-Off)

It is recommended to perform a 'burn-off' cycle before cooking food for the first time to eliminate any manufacturing odors.

1. Plug the appliance into a suitable power outlet.
2. Set the temperature knob to 250°C.
3. Set the function selector knob to both upper and lower heating elements.
4. Set the timer knob to 15-20 minutes.
5. Allow the oven to run for the set time. A slight odor or smoke may be observed; this is normal.
6. Once the cycle is complete, unplug the oven and allow it to cool down completely.

## 5. OPERATING INSTRUCTIONS

---

The Bajaj Majesty 1603 TSS OTG offers multiple cooking functions. Always preheat the oven for 5-10 minutes before placing food inside for optimal results.

### 5.1 General Operation

1. Place the food on the appropriate accessory (baking tray, grill rack) and insert it into the desired rack position.
2. Close the oven door securely.
3. Set the **Temperature Control Knob** to the desired temperature.
4. Set the **Function Selector Knob** to the required cooking mode (e.g., Bake, Grill, Toast, Roast).
5. Set the **Timer Knob** to the desired cooking time. The oven will start heating, and the power indicator light will illuminate.
6. When the set time elapses, the oven will automatically switch off, and a bell will ring. If you wish to stop cooking earlier, turn the timer knob to 'OFF'.

### 5.2 Cooking Modes



*Image: Visual representation of the four primary cooking modes: Grill, Toast, Roast, and Bake, available on the Bajaj OTG.*

- **Baking:** Use both upper and lower heating elements. Ideal for cakes, cookies, bread, and casseroles.
- **Grilling:** Use the upper heating element. Perfect for meats, vegetables, and cheese toasts.
- **Toasting:** Use both upper and lower heating elements for even browning.
- **Roasting:** Use both upper and lower heating elements, often with the grill rack, for larger items like chicken or vegetables.

# BAJAJ 1603 16L OTG

Built for all your cooking needs



*Image: The Bajaj 1603 16L OTG showcasing its baking capability with a cake and muffins.*



*Image: The Bajaj OTG with a cooking pot placed inside, illustrating the ample interior space for various dishes.*

## 5.3 Official Product Videos

*Video: This video highlights key features of the Bajaj Majesty 1603 TSS OTG, including its stainless steel body, timer with auto shut-off, thermostat for temperature monitoring, and unique heating element design.*

*Video: This video demonstrates the Bajaj Majesty 1603 TSS OTG's accessories, function selection switch, 60-minute timer, and cool-touch handle, showcasing its ease of use for baking.*

## 6. MAINTENANCE AND CLEANING

---

Regular cleaning ensures the longevity and optimal performance of your OTG.

### 6.1 Before Cleaning

- Always unplug the appliance from the power outlet and allow it to cool down completely before cleaning.

### 6.2 Cleaning the Interior

- Remove the crumb tray, baking tray, and grill rack.
- Wipe the interior walls with a damp cloth and mild detergent. For stubborn stains, a non-abrasive cleaner can be used.
- Do not use abrasive cleaners or metal scouring pads, as they can damage the interior surface.
- Ensure the interior is completely dry before next use.

### 6.3 Cleaning Accessories

- Wash the baking tray, grill rack, crumb tray, tongs, and skewer rods in warm, soapy water.
- Rinse thoroughly and dry completely before storing or reusing.

### 6.4 Cleaning the Exterior

- Wipe the exterior surface with a soft, damp cloth.
- Do not use harsh chemicals or abrasive cleaners.

## 7. TROUBLESHOOTING

---

If you encounter any issues with your Bajaj Majesty 1603 TSS OTG, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; timer not set.	Ensure plug is securely in outlet; check power supply; set timer to desired cooking duration or 'Stay On'.
Food not cooking evenly.	Incorrect rack position; uneven food placement; door not fully closed.	Adjust rack position; arrange food evenly; ensure door is completely closed.
Excessive smoke during cooking.	Food residue or grease buildup; fatty foods.	Clean the interior and accessories thoroughly; use a drip tray for fatty foods.
Timer bell does not ring.	Timer mechanism fault.	Contact customer support if the timer function is otherwise working correctly.


If the problem persists after trying these solutions, please contact Bajaj customer support.

## 8. SPECIFICATIONS


Key technical specifications for the Bajaj Majesty 1603 TSS 16 Litres Oven Toaster Griller:

Feature	Specification
Brand	Bajaj
Model Name	Majesty 1603
Capacity	16 Litres
Power Source	Electric
Product Dimensions (D x W x H)	32.5D x 40W x 26.6H Centimeters
Item Weight	15 kg
Colour	Silver
Finish Type	Stainless Steel
Door Material Type	Tempered Glass
Control Type	Knob Control
Special Feature	Slide out crumb tray for ease in cleaning and removal of crumbs
Included Components	Baking Tray, Grill Rack, Tong, Crumb Tray and Skewer Rods

# PRODUCT DIMENSIONS

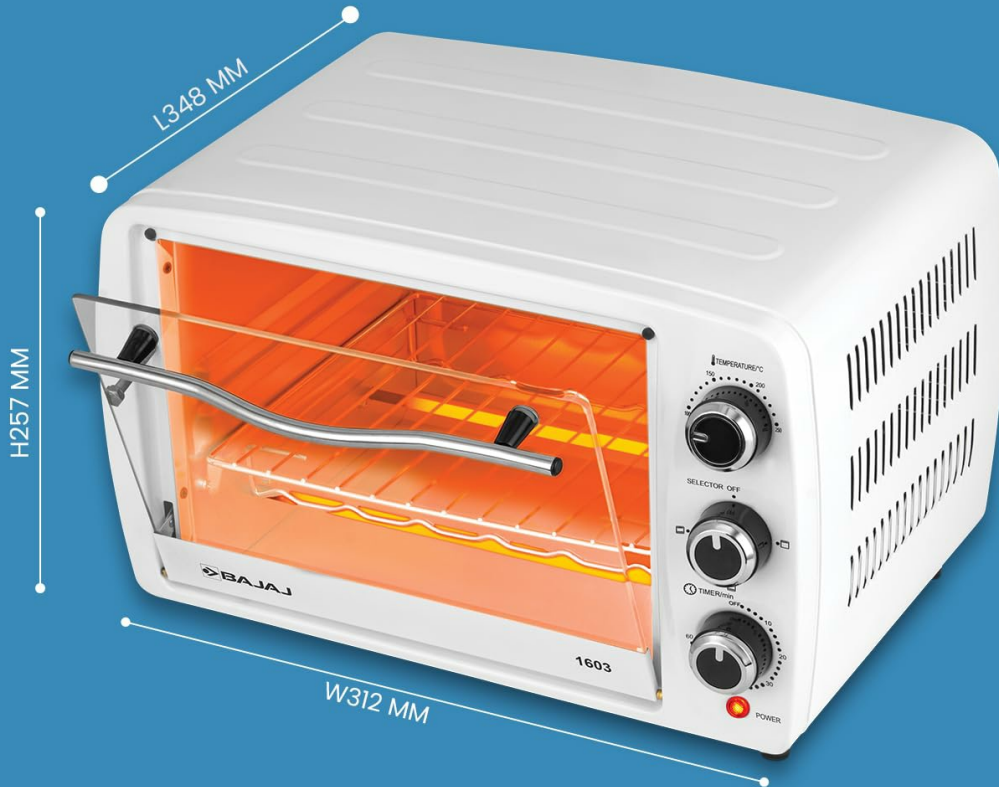

*Image: Detailed diagram illustrating the product dimensions of the Bajaj OTG.*

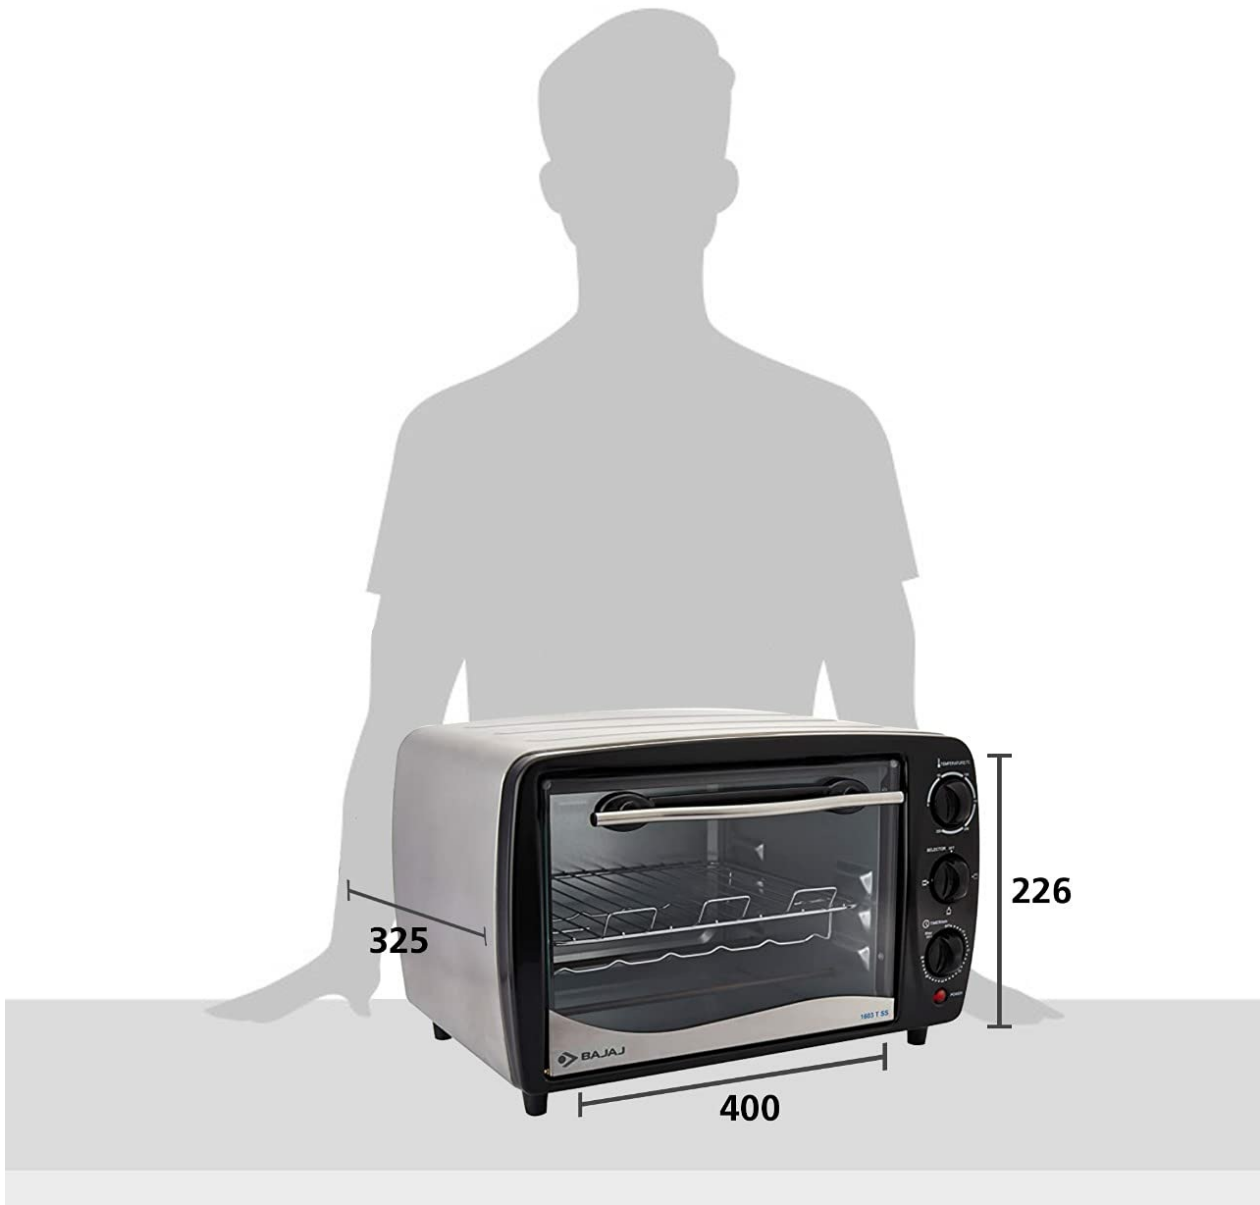

*Image: The Bajaj OTG displayed alongside a human silhouette to provide a sense of scale and its dimensions.*

## 9. WARRANTY AND SUPPORT

Your Bajaj Majesty 1603 TSS 16 Litres Oven Toaster Griller comes with a **2-year product warranty** from the date of purchase. Please retain your purchase receipt as proof of warranty.

For any service, repair, or warranty claims, please contact Bajaj customer support. Do not attempt to repair the appliance yourself, as this may void the warranty and pose a safety risk.

For further assistance, visit the official Bajaj website or contact their customer service helpline.