

Bajaj PX142

Bajaj PX142 25 L Convection Microwave Oven User Manual

Model: PX142

INTRODUCTION

Thank you for purchasing the Bajaj PX142 25 L Convection Microwave Oven. This appliance is designed for efficient and versatile cooking, offering microwave, grill, and convection functions. Please read this manual thoroughly before operating the oven to ensure safe and proper use. Keep this manual for future reference.

Important Safety Instructions

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Always use microwave-safe cookware.
- Supervise children closely when the oven is in use. The appliance features a child safety lock.

SETUP AND INSTALLATION

Unpacking

Carefully remove the oven from its packaging. Remove all packing materials, including any protective film or tape. Check the oven for any signs of damage. If damaged, do not operate and contact customer service.

Placement

Place the oven on a flat, stable, heat-resistant surface. Ensure there is adequate ventilation around the oven. Maintain a minimum clearance of 10 cm (4 inches) at the rear, 20 cm (8 inches) on the sides, and 30 cm (12 inches) above the oven for proper airflow. This is a countertop installation type appliance.



Image: Bajaj PX142 Microwave Oven. This image illustrates the exterior design and recommended clearances for installation.

Power Connection

Plug the oven into a dedicated 230 Volt, 50 Hz, AC power outlet. Do not use extension cords or adapters. The oven consumes 900 Watts of power.

Initial Setup

1. Place the turntable ring and glass tray inside the oven cavity.
2. Close the oven door.
3. Set the digital clock to the current time. Refer to the "Operating Instructions" section for clock setting details.

OPERATING INSTRUCTIONS

The Bajaj PX142 features a combination of Tact Buttons and a Jog Dial for control, along with a touchscreen interface.

Basic Microwave Cooking

1. Place food in a microwave-safe container on the glass tray.
2. Close the door securely.
3. Press the "Microwave" button.
4. Use the Jog Dial to select the desired power level (11 power levels available).
5. Use the Jog Dial to set the cooking time.
6. Press "Start" to begin cooking. The oven will emit a cooking completion alarm when finished.

Convection Cooking

Convection mode uses a fan to circulate hot air, ideal for baking and roasting.

1. Place food on the metal rack (if provided) or a heat-resistant dish.
2. Press the "Convection" button.
3. Use the Jog Dial to set the desired temperature.
4. Use the Jog Dial to set the cooking time.
5. Press "Start". The oven will preheat first, then begin cooking.

Grill Cooking

Grill mode is suitable for browning and toasting.

1. Place food on the high rack (if provided).
2. Press the "Grill" button.
3. Use the Jog Dial to set the cooking time.
4. Press "Start".

Combination Cooking

Combine microwave with grill or convection for faster cooking and browning.

1. Select the desired combination mode (e.g., Microwave + Grill).
2. Set power levels and cooking times as instructed by the specific combination program.
3. Press "Start".

Auto Cook / One Touch Menu

The oven features pre-programmed settings for various popular dishes. Refer to the internal menu guide (if available) or the display for specific options.

1. Press the "Auto Cook" or "One Touch Menu" button.
2. Use the Jog Dial to select the desired food item.
3. Enter the food weight if prompted.
4. Press "Start".

Auto Defrost

This feature automatically defrosts food based on weight.

1. Place frozen food in a microwave-safe container.
2. Press the "Auto Defrost" button.
3. Use the Jog Dial to enter the weight of the food.
4. Press "Start". The oven will calculate the defrosting time.

Child Safety Lock

To activate the child safety lock, press and hold the "Stop/Cancel" button for 3 seconds. A lock indicator will appear on the display. To deactivate, press and hold the "Stop/Cancel" button again for 3 seconds.

Deodorizer Timer

Use the deodorizer function to remove lingering odors from the oven cavity. Set the timer in minutes using the Jog Dial after selecting the deodorizer function.

CARE AND MAINTENANCE

Cleaning the Oven Interior

- Always unplug the oven before cleaning.
- Wipe the interior cavity, including the stainless steel inner material, with a damp cloth and mild detergent after each use.
- For stubborn stains, place a bowl of water with lemon juice inside and microwave for a few minutes to loosen residue, then wipe clean.
- Clean the glass tray and roller ring with warm, soapy water. They are dishwasher safe.
- Do not use abrasive cleaners or metal scouring pads.

Cleaning the Oven Exterior

- Wipe the exterior surfaces, including the steel/mirror finish body, with a soft, damp cloth.
- Avoid spraying cleaners directly onto the control panel. Apply cleaner to a cloth first.

TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Child safety lock activated.	Ensure plug is secure; Close door firmly; Deactivate child safety lock.
Food not cooking evenly	Incorrect power level or cooking time; Food not stirred/rotated; Turntable not rotating.	Adjust settings; Stir/rotate food during cooking; Check turntable for obstructions.
Oven light not working	Bulb burnt out.	Contact qualified service personnel for bulb replacement.

Problem	Possible Cause	Solution
Excessive steam from door	Normal during cooking of high-moisture foods.	No action required. Ensure proper ventilation.

If the problem persists after trying these solutions, please contact Bajaj customer service.

SPECIFICATIONS

Model	PX142
Brand	Bajaj
Type	Convection Microwave Oven
Capacity	25 Liters
Power Output	900 Watts
Operating Voltage	230 Volts
Control Type	Tact Button/Jog Dial, Touchscreen
Number of Power Levels	11
Heating Method	Convection
Defrost System	Auto Defrost
Inner Material	Stainless Steel
Special Features	Auto Cook, One Touch Menu, Cooking Completion Alarm, Child Safety Lock, Digital Clock, Deodorizer Timer

WARRANTY AND CUSTOMER SUPPORT

Warranty Information

This Bajaj PX142 Convection Microwave Oven comes with a **2-year warranty on the product** from the date of purchase. The warranty covers manufacturing defects under normal household use. Please retain your purchase receipt as proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accident, unauthorized repair, or commercial use.

Customer Service

For any queries, service requests, or technical assistance, please contact Bajaj customer service:

Customer Service Number: [18001025963](tel:18001025963)

Please have your product model number (PX142) and purchase details ready when contacting support.