

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Bajaj](#) /
- › [Bajaj Majesty 15GMH 15-Litre Storage Water Heater Instruction Manual](#)

Bajaj Majesty GMH

Bajaj Majesty 15GMH 15-Litre Storage Water Heater Instruction Manual

Model: Majesty GMH

1. PRODUCT OVERVIEW

The Bajaj Majesty 15GMH is a 15-litre storage water heater designed for efficient and reliable hot water supply. This manual provides essential information for the safe installation, operation, and maintenance of your appliance.



Image 1: Front view of the Bajaj Majesty 15GMH 15-Litre Storage Water Heater, showing the temperature gauge and control knob.

Key Features:

- **Capacity:** 15 Litres
- **Wattage:** 2000 Watts
- **Swirlflow Technology:** Designed for efficient heating.
- **Magnesium Anode Rod:** Provides protection against corrosion.
- **Adjustable Thermostat:** Allows for temperature control.
- **Multiple Safety Systems:** Includes protection against dry heating, overheating, and overpressure.
- **High Pressure Compatibility:** Suitable for high-pressure installations up to 0.7 MPa (8 bar).
- **Neon Indicators:** For power and heating status.
- **Fire Retardant Cable:** Equipped with a 3-pin plug for safety.

2. SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your water heater. It is recommended that installation be performed by a qualified technician.

2.1 Unpacking

Carefully remove the water heater from its packaging. Inspect the unit for any signs of damage. The package should contain:

- 1N Water Heater
- 1N Instruction Manual
- 1N Warranty Card

2.2 Mounting

The Bajaj Majesty 15GMH is designed for wall mounting and indoor installation. Ensure the wall is strong enough to support the weight of the water heater when full (approximately 25.6 kg).

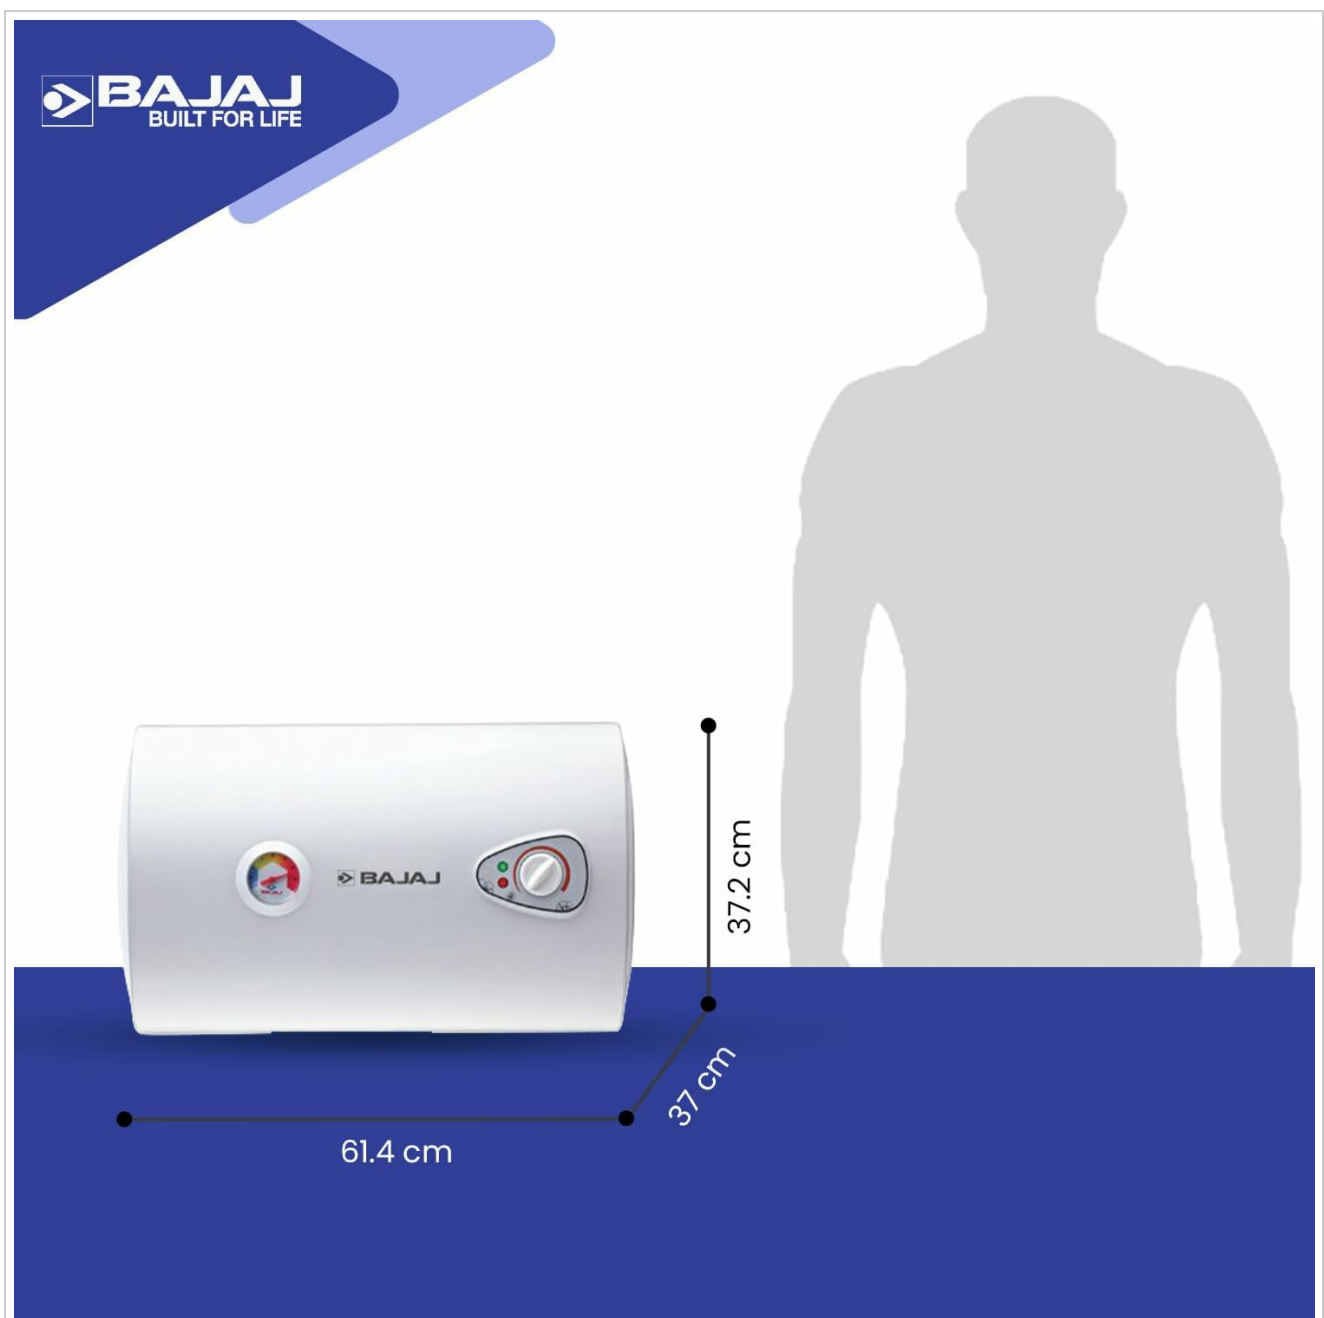


Image 2: Diagram illustrating the dimensions of the Bajaj Majesty 15GMH water heater: 61.4 cm (length), 37.2 cm (height), and 37 cm (depth).

Dimensions (LxWxH): 61.4 x 37.2 x 37 Centimeters

2.3 Plumbing Connections

Connect the water inlet and outlet pipes to the designated ports on the water heater. Ensure all connections are secure and leak-free. The unit is suitable for high-pressure water supply systems, with a rated pressure of 0.7 MPa (8 bar).

2.4 Electrical Connection

Connect the water heater to a suitable 230 Volts, 2000 Watts power supply using the provided fire-retardant 3-pin plug. Ensure the electrical circuit is properly grounded and protected by a suitable circuit breaker.

3. OPERATING INSTRUCTIONS

Follow these steps for safe and effective operation of your Bajaj Majesty 15GMH water heater.

3.1 Filling the Tank

1. Ensure all plumbing connections are tight.
2. Open the cold water inlet valve to allow water to fill the tank.
3. Open a hot water tap in your bathroom to allow air to escape from the system.
4. Once water flows steadily from the hot water tap, close the tap. The tank is now full.

3.2 Powering On and Temperature Adjustment

1. Plug the water heater into the power outlet. The power indicator (neon light) will illuminate.
2. Adjust the temperature control knob to your desired setting. The heating indicator (neon light) will illuminate when the heating element is active.
3. The water heater will automatically heat the water to the set temperature and then switch off. The heating indicator will turn off.
4. When the water temperature drops, the heater will automatically switch on again to maintain the set temperature.

The water heater is designed to heat water efficiently, typically reaching a suitable bathing temperature within 15-20 minutes, depending on the initial water temperature and volume.

4. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your water heater.

4.1 General Cleaning

- Before cleaning, always disconnect the power supply to the water heater.
- Wipe the exterior of the unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.

4.2 Anode Rod Inspection

The water heater is equipped with a Magnesium Anode Rod, which helps protect the inner tank from corrosion by attracting harmful salts. This rod should be inspected periodically (e.g., annually) by a qualified technician and

replaced if significantly depleted.

4.3 Draining the Tank (If required)

If the water heater will not be used for an extended period or if there is a risk of freezing, the tank should be drained:

1. Disconnect the power supply.
2. Close the cold water inlet valve.
3. Open a hot water tap to release pressure.
4. Open the drain valve at the bottom of the water heater to allow water to empty.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your water heater.

Problem	Possible Cause	Solution
No hot water	No power supply Thermostat set too low Heating element failure	Check power connection and circuit breaker Adjust thermostat to a higher setting Contact service technician
Water not hot enough	Thermostat set too low Excessive hot water usage Sediment buildup	Increase thermostat setting Allow time for water to reheat Contact service technician for descaling
Water heater leaking	Loose plumbing connections Pressure relief valve discharge Tank corrosion	Tighten connections This is normal if pressure is too high; check water pressure Contact service technician immediately
No power indicator light	No power supply Faulty indicator light	Check power connection and circuit breaker Contact service technician

If you encounter issues not listed here or if the suggested solutions do not resolve the problem, please contact Bajaj customer support.

6. SPECIFICATIONS

Specification	Value
Brand	Bajaj
Model Number	Majesty GMH
Type	Storage Water Heater
Capacity	15 Litres
Wattage	2000 Watts
Voltage	230 Volts
Rated Pressure	0.7 MPa (8 Bar)

Specification	Value
Mounting Type	Wall
Installation Style	Indoor
Special Features	Overheat Protection, Over Temperature Protection, Pressure Release Valve
Colour	White
Item Weight	10 kg 600 g
Item Dimensions (LxWxH)	61.4 x 37.2 x 37 Centimeters
Country of Origin	India

7. WARRANTY AND SUPPORT

7.1 Warranty Information

The Bajaj Majesty 15GMH water heater comes with a warranty of **2 years on the product** and **5 years on the inner tank**, provided by Bajaj.

Legal Disclaimer: Warranty and further services are provided by the company (Bajaj) and not by the seller.

7.2 Manufacturer and Support

Manufacturer: Bajaj, Marketed by Bajaj Electricals Limited

For any service requests, technical assistance, or warranty claims, please contact Bajaj customer support directly. Refer to the warranty card included with your product for specific contact details and terms.

