

**Neff B1561W1GB/04, B1593N0GB/02, B1641N0GB/01, U1320N2GB/01, U1421N0GB/01, U1452S2GB/01, various compatible Neff oven models**

# Neff Oven Lamp Assembly Instruction Manual

Genuine Replacement Part for Neff Ovens

## INTRODUCTION

---

This manual provides detailed instructions for the safe and correct installation of the Neff Oven Lamp Assembly (Part Number 155303). This is a genuine replacement part designed to restore proper lighting functionality to your Neff oven. Please read all instructions carefully before proceeding with the installation.

## COMPATIBILITY

---

This oven lamp assembly is compatible with a wide range of Neff oven models, including but not limited to:

- B1561W1GB/04
- B1593N0GB/02
- B1641N0GB/01
- B1721N2GB/01
- U1320N2GB/01
- U1421N0GB/01
- U1452S2GB/01
- And many other compatible Neff oven models. Refer to your oven's original documentation or the manufacturer's website for a complete list.

The manufacturer code for this part is 155303.

## SAFETY INFORMATION

---

**WARNING:** Always disconnect the appliance from the main power supply before attempting any installation, maintenance, or repair. Failure to do so can result in electric shock, injury, or death.

- Ensure the oven is completely cool before starting work to avoid burns.
- Wear appropriate personal protective equipment, such as gloves, if necessary.
- If you are unsure about any step, consult a qualified technician.
- Do not use damaged parts. Inspect the new lamp assembly for any defects before installation.

This product does not include a plug and is intended for internal appliance repair.

## INSTALLATION (SETUP)

---

Follow these steps to replace the oven lamp assembly:

1. **Disconnect Power:** Turn off the oven at the mains electricity supply. This is crucial for safety.
2. **Locate Lamp:** Open the oven door and locate the existing lamp assembly, usually on the back or side wall of the oven cavity.
3. **Remove Cover:** Depending on your oven model, there may be a glass cover over the lamp. Carefully unscrew or unclip this cover. You may need a screwdriver or a coin.
4. **Remove Old Lamp:** Gently unscrew the old lamp bulb from its socket. If the entire assembly needs replacement, you may need to disconnect wires or unscrew the housing.
5. **Install New Lamp:** Screw the new lamp bulb into the socket. If replacing the entire assembly, connect the wires (ensuring correct polarity if applicable) and secure the housing.
6. **Replace Cover:** Securely reattach the glass cover over the new lamp. Ensure it is tight to prevent moisture and grease ingress.
7. **Restore Power:** Reconnect the oven to the main power supply.
8. **Test Functionality:** Turn on the oven light to ensure the new lamp is working correctly.



*Image: Neff Oven Lamp Assembly. This image shows the genuine replacement oven lamp assembly, including the bulb and housing, ready for installation.*

## OPERATING

---

After successful installation, the oven lamp will operate as per your oven's standard controls. Typically, the oven light can be switched on or off independently or may illuminate automatically when the oven door is opened, depending on your specific oven model.

## MAINTENANCE

---

- **Cleaning:** Periodically clean the glass cover of the oven lamp when the oven is cool. Use a soft cloth and mild detergent, avoiding abrasive cleaners that could scratch the glass.
- **Inspection:** If the lamp stops working again, first check if the bulb has simply burned out. If the bulb is intact, re-check the connections or consult a technician.

Always ensure the oven is disconnected from power before cleaning or inspecting the lamp area.

## TROUBLESHOOTING

---

- **Lamp Not Lighting:**

- Ensure the oven is plugged in and the power supply is active.
- Verify the lamp bulb is securely screwed into the socket.
- Check if the glass cover is properly seated and not interfering with the bulb.
- If the issue persists, the bulb itself might be faulty, or there could be an electrical issue within the oven. Consult a qualified technician.

- **Flickering Lamp:** This could indicate a loose connection. Disconnect power, remove the cover, and gently tighten the bulb. If flickering continues, the bulb might be nearing the end of its life.

## SPECIFICATIONS

Attribute	Value
Brand	Neff
Part Number / Manufacturer Code	155303
ASIN	B009P2Q60C
Plug Type	No plug (internal appliance part)
First Available Date	January 15, 2020

## WARRANTY AND SUPPORT

This is a genuine Neff product. For specific warranty information regarding replacement parts, please refer to your original oven purchase documentation or contact Neff customer support directly. Keep your proof of purchase for any warranty claims.

For further assistance or technical support, please visit the official Neff website or contact their customer service department.