

[Manuals.plus](#) /

› [Case Logic](#) /

› Case Logic 15.6-Inch Laptop and iPad Slim Case (AUA-316ANTH) User Manual

Case Logic AUA-316ANTH

Case Logic 15.6-Inch Laptop and iPad Slim Case (AUA-316ANTH) User Manual

1. PRODUCT OVERVIEW

The Case Logic AUA-316ANTH is a slim, compact carrying case designed to protect and transport a laptop up to 15.6 inches and an iPad or 10.1-inch tablet. It features multiple compartments for organized storage of devices, accessories, and documents.



Figure 1.1: Front view of the Case Logic Slim Case, showcasing its compact design and front zippered pocket.

Key Features:

- Separate, protective pockets for a laptop (up to 15.6") and an iPad/10.1" tablet.
- Dedicated pocket for documents, keeping them crisp and unbent.
- Front pocket with organizer panel for external hard drives, pens, and other accessories.
- Zippered front pocket for secure and accessible smartphone storage.
- Comfortable, removable shoulder strap and padded handle for versatile portability.
- Integrated luggage strap for secure attachment to rolling luggage handles.

2. SETUP AND INITIAL USE

2.1 Attaching the Shoulder Strap

1. Locate the two D-rings on the sides of the case.

2. Attach the plastic clips of the shoulder strap to these D-rings. Ensure both clips are securely fastened.
3. Adjust the length of the shoulder strap using the slide buckle for comfortable carrying.



Figure 2.1: Side view illustrating the attachment point for the removable shoulder strap.

2.2 Understanding Compartments

- **Main Compartment:** Designed for your laptop (up to 15.6 inches) and features a separate padded sleeve for an iPad or 10.1-inch tablet.
- **Document Pocket:** A slim pocket within the main compartment to keep papers and files flat.
- **Front Zippered Pocket:** Contains an organizer panel with smaller pockets for pens, external hard drives, and other small accessories. This is also suitable for power cords.
- **Quick-Access Front Pocket:** A smaller zippered pocket on the front for items like a smartphone.





Figure 2.2: Main compartment open, showing dedicated sleeves for a laptop and a tablet.





Figure 2.3: Front accessory pocket with internal organization for cables, hard drives, and other small items.

3. OPERATING INSTRUCTIONS

3.1 Inserting Devices

1. Open the main compartment zipper.
2. Carefully slide your laptop (up to 15.6 inches) into the larger padded sleeve.
3. Insert your iPad or 10.1-inch tablet into the smaller, dedicated sleeve.
4. Ensure devices are fully seated and the compartment can close without strain.

3.2 Organizing Accessories

- Use the front zippered pocket's organizer panel for power adapters, cables, external hard drives, and pens. Distribute weight evenly to maintain balance.
- The smaller front pocket is ideal for quick access items like a smartphone or keys.

3.3 Attaching to Rolling Luggage

The case features a luggage strap on the back for easy transport with rolling luggage.

1. Locate the strap on the back of the case.
2. Slide the strap over the extended handle of your rolling luggage.
3. Ensure the case is stable and securely attached before moving.





Figure 3.1: Rear view of the case, highlighting the luggage pass-through strap.



Figure 3.2: The slim case securely attached to the handle of rolling luggage for convenient travel.

4. MAINTENANCE AND CARE

4.1 Cleaning Instructions

The Case Logic Slim Case is made from durable polyester material.

- For light dirt or dust, wipe the exterior with a soft, damp cloth.
- For more stubborn stains, use a mild soap solution with a soft brush or cloth. Gently scrub the affected area.
- Rinse thoroughly with a clean, damp cloth to remove any soap residue.
- Allow the case to air dry completely before storing or using. Do not machine wash or tumble dry.

4.2 Storage

Store the case in a cool, dry place away from direct sunlight when not in use to prolong its lifespan.

5. TROUBLESHOOTING

5.1 Case Tipping Over

If the case tends to tip over when placed on a flat surface, it may be due to uneven weight distribution.

- **Solution:** Redistribute items within the compartments, placing heavier items closer to the bottom and center of the case. Ensure all pockets are zipped closed.

5.2 Zipper Sticking

If a zipper becomes difficult to operate:

- **Solution:** Apply a small amount of zipper lubricant (e.g., beeswax, graphite pencil lead) to the zipper teeth. Gently work the zipper back and forth to distribute the lubricant. Avoid forcing the zipper.

5.3 Limited Impact Protection

This product is a slim case designed for portability and basic protection against scratches and minor bumps. It is not a hard-shell case and does not offer extensive impact protection.

- **Recommendation:** For environments requiring higher impact resistance, consider additional protective sleeves for your devices or a more robust carrying solution.

6. SPECIFICATIONS

Brand	Case Logic
Model Number	AUA-316ANTH
Color	Anthracite
Compatible Devices	Laptops, Tablets (up to 15.6" laptop, 10.1" iPad/tablet)
Form Factor	Case
Shell Type	Soft (Polyester)
Item Dimensions (L x W x H)	16.5 x 3.2 x 12.8 inches
Item Weight	1.06 Pounds
Material	Polyester

7. WARRANTY INFORMATION

Warranty information for the Case Logic AUA-316ANTH Slim Case is not provided within the product data. For details regarding warranty coverage, terms, and conditions, please refer to the official Case Logic website or contact their customer support directly.

8. CUSTOMER SUPPORT

For further assistance, product inquiries, or to report any issues, please contact Case Logic customer support through their official channels.

- **Official Website:** Visit the [Case Logic Store](#) for support resources and contact information.

9. PRODUCT VIDEOS

No official product videos from the seller are available in the provided data for this model.

This manual is for informational purposes only. Case Logic reserves the right to make changes without prior notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question