

[manuals.plus](#) /› [John Deere](#) /› [John Deere Preschool Johnny Tractor Remote Control \(Tomy 42946\) Instruction Manual](#)

John Deere 42946A1

John Deere Preschool Johnny Tractor Remote Control (Tomy 42946) Instruction Manual

Model: 42946A1

1. INTRODUCTION

Thank you for choosing the John Deere Preschool Johnny Tractor Remote Control toy. This manual provides essential information for the safe and proper use, setup, and maintenance of your new toy. Designed for young children, Johnny Tractor features a soft, rubberized finish and a flexible antenna for enhanced safety and durability. Its simple two-button remote control makes it easy for little hands to operate.

2. SAFETY INFORMATION

WARNING: Not suitable for children under 3 years due to small parts and potential choking hazards. Adult supervision is recommended at all times.

- Always ensure battery compartments are securely closed.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries from the toy and remote control if they will not be used for an extended period.
- Dispose of used batteries responsibly.
- Keep the toy away from water and excessive moisture.
- Avoid operating the toy near stairs or other elevated surfaces to prevent falls.

3. PACKAGE CONTENTS

Please check that all items are present in the package:

- 1 x John Deere Johnny Remote Control Tractor
- 1 x Remote Control Unit
- 3 x AA Batteries (for tractor)



Image: The John Deere Johnny Tractor Remote Control toy displayed in its original retail packaging, showing the tractor and the yellow remote control.

4. SETUP

4.1. Battery Installation

The Johnny Tractor requires 3 AA batteries (included) and the remote control requires 1 x 9V battery (not included, despite the product listing stating batteries are included, the 9V for the remote is typically separate).

1. Locate the battery compartment on the underside of the tractor and on the back of the remote control.
2. Using a screwdriver, open the battery compartment covers.
3. Insert the batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the covers and secure them with the screws.

4.2. Assembly

No assembly is required for the John Deere Johnny Tractor Remote Control toy. It is ready for play after battery installation.

5. OPERATING INSTRUCTIONS

The Johnny Tractor is controlled by a simple two-button infrared remote control.

1. Ensure both the tractor and the remote control have fresh batteries installed.
2. Point the remote control towards the tractor.
3. Press the **forward button** (usually indicated by an upward arrow) to make the tractor move straight forward.
4. Press the **left turn button** (usually indicated by a curved arrow or left arrow) to make the tractor

turn left while moving.

5. The toy features an automatic shut-off function to conserve battery life when not in use.



Image: The John Deere Johnny Tractor, green and yellow, positioned next to its yellow two-button remote control with a flexible antenna. This illustrates the primary components of the toy.



Image: The John Deere Johnny Tractor in motion, with an illustration of radio waves emanating from the remote control, demonstrating its remote operation.



Image: A young child sitting on a light-colored rug, smiling and holding the yellow remote control, with the green and yellow John Deere Johnny Tractor positioned in front of them, ready for play.

6. MAINTENANCE

6.1. Cleaning

To clean the tractor and remote control, wipe them with a slightly damp cloth. Do not immerse in water. Avoid using harsh chemicals or abrasive cleaners.

6.2. Battery Care

Always remove batteries if the toy will not be used for an extended period to prevent leakage and damage. Ensure battery contacts are clean and free of corrosion.

7. TROUBLESHOOTING

- **Tractor not responding:**

- Check if batteries are correctly installed in both the tractor and the remote control.
- Ensure batteries are not depleted. Replace if necessary.
- Verify that the battery contacts are clean and making proper connection.
- Ensure there are no obstructions between the remote control and the tractor.
- The remote control uses infrared technology, so direct line of sight is generally required.

- **Limited range:**

- Ensure batteries are fresh.
- Reduce distance between the remote and the tractor.

8. SPECIFICATIONS

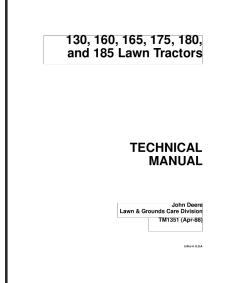
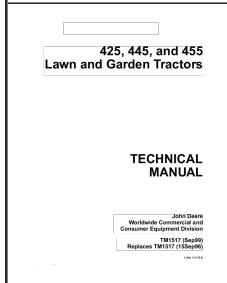
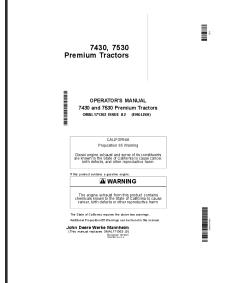
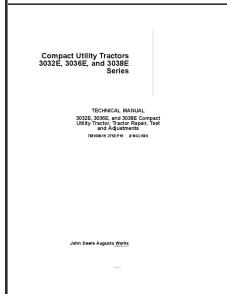
Model Number	42946A1
Brand	John Deere
Product Dimensions	15.98 x 11.99 x 27.99 cm
Product Weight	454 g
Recommended Age	18 months - 8 years
Tractor Batteries	3 x AA (included)
Remote Control Batteries	1 x 9V (not included)
Material Type	Plastic (100% composition)
Remote Control Type	Infrared
Number of RC Channels	4
Color	Green, Yellow, Black
Educational Value	Motor skill development, hand-eye coordination, cause and effect, imaginative play

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official John Deere website. Keep your purchase receipt as proof of purchase.

© 2025 John Deere. All rights reserved.

Related Documents - 42946A1

	<p><u>John Deere 6110M, 6120M, 6130M, 6145M Tractors: Specifications and Options</u></p> <p>Comprehensive guide detailing the specifications, features, and extensive configuration options for John Deere 6110M, 6120M, 6130M, and 6145M Cab and Open Operator Station tractors. Includes engine, transmission, hydraulic, PTO, and tire details.</p>
 <p>130, 160, 165, 175, 180, and 185 Lawn Tractors</p> <p>TECHNICAL MANUAL</p> <p>John Deere Lawn & Grounds Care Division TM1351 (Apr-08)</p> <p>U.S.A.</p>	<p><u>John Deere 130-185 Lawn Tractors Technical Manual TM1351</u></p> <p>This technical manual provides service and repair information for John Deere 130, 160, 165, 175, 180, and 185 Lawn Tractors. It includes general information, engine, fuel, electrical, power train, steering, brakes, safety procedures, and operational checkout details.</p>
 <p>425, 445, and 455 Lawn and Garden Tractors</p> <p>TECHNICAL MANUAL</p> <p>John Deere Worldwide Commercial and Consumer Equipment Division TM1517 (15Sep00) Replaces TM1517 (15Sep00)</p> <p>U.S.A.</p>	<p><u>John Deere 425, 445, and 455 Lawn and Garden Tractors Technical Manual</u></p> <p>Comprehensive technical manual (TM1517) for John Deere 425, 445, and 455 Lawn and Garden Tractors. Covers safety, specifications, engine, power train, steering, brakes, hydraulics, and repair procedures for experienced technicians.</p>
 <p>REPLACEMENT PARTS GUIDE 872G and 872GP Motor Grader Parts and Service Intervals Guide</p> <p>John Deere</p>	<p><u>John Deere 872G & 872GP Motor Grader Parts and Service Intervals Guide</u></p> <p>This guide provides essential replacement parts information, fluid capacities, and detailed service intervals for John Deere 872G and 872GP Motor Graders, including part numbers and recommended maintenance schedules.</p>
 <p>7430, 7530 Premium Tractors</p> <p>OPERATOR'S MANUAL 7430 and 7530 Premium Tractors DIRECTOR Model #J7430</p> <p>John Deere Precision Tractors DANGER: PRECAUTIONS DANGER: PRECAUTIONS WARNING WARNING</p> <p>John Deere Works Manual John Deere Works Manual</p>	<p><u>John Deere 7430, 7530 Premium Tractors Operator's Manual</u></p> <p>Operator's manual for John Deere 7430 and 7530 Premium Tractors, covering safe operation, controls, maintenance, and specifications. Essential guide for owners and operators.</p>
 <p>Compact Utility Tractors 3032E, 3036E, and 3038E Series</p> <p>TECHNICAL MANUAL 3032E, 3036E, and 3038E Compact Utility Tractor Operator, Test and Adjustment</p> <p>John Deere AgriTech</p>	<p><u>John Deere 3032E, 3036E, 3038E Series Compact Utility Tractors Technical Manual</u></p> <p>This technical manual provides comprehensive repair, test, and adjustment procedures for John Deere 3032E, 3036E, and 3038E Series Compact Utility Tractors. It includes essential safety information, detailed sections on engine, fuel, cooling, lubrication, electrical systems, hydraulics, drivetrain, and more.</p>