

Smoby SM 3102091

Smoby Friends House Playhouse Instruction Manual

Model: SM 3102091

INTRODUCTION

Thank you for choosing the Smoby Friends House Playhouse. This manual provides essential information for the safe assembly, operation, and maintenance of your new playhouse. Please read all instructions carefully before assembly and retain this manual for future reference.

The Smoby Friends House is a spacious and engaging playhouse designed for children, featuring multiple play areas, a removable picnic table, 360-degree opening shutters, an electronic doorbell, and flower pots. Constructed from UV-treated plastic, it is designed for durability and color retention over time.

SAFETY INFORMATION

- **Age Recommendation:** This product is suitable for children aged 36 months to 8 years. It is not appropriate for children under 3 years due to small parts and potential choking hazards.
- **Adult Supervision:** Adult supervision is required at all times when children are playing with the house.
- **Assembly:** Assembly must be performed by an adult. Ensure all parts are securely fastened before allowing children to play.
- **Placement:** Place the playhouse on a flat, level surface, away from hazards such as steep drops, fences, or other structures. Ensure adequate clear space around the playhouse.
- **Batteries:** The electronic doorbell requires 2 x LR06 (AA) batteries (not supplied). Always insert batteries with the correct polarity. Do not mix old and new batteries, or different types of batteries. Remove exhausted batteries promptly.
- **Material:** The playhouse is made of plastic. Avoid exposing it to extreme heat sources or open flames.

PACKAGE CONTENTS

Please check the box to ensure all components are present before beginning assembly. The package should include:

- All structural panels for the house (walls, roof sections)

- 2 x 360° opening shutters
- 1 x Removable picnic table with 2 benches
- 1 x Electronic doorbell unit
- 2 x Flower pots
- All necessary fasteners and connectors
- Instruction manual (this document)

If any parts are missing or damaged, please contact Smoby customer support.

SETUP (ASSEMBLY INSTRUCTIONS)

Assembly of the Smoby Friends House Playhouse requires adult supervision and approximately 1-2 hours. A screwdriver with a large tip may be required for certain steps, such as attaching the chimney and doorbell.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Verify all parts are present against the package contents list.
2. **Assemble Base:** Connect the floor panels and lower wall sections according to the diagrams in the detailed assembly guide provided in the product box. Ensure all connections are secure.
3. **Install Walls:** Attach the main wall panels, ensuring they slot correctly into the base and each other.
4. **Attach Roof:** Secure the roof sections to the top of the wall panels. Pay close attention to the alignment for proper fit and stability.
5. **Install Shutters and Doors:** Attach the 360° opening shutters to the designated window openings and install any doors.
6. **Assemble Picnic Table:** Construct the picnic table with its two benches. This unit is designed to be removable and can be placed inside or outside the playhouse.
7. **Install Electronic Doorbell:** Locate the designated area for the doorbell. Insert 2 x LR06 (AA) batteries into the doorbell unit, ensuring correct polarity. Secure the doorbell to the playhouse structure using the provided fasteners.
8. **Attach Flower Pots:** Clip or attach the flower pots to their designated locations.
9. **Final Check:** Before allowing children to play, thoroughly check all connections, screws, and fasteners to ensure they are tight and secure.

For detailed, step-by-step visual instructions, please refer to the dedicated assembly manual included in your product packaging.



Image: The Smoby Friends House Playhouse fully assembled, showing its spacious design and various play features with children enjoying it.

OPERATING INSTRUCTIONS

Electronic Doorbell

- To activate the doorbell sound, press the button on the doorbell unit.
- Requires 2 x LR06 (AA) batteries (not included).



Image: A detailed view of the electronic doorbell unit, highlighting its design and button.

360° Opening Shutters

- The playhouse features shutters that can rotate 360 degrees.
- Children can open or close the shutters to adjust light and airflow, or to create different play scenarios.

Removable Picnic Table

- The picnic table with two benches can be easily attached or detached from the playhouse.
- It can be used inside the playhouse for indoor activities or moved outside for outdoor dining and play.

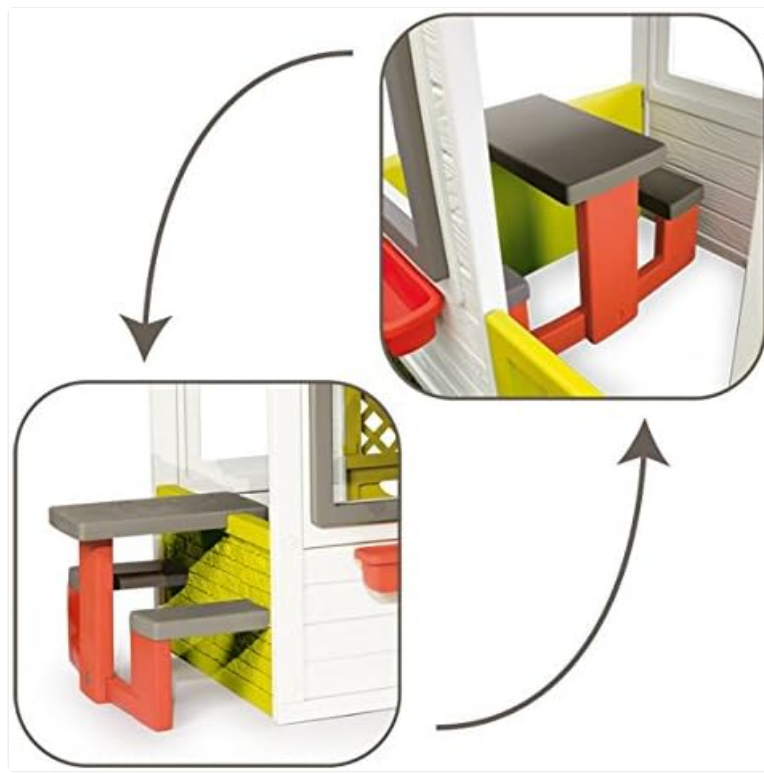


Image: A visual guide illustrating how the picnic table can be positioned both inside and outside the playhouse for versatile use.



Image: A detailed view of the picnic table and benches, showing its attachment to the exterior of the playhouse.

MAINTENANCE

- **Cleaning:** Clean the playhouse regularly with a damp cloth and mild soap. Avoid abrasive cleaners or solvents that could damage the plastic.
- **UV Treatment:** The plastic components are UV-treated to help prevent fading and degradation from sun exposure. However, prolonged exposure to harsh weather conditions can still affect the product's lifespan.

- **Seasonal Storage:** During extreme weather conditions (heavy snow, strong winds), consider disassembling and storing the playhouse indoors or covering it to extend its life.
- **Inspection:** Periodically check all screws, bolts, and connections to ensure they remain tight and secure. Replace any worn or damaged parts immediately.

TROUBLESHOOTING

Doorbell Not Working

- **Check Batteries:** Ensure 2 x LR06 (AA) batteries are correctly inserted with the proper polarity.
- **Replace Batteries:** If the batteries are old or depleted, replace them with new ones.
- **Connection:** Verify the doorbell unit is securely attached and its internal connections are not loose (if accessible).

Loose Parts

- **Tighten Fasteners:** Regularly check and tighten all screws, bolts, and connectors.
- **Inspect for Damage:** If a part repeatedly comes loose or appears damaged, inspect it for cracks or wear and replace if necessary.

SPECIFICATIONS

Feature	Detail
Model Number	SM 3102091
Product Dimensions (L x W x H)	171 x 172 x 217 cm
Item Weight	34.5 Kilograms
Material	Plastic
Manufacturer Recommended Age	36 months - 8 years
Number of Windows	6
Assembly Required	Yes
Doorbell Batteries	2 x LR06 (AA) batteries (not included)
Components Included	1 house
Manufacturer	Smoby

WARRANTY AND SUPPORT

Smoby products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Smoby website.

If you encounter any issues, require replacement parts, or have questions not covered in this manual, please contact Smoby customer support. Contact details can typically be found on the product packaging or the official Smoby website.

Please have your product model number (SM 3102091) and proof of purchase ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question