

## FAO Schwarz 1977872

# FAO Schwarz Pin Ball - Teddy Bear Instruction Manual

Model: 1977872

## INTRODUCTION

---

Thank you for choosing the FAO Schwarz Pin Ball - Teddy Bear. This classic-style pinball game provides engaging entertainment. This manual contains important information regarding the setup, operation, and maintenance of your new toy. Please read it thoroughly before use and retain it for future reference.

## IMPORTANT SAFETY INFORMATION

---

- This product contains small parts (metal balls) and is not suitable for children under 3 years of age due to choking hazards.
- Adult supervision is recommended during play.
- Do not attempt to disassemble the toy.
- Keep away from extreme temperatures and direct sunlight to prevent damage.

## PRODUCT COMPONENTS

---

The FAO Schwarz Pin Ball - Teddy Bear includes the following:

- 1 x Pin Ball Game Unit (featuring a teddy bear design with scoring pockets)
- Multiple Metal Balls (pre-loaded within the game unit)
- 1 x Spring-loaded Plunger Mechanism



Image: The FAO Schwarz Pin Ball game, showcasing the teddy bear design, scoring pockets, and the plunger mechanism with metal balls.

## SETUP INSTRUCTIONS

---

1. Carefully remove the Pin Ball game from its packaging.
2. Ensure all protective films or ties are removed.
3. Place the game on a flat, stable surface for optimal play. No assembly is required.

## OPERATING INSTRUCTIONS

---

Follow these steps to play the FAO Schwarz Pin Ball game:

1. **Load a Ball:** Ensure a metal ball is positioned at the bottom of the launching track, ready for the plunger.
2. **Launch the Ball:** Pull back the red spring-loaded plunger located on the right side of the game unit. Release the plunger to launch the metal ball onto the playfield.
3. **Score Points:** Guide the ball by gently tilting the game unit. Aim for the various scoring pockets marked with numbers (e.g., 100, 200, 300, 400, 500, 600) on the teddy bear's body and around the edges.
4. **Collect Score:** Keep track of your score as the ball lands in different pockets. The goal is to achieve the highest possible score.
5. **Replay:** Once a ball falls to the bottom, another ball will typically be ready for launch. Continue playing until all balls have been used or you wish to restart.

The game encourages hand-eye coordination and strategic thinking as players attempt to land balls in higher-scoring zones.

## MAINTENANCE

---

- **Cleaning:** Wipe the surface of the game unit with a soft, dry, or slightly damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the game in a cool, dry place away from direct sunlight when not in use.

## TROUBLESHOOTING

---

Problem	Solution
Ball gets stuck on the playfield.	Gently tilt or shake the game unit to dislodge the ball. Avoid excessive force.
Plunger mechanism feels stiff.	Ensure no debris is obstructing the plunger's movement. Do not apply lubricants.

## SPECIFICATIONS

---

Feature	Detail
Product Dimensions	11.1 x 5.6 x 0.7 inches
Item Weight	3.2 ounces
Model Number	1977872
ASIN	B009R9FUIW
Manufacturer	FAO Schwarz

## WARRANTY AND SUPPORT

---

Specific warranty details for the FAO Schwarz Pin Ball - Teddy Bear are not provided in this manual. For information regarding warranty coverage or customer support, please refer to the product packaging or contact FAO Schwarz directly through their official website or customer service channels.

