

[Manuals.plus](#) /

› [Inter Link](#) /

› Inter Link Eboli 19300350 Dresser User Manual

Inter Link 19300350

Inter Link Eboli 19300350 Dresser User Manual

Model: 19300350

INTRODUCTION

Thank you for choosing the Inter Link Eboli 19300350 Dresser. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read these instructions carefully before beginning assembly and retain them for future reference.



Figure 1: Inter Link Eboli 19300350 Dresser, front view. This image displays the assembled Inter Link Eboli 19300350 Dresser, featuring three doors and two drawers in a Sonoma oak and white finish.

SAFETY INFORMATION

Please observe the following safety guidelines to prevent injury or damage to the product:

- **Assembly:** This product requires assembly. Ensure all parts are present and undamaged before starting. Do not use power tools for assembly unless specifically instructed, as this may overtighten screws and damage the material.
- **Stability:** For safety, it is recommended to secure the dresser to a wall using appropriate anti-tip hardware (not included) to prevent tipping, especially in households with children.
- **Weight Capacity:** Do not overload drawers or shelves. Distribute weight evenly.
- **Placement:** Place the dresser on a flat, stable surface. Avoid placing it near heat sources or in direct sunlight to prevent material degradation.

- **Children:** Keep small parts and packaging materials away from children during assembly.

PARTS LIST

Before assembly, verify that all components are present. Refer to the included assembly diagram for specific part identification.

- Side Panels (Left, Right)
- Top Panel
- Bottom Panel
- Back Panel
- Shelves (as indicated in diagram)
- Drawer Fronts (2)
- Drawer Sides, Backs, Bottoms
- Door Panels (3)
- Plastic Handles (5)
- Metal Guide Ways for Drawers
- Hinges for Doors
- Assembly Hardware (screws, dowels, cam locks, etc.)



Figure 2: Close-up of dresser handles. This image shows a detailed view of the plastic handles used on the drawers and doors.

ASSEMBLY INSTRUCTIONS

Assembly is required for this dresser. It is recommended that two adults assemble this product. Please follow the step-by-step instructions provided in the separate assembly diagram included with your purchase. A general overview of the

process is as follows:

1. **Prepare Workspace:** Clear a spacious area and lay out all components on a soft, clean surface to prevent scratches.
2. **Assemble Frame:** Attach side panels to the bottom and top panels using the provided hardware (dowels, cam locks, screws).
3. **Install Back Panel:** Secure the back panel to the assembled frame.
4. **Assemble Drawers:** Construct the two drawers by attaching sides, back, and bottom to the drawer fronts. Install the metal guide ways onto the drawer sides and corresponding frame sections.
5. **Install Doors:** Attach hinges to the three door panels and then secure the doors to the dresser frame. Adjust hinges for proper alignment.
6. **Attach Handles:** Fasten the five plastic handles to the drawer fronts and door panels.
7. **Insert Shelves:** Place any internal shelves into the designated positions.
8. **Final Check:** Ensure all screws are tightened and the dresser is stable.



Figure 3: Drawer mechanism detail. This image provides a close-up view of an open drawer, showcasing the metal guide ways that facilitate smooth drawer movement.

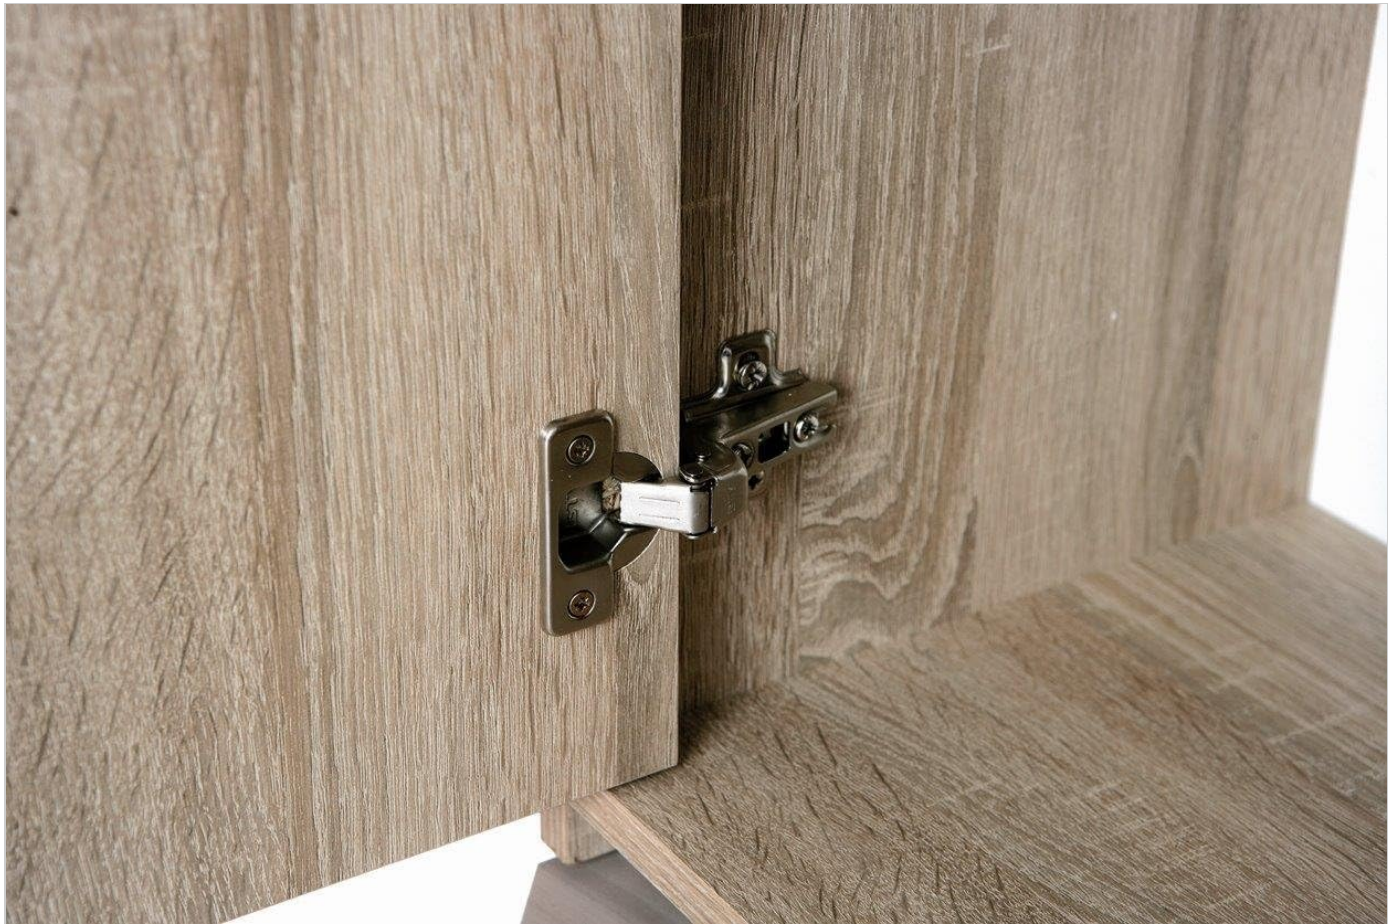


Figure 4: Door hinge detail. This image displays a detailed view of the hinge mechanism for one of the dresser's doors, illustrating its construction.

OPERATING INSTRUCTIONS

The Inter Link Eboli 19300350 Dresser is designed for storing clothing, linens, and other household items. To operate:

- **Drawers:** Gently pull the handles to open drawers. Push firmly to close. Avoid slamming drawers to prevent damage to the guide ways.
- **Doors:** Use the handles to open and close the three doors. Ensure doors are fully closed to protect contents.
- **Loading:** Distribute items evenly within drawers and on shelves. Avoid placing excessively heavy items in one area.

CARE AND MAINTENANCE

Proper care will extend the life and appearance of your dresser:

- **Cleaning:** Wipe the surface with a dry, soft cloth. For stubborn marks, a slightly damp cloth followed by a dry cloth can be used. Avoid abrasive cleaners or harsh chemicals.
- **Spills:** Immediately wipe up any spills to prevent moisture damage to the melamine coating.
- **Inspection:** Periodically check all screws and fittings to ensure they are tight. Retighten if necessary.
- **Environment:** Maintain a stable room temperature and humidity. Extreme fluctuations can affect wood-based materials.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Drawers stick or do not slide smoothly.	Misaligned guide ways, loose screws, or obstruction.	Check that guide ways are properly aligned and screws are tight. Remove any obstructions.
Doors do not close properly or are misaligned.	Hinges are loose or require adjustment.	Tighten hinge screws. Adjust hinge settings to align doors.
Dresser feels wobbly.	Loose assembly hardware.	Ensure all assembly screws and cam locks are fully tightened. Place on a level surface. Consider wall anchoring.
Scratches or minor surface damage.	Impact or abrasive contact.	For minor scratches, touch-up pens or furniture repair kits matching the Sonoma oak/white finish may be used.

SPECIFICATIONS

Model: Inter Link Eboli 19300350

Dimensions (W x H x D): 76.99 cm x 76.99 cm x 30 cm (approximately 30.3 x 30.3 x 11.8 inches)

Weight: 22.4 kg (approximately 49.4 lbs)

Material: KF board with melamine coating (Sonoma oak/white finish)

Features: 3 doors, 2 drawers, 5 plastic handles, metal guide ways

Assembly Required: Yes

Care Instructions: Wipe with dry cloth



Figure 5: Dresser dimensions. This diagram illustrates the width, height, and depth of the Inter Link Eboli 19300350 Dresser.

WARRANTY AND SUPPORT

Specific warranty details are typically provided with your purchase documentation. For any missing parts, assembly assistance, or product inquiries, please contact your retailer or the manufacturer, Inter Link, directly. Please have your model number (19300350) and purchase date available when contacting support.

© 2023 Inter Link. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question