

Beko GNE 114613 X

Beko GNE 114613 X Foodcenter Instruction Manual

Model: GNE 114613 X

1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this appliance to ensure safe and efficient operation. Keep this manual for future reference.

- **Electrical Safety:** Ensure the appliance is connected to a grounded outlet. Do not use extension cords or adapters. Disconnect power before cleaning or maintenance.
- **Ventilation:** Maintain adequate ventilation around the appliance to prevent overheating. Do not block air vents.
- **Children:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- **Flammable Materials:** Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- **Disposal:** Dispose of the appliance according to local regulations for refrigerants and flammable blowing gas.

2. PRODUCT OVERVIEW

The Beko GNE 114613 X is a No Frost Foodcenter designed for efficient food preservation. This side-by-side appliance features a stainless steel finish, four doors, and a convertible lower right compartment that can function as either a freezer or a refrigerator. It boasts an A++ energy rating and a total net capacity of 565 liters.



Figure 2.1: Front view of the Beko GNE 114613 X Foodcenter. This image displays the appliance's four-door design and stainless steel exterior.

Key features include an automatic defrost system, adjustable temperature control, and a specialized egg holder for convenience.

3. INSTALLATION (SETUP)

3.1 Unpacking

Carefully remove all packaging materials. Inspect the appliance for any damage incurred during transit. Keep packaging materials out of reach of children.

3.2 Placement

- Place the appliance on a firm, level surface. Use the adjustable feet to level the unit if necessary.
- Ensure adequate space for air circulation around the appliance. Leave at least 10 cm (4 inches) of space at the back and sides, and 30 cm (12 inches) above.
- Avoid placing the appliance near heat sources such as direct sunlight, ovens, or radiators, as this will increase energy consumption.

3.3 Electrical Connection

Connect the appliance to a dedicated, grounded electrical outlet with the correct voltage and frequency as indicated on the rating label. Do not use multi-sockets or extension cords.

3.4 Initial Use

After placement and electrical connection, wait at least 4 hours before plugging in the appliance. This allows the refrigerant to settle. Before loading food, clean the interior thoroughly.

4. OPERATION

4.1 Temperature Control

The Beko GNE 114613 X features adjustable temperature controls for both the refrigerator and freezer compartments. Use the electronic control panel, typically located on the door or inside the appliance, to set desired temperatures. Refer to the on-screen display or indicator lights for current settings.

4.2 Convertible Compartment

The lower right compartment offers flexibility, allowing it to be used as either a freezer or a refrigerator. Select the desired mode via the control panel. Ensure the compartment is empty before changing its function to avoid damaging food items.

4.3 Food Storage Guidelines

- Store raw meat and fish in sealed containers on the lowest shelf of the refrigerator to prevent dripping onto other foods.
- Wrap foods properly to maintain freshness and prevent odors from spreading.
- Do not place hot food directly into the appliance; allow it to cool to room temperature first.
- Utilize the provided egg holder for safe and organized storage of eggs.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance ensure optimal performance and longevity of your appliance.

5.1 General Cleaning

- **Interior:** Disconnect the power supply. Clean the interior with a solution of mild detergent and warm water. Rinse and dry thoroughly. Do not use abrasive cleaners or sharp objects.
- **Exterior:** Wipe the stainless steel exterior with a soft cloth and a non-abrasive stainless steel cleaner. Avoid harsh chemicals.
- **Door Seals:** Clean door seals regularly with warm soapy water to ensure a tight seal and prevent energy loss.

5.2 Defrosting

This appliance features a **No Frost** (automatic defrost) system, eliminating the need for manual defrosting of the freezer compartment. Any accumulated frost will be automatically removed.

5.3 Power Outage

In case of a power outage, keep the doors closed to maintain the internal temperature for as long as possible. Avoid opening the doors unnecessarily.

6. TROUBLESHOOTING

Before contacting customer service, review the following common issues and their potential solutions.

Problem	Possible Cause	Solution
Appliance does not operate.	No power supply; plug not inserted correctly; fuse blown.	Check power connection; ensure plug is fully inserted; check household fuse/circuit breaker.
Temperature inside is not cold enough.	Door opened too frequently; large amount of warm food added; poor ventilation; temperature setting too high.	Reduce door openings; allow hot food to cool before storing; ensure proper ventilation; adjust temperature setting lower.
Excessive noise.	Appliance not level; objects touching the back wall; normal compressor operation.	Level the appliance using adjustable feet; ensure nothing is touching the back; some noise from the compressor is normal.

Problem	Possible Cause	Solution
Water on the floor.	Drain hole blocked; water collection tray overflowing.	Clear the drain hole; check and empty the water collection tray if accessible.

7. SPECIFICATIONS

Model Name: GNE 114613 X

Brand: Beko

Configuration: Side-by-side

Total Net Capacity: 565 Liters

Refrigerator Capacity: 155 Liters

Defrost System: Automatic (No Frost)

Energy Class: A++

Finish: Stainless Steel

Special Feature: Convertible lower right compartment, Egg holder

Weight: 120 kg

8. WARRANTY AND SUPPORT

For warranty information, technical support, or to purchase replacement parts, please contact Beko customer service. Refer to your purchase documentation for specific warranty terms and contact details in your region. Always provide the model number (GNE 114613 X) when seeking assistance.