

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [LAFAYETTE](#) /

> [Lafayette TU-8C Universal Remote Control Instruction Manual](#)

LAFAYETTE TU-8C

Lafayette TU-8C Universal Remote Control Instruction Manual

Model: TU-8C (f07-TLC252)

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Lafayette TU-8C Universal Remote Control. The TU-8C is an 8-in-1 universal remote designed to control various electronic devices, including televisions and air conditioners, simplifying your home entertainment and climate control experience.



Image: The Lafayette TU-8C Universal Remote Control, featuring a black casing with various control buttons for power, channel, volume, numeric input, and device selection.

SETUP

1. Battery Installation

1. Open the battery compartment cover located on the back of the remote control.
2. Insert two (2) AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
3. Close the battery compartment cover securely.

2. Device Programming (Code Setup)

The Lafayette TU-8C can be programmed using either Direct Code Entry or Automatic Code Search. Refer to the code list provided with your remote (if applicable) for specific device codes.

Direct Code Entry:

1. Turn on the device you wish to control (e.g., TV, Air Conditioner).
2. Press and hold the **SET** button on the remote until the indicator light illuminates.
3. Press the corresponding device button (e.g., **TV**, **AC**) once. The indicator light will blink.
4. Enter the 3-digit or 4-digit code for your device brand from the code list using the numeric keypad.
5. If the code is valid, the indicator light will turn off. Test the remote's functions (e.g., Power, Volume). If the device does not respond, repeat the process with the next code for your brand.

Automatic Code Search:

1. Turn on the device you wish to control.
2. Press and hold the **SET** button on the remote until the indicator light illuminates.
3. Press the corresponding device button (e.g., **TV**, **AC**) once. The indicator light will blink.
4. Point the remote at the device and repeatedly press the **POWER** button (or **CH+** for TV, **TEMP+** for AC) until the device turns off or responds.
5. Once the device responds, immediately press the **SET** button to save the code. The indicator light will turn off.
6. Test the remote's functions. If the device does not respond correctly, repeat the search process.

OPERATING INSTRUCTIONS

After successful programming, select the desired device mode (e.g., **TV**, **AC**) by pressing the corresponding device button once. The remote will then control that specific device.

- **Power Button:** Turns the selected device on or off.
- **Numeric Keypad (0-9):** For direct channel input on TVs or setting specific values on other devices.
- **CH+/CH-:** Changes channels up or down on TVs.
- **VOL+/VOL-:** Adjusts volume up or down on TVs.
- **MUTE:** Mutes or unmutes the audio on TVs.
- **Input/Source:** Changes the input source on TVs.
- **Menu/OK/Navigation Arrows:** Navigates menus on compatible devices.
- **AC Specific Buttons (if applicable):** Buttons like **TEMP+**, **TEMP-**, **MODE**, **FAN** control air conditioner functions.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's range decreases or the indicator light fails to illuminate. Always replace both batteries simultaneously with new ones of the same type.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If not used for extended periods, remove the batteries to prevent leakage.

TROUBLESHOOTING

- **Remote not working:**
 - Check if batteries are inserted correctly and are not depleted. Replace if necessary.
 - Ensure there is a clear line of sight between the remote's IR emitter and the device's IR receiver.
 - Verify that the correct device mode button (e.g., TV, AC) has been selected.
- **Device not responding or limited functionality:**
 - The programmed code may be incorrect or only partially compatible. Try reprogramming the remote using a different code for your device brand or use the automatic code search function.
 - Some advanced functions may not be supported by all universal remote codes.
- **Indicator light does not illuminate:**
 - Check batteries. They may be dead or incorrectly inserted.

SPECIFICATIONS

Feature	Detail
Brand	LAFAYETTE
Model	TU-8C (f07-TLC252)
Product Weight	9.07 g
Compatible Devices	Air Conditioner, Television
Special Feature	Universal
Max Supported Devices	8
Connectivity Technology	Infrared
Maximum Range	8 Meters

WARRANTY INFORMATION

For detailed warranty information, please refer to the warranty card included with your purchase or visit the official LAFAYETTE website. Keep your proof of purchase for warranty claims.

SUPPORT

If you encounter issues not covered in this manual or require further assistance, please contact LAFAYETTE customer support. Contact details can typically be found on the manufacturer's website or in your product packaging.

Note: Always consult the specific code list that came with your remote for the most accurate device codes.