

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Trevi](#) /

› [Trevi TT 1040 BT Vintage Turntable System User Manual](#)

Trevi TT 1040 BT

Trevi TT 1040 BT Vintage Turntable System

User Manual

1. INTRODUCTION

Thank you for purchasing the Trevi TT 1040 BT Vintage Turntable System. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

- Ensure the power supply matches the requirements specified on the unit (AC 230V 50Hz).
- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Do not block ventilation openings.
- Place the unit on a stable, flat surface.
- Avoid placing the unit near heat sources or in direct sunlight.
- Unplug the unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Please check that all items are present:

- Trevi TT 1040 BT Turntable System
- User Manual
- Warranty Certificate
- Spare Stylus (if included)
- 45 RPM adapter

4. PRODUCT OVERVIEW

The Trevi TT 1040 BT features a vintage design with modern functionalities. Below are the main components and controls.



Figure 1: Front view of the Trevi TT 1040 BT Turntable System, showing the radio dial, control knobs, and front panel inputs.

Front Panel Controls:

- 1. Power/Volume Knob:** Turns the unit on/off and adjusts volume.
- 2. Function Selector:** Switches between Phono, USB, Bluetooth, AUX, and Radio modes.
- 3. Tuning Knob:** Adjusts radio frequency in AM/FM mode.
- 4. Radio Dial:** Displays current radio frequency.
- 5. USB Port:** For MP3 playback from USB drives.
- 6. AUX-IN Jack:** Connect external audio devices.
- 7. Headphone Jack:** For private listening.
- 8. Play/Pause/Stop Buttons:** For USB/Bluetooth playback.



Figure 2: Close-up view of the front panel, highlighting the USB port, headphone jack, and control buttons.

Turtable Section:

1. **Dust Cover:** Protects the turntable.
2. **Platter:** Where records are placed.
3. **Spindle:** Holds the record.
4. **45 RPM Adapter:** For playing 7-inch records with large center holes.
5. **Tone Arm:** Holds the stylus.
6. **Stylus (Needle):** Reads the grooves of the record.
7. **Speed Selector:** Switches between 33, 45, and 78 RPM.
8. **Auto-Stop Switch:** Enables/disables automatic tone arm return.

5. SETUP

1. **Unpacking:** Carefully remove the unit from its packaging. Retain packaging for future transport.
2. **Placement:** Place the unit on a stable, level surface away from direct sunlight, heat sources, and excessive dust or vibration.
3. **Power Connection:** Connect the AC power cord to the unit's power input and then to a standard AC 230V 50Hz wall outlet.
4. **Dust Cover:** Remove any protective materials from the turntable platter and tone arm.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off and Volume

Rotate the **Power/Volume Knob** clockwise to turn the unit on and increase the volume. Rotate counter-clockwise to decrease volume and turn off the unit.

6.2 Turntable Operation

1. Lift the dust cover.
2. Place a record on the turntable platter. If playing a 7-inch record with a large center hole, use the 45 RPM adapter.
3. Select the appropriate speed (33, 45, or 78 RPM) using the **Speed Selector** switch.
4. Set the **Auto-Stop Switch** to ON for automatic tone arm return at the end of the record, or OFF for manual control.
5. Move the **Function Selector** to "PHONO".
6. Gently lift the tone arm and position the stylus over the desired track of the record. Lower the tone arm slowly onto the record.
7. Adjust the volume using the **Power/Volume Knob**.
8. At the end of the record, if auto-stop is ON, the tone arm will return to its rest position. Otherwise, manually lift and return the tone arm.

6.3 Bluetooth Pairing

1. Move the **Function Selector** to "BT" (Bluetooth). The unit will enter pairing mode, indicated by a flashing indicator light.
2. Enable Bluetooth on your external device (e.g., smartphone, tablet) and search for available devices.
3. Select "Trevi TT 1040 BT" from the list of devices.
4. Once paired, the indicator light will stop flashing, and you can play audio from your device through the turntable system.

6.4 USB Playback

1. Insert a USB flash drive containing MP3 audio files into the **USB Port**.
2. Move the **Function Selector** to "USB".
3. The unit will automatically begin playing MP3 files from the USB drive.
4. Use the Play/Pause/Stop buttons on the front panel to control playback.

6.5 AM/FM Radio

1. Move the **Function Selector** to "RADIO".
2. Select either AM or FM band using the band switch (if available, otherwise it's usually a single mode or auto-detect).
3. Rotate the **Tuning Knob** to search for desired radio stations.
4. The frequency will be displayed on the **Radio Dial**.

6.6 AUX-IN Connection

1. Connect an external audio device (e.g., smartphone, CD player) to the **AUX-IN Jack** using a 3.5mm audio cable (not included).
2. Move the **Function Selector** to "AUX".
3. Play audio from your external device. The sound will be output through the turntable system's speakers.

6.7 Headphone Use

Plug 3.5mm headphones into the **Headphone Jack** for private listening. The internal speakers will be muted automatically.

7. MAINTENANCE

- Cleaning the Unit:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Stylus Care:** The stylus is delicate. Handle it with care. Clean the stylus periodically with a soft brush, brushing from back to front.
- Record Care:** Keep records clean and free of dust. Store them vertically in their sleeves.
- Dust Cover:** Keep the dust cover closed when not in use to protect the turntable.
- Stylus Replacement:** The stylus has a limited lifespan (approx. 300-500 hours of play). Replace it when sound quality deteriorates. Refer to the manufacturer's website or authorized dealers for replacement styli.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet not active; Unit not turned on.	Ensure power cord is securely connected. Check power outlet. Rotate Power/Volume knob clockwise.
No sound from speakers	Volume too low; Function selector incorrect; Headphones connected.	Increase volume. Select correct function (PHONO, BT, USB, AUX, RADIO). Disconnect headphones.
Turntable not spinning	Unit not powered on; Function selector not on PHONO; Tone arm not lowered.	Ensure unit is on. Select PHONO mode. Lower tone arm onto record.
Poor sound quality from records	Record dirty or damaged; Stylus dirty or worn; Incorrect speed selected.	Clean record. Clean or replace stylus. Select correct RPM speed.
Bluetooth pairing failure	Unit not in BT mode; Device too far; Bluetooth disabled on external device.	Ensure function selector is on BT. Move device closer. Enable Bluetooth on external device.
USB playback not working	USB drive not inserted correctly; USB drive not formatted correctly; Files not MP3.	Reinsert USB drive. Ensure USB drive is FAT32 formatted. Check if files are MP3 format.

9. SPECIFICATIONS

Model Name:	Trevi TT 1040 BT
Product Type:	Vintage Turntable System
Brand:	Trevi
Turntable Speeds:	33, 45, 78 RPM
Connectivity:	Bluetooth, USB (MP3 playback), AUX-IN
Radio:	Analog AM/FM
Audio Output:	High-performance stereo speakers, Headphone Jack
Cabinet Material:	Wood
Power Supply:	AC 230V 50Hz

Dimensions (L x D x H):	480 x 255 x 320 mm
Weight:	6.5 kg

Specifications are subject to change without notice.

10. WARRANTY AND SUPPORT

This product comes with a warranty certificate. Please refer to the included warranty certificate for detailed terms and conditions.

- **Spare Parts Availability:** 2 Years
- For technical support or service inquiries, please contact your local dealer or visit the official Trevi website.

© 2024 Trevi. All rights reserved.