

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Nespresso](#) /

› [Nespresso Citiz Espresso Maker D111-US-BK-NE1 User Manual](#)

Nespresso D111-US-BK-NE1

Nespresso Citiz Espresso Maker D111-US-BK-NE1 User Manual

Model: D111-US-BK-NE1

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Nespresso Citiz Espresso Maker, model D111-US-BK-NE1. Please read this manual thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep the appliance out of reach of children.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only Nespresso coffee capsules with this machine.
- Avoid contact with hot surfaces.

PRODUCT COMPONENTS

Familiarize yourself with the main parts of your Nespresso Citiz machine:

- **Water Tank:** Removable tank for fresh water.
- **Capsule Insertion Lever:** Used to open and close the capsule chamber.
- **Espresso Button:** For brewing a standard espresso shot.
- **Lungo Button:** For brewing a longer coffee.
- **Coffee Outlet:** Where the brewed coffee dispenses.
- **Drip Tray:** Collects excess liquid and supports cups.
- **Used Capsule Container:** Stores used capsules after brewing.





Image: Front view of the Nespresso Citiz Espresso Maker, showcasing its sleek black design and chrome accents.



Image: Side view of the Nespresso Citiz Espresso Maker, highlighting the transparent removable water tank on the left.

SETUP AND FIRST USE

1. **Unpack the Machine:** Remove all packaging materials and place the machine on a stable, flat surface.
2. **Rinse the Water Tank:** Wash the water tank with fresh drinking water before filling.
3. **Fill the Water Tank:** Fill the water tank with fresh drinking water and place it back on the machine.
4. **Plug In:** Connect the power cord to a grounded electrical outlet.
5. **Turn On:** Press either the Espresso or Lungo button to turn on the machine. The buttons will blink while the machine preheats (approximately 25 seconds). They will glow steadily when ready.
6. **Initial Rinse Cycle:** Place a container (at least 1 liter) under the coffee outlet. Press the Lungo button three times to flush the system with water. This primes the pump and cleans the internal components.





Image: Top view of the Nespresso Citiz Espresso Maker, showing the capsule insertion area and the Espresso and Lungo buttons.

OPERATING INSTRUCTIONS

Brewing Coffee

1. **Ensure Water Tank is Full:** Check that the water tank contains sufficient fresh water.
2. **Turn On Machine:** Press either the Espresso or Lungo button. Wait for the buttons to stop blinking and glow steadily.
3. **Place Cup:** Position a cup under the coffee outlet. The pivoting cup tray can be adjusted for different cup sizes.
4. **Insert Capsule:** Lift the capsule insertion lever completely, insert a Nespresso capsule, and close the lever firmly.
5. **Select Coffee Volume:**
 - Press the **Espresso button** for a small cup (approx. 40 ml / 1.35 oz).
 - Press the **Lungo button** for a larger cup (approx. 110 ml / 3.7 oz).

The machine will automatically stop when the selected volume is reached.

6. **Eject Capsule:** After brewing, lift and close the lever to eject the used capsule into the internal container.

Programming Coffee Volume

You can customize the volume for the Espresso and Lungo buttons:

1. Turn on the machine and wait for it to preheat.
2. Insert a Nespresso capsule.
3. Press and hold the button you wish to program (Espresso or Lungo).
4. Release the button when the desired volume of coffee has been dispensed into your cup. The machine will remember this setting for future use.

Automatic Power Off

The machine features an energy-saving function and will automatically turn off after 9 minutes of inactivity.

MAINTENANCE AND CLEANING

Daily Cleaning

- **Empty and Clean Drip Tray & Used Capsule Container:** After each use, or when full, remove and empty the drip tray and used capsule container. Wash them with warm soapy water and rinse thoroughly.
- **Clean Water Tank:** Rinse the water tank daily with fresh drinking water.
- **Wipe Machine:** Wipe the machine's exterior with a soft, damp cloth. Do not use abrasive cleaning agents or immerse the machine in water.

Descaling

Regular descaling is crucial to maintain machine performance and coffee quality. The frequency depends on water hardness and usage. Refer to the Nespresso website or contact Nespresso Club for specific descaling instructions and descaling solution.

General Descaling Steps (always refer to Nespresso's official guide):

1. Empty the drip tray and used capsule container.
2. Fill the water tank with the Nespresso descaling solution mixed with water as per the solution's instructions.
3. Place a large container (at least 1 liter) under the coffee outlet.
4. Follow the specific descaling procedure for your Citiz model (often involves pressing and holding both coffee buttons for a few seconds to enter descaling mode).
5. Run the descaling solution through the machine.
6. Rinse the water tank and fill it with fresh water.
7. Run several cycles of fresh water through the machine to thoroughly rinse it.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No coffee, or only a few drops.	Water tank empty; machine not primed; capsule blocked.	Fill water tank; perform initial rinse cycle; check capsule for proper insertion or try a new one.
Coffee is not hot enough.	Cups not preheated; machine needs descaling.	Preheat cups with hot water; descale the machine.
Water leaking from machine.	Water tank not correctly positioned; drip tray full.	Ensure water tank is securely in place; empty and clean drip tray. If leaking persists, contact Nespresso Club.
Machine is noisy during operation.	Normal pump operation; air in the system.	Some noise is normal. If excessively loud, ensure water tank is full and machine is primed.
Coffee tastes weak or watery.	Machine needs descaling; incorrect coffee volume programmed.	Descalate the machine; reprogram coffee volume settings.

If the problem persists after attempting these solutions, please contact Nespresso Club for assistance.

SPECIFICATIONS

Feature	Detail
Brand	Nespresso
Model Name	D111-US-BK-NE1
Color	Black
Coffee Maker Type	Espresso Machine
Specific Uses	Espresso, Lungo

Feature	Detail
Special Feature	Programmable coffee volume, Automatic power off
Operation Mode	Fully Automatic
Pressure	19 Bar high pressure pump
Preheating Time	25 seconds
Water Tank Capacity	34 ounces (approx. 1 liter)
Used Capsule Capacity	Holds 10 used capsules
Voltage	110 Volts
Product Dimensions	14.6 x 5 x 10.9 inches
Item Weight	7.5 pounds

WARRANTY AND SUPPORT

For warranty information, technical support, or to order Nespresso capsules and descaling kits, please contact the Nespresso Club. They offer personalized advice and assistance for your machine.

Visit the official Nespresso website or refer to the documentation included with your machine for contact details specific to your region.

