

[Manuals.plus](#) /

› [PHILIPS](#) /

› PHILIPS MyLiving Spotlight Runner GU10 Halogen Bulb User Manual

PHILIPS My Living Runner (53092/31/16)

PHILIPS MyLiving Spotlight Runner User Manual

Model: My Living Runner (53092/31/16)

1. INTRODUCTION

Thank you for choosing the PHILIPS MyLiving Spotlight Runner. This product is designed to provide adjustable and efficient lighting for indoor spaces, particularly living rooms and bedrooms. Its metal construction and white finish offer a clean, modern aesthetic. This manual provides essential information for the safe installation, operation, and maintenance of your spotlight fixture.



This image displays the Philips MyLiving Spotlight Runner. It features a rectangular white base designed for ceiling or wall mounting, from which two cylindrical white spotlight heads extend. Each spotlight head contains a GU10 halogen bulb, emitting a warm light. The heads are adjustable, allowing the light to be directed as needed. The fixture is made of metal and has a clean, minimalist design.

2. SAFETY INFORMATION

- Always disconnect power before installation, maintenance, or bulb replacement.
- Installation should be performed by a qualified electrician if you are unsure.
- Ensure the voltage supply matches the product's requirements (220 Volts).
- Do not exceed the maximum wattage for the bulbs (35 Watts GU10 Halogen).
- This product is designed for indoor use only.
- Allow bulbs to cool completely before touching or replacing them.
- Keep packaging materials away from children.

3. PACKAGE CONTENTS

Please check that all components are present and undamaged:

- 1 x PHILIPS MyLiving Spotlight Runner fixture (White, Metal)
- Mounting hardware (screws, wall plugs) - *Bulbs are not included.*
- Instruction Manual

4. SETUP AND INSTALLATION

1. Prepare for Installation:

Ensure the power supply to the installation area is turned off at the main circuit breaker. Use a voltage tester to confirm the power is off.

2. Mark Mounting Points:

Position the fixture on the desired ceiling or wall location. Mark the drilling points for the mounting screws using a pencil.

3. Drill Holes:

Drill holes at the marked points. Insert appropriate wall plugs if mounting into drywall or plaster.

4. Connect Wiring:

Carefully connect the electrical wires from the ceiling/wall to the fixture's terminals. Ensure correct polarity (Live to Live, Neutral to Neutral, Earth to Earth). Secure all connections firmly.

5. Mount the Fixture:

Align the fixture with the drilled holes and secure it using the provided screws. Ensure the fixture is firmly attached and stable.

6. Install GU10 Bulbs:

Insert GU10 halogen bulbs (not included) into the spotlight heads. Align the two pins of the bulb with the two holes in the socket, push gently, and twist clockwise to lock the bulb in place.

7. Restore Power:

Once installation is complete and all connections are secure, restore power at the main circuit breaker.

5. OPERATING INSTRUCTIONS

- **Turning On/Off:** The spotlight fixture is operated via a standard wall switch (controller type: Push Button). Flip the switch to turn the lights on or off.
- **Adjusting Spotlights:** The individual spotlight heads are adjustable. Gently pivot or rotate each head to direct the light

beam to your desired area.

6. MAINTENANCE

- **Cleaning:** Disconnect power before cleaning. Wipe the fixture with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Bulb Replacement:**
 - a. Turn off power to the fixture at the circuit breaker.
 - b. Allow the old bulb to cool completely.
 - c. Grasp the GU10 bulb, push it gently inwards, and twist counter-clockwise to remove it.
 - d. Insert a new GU10 halogen bulb (max 35W) by aligning the pins, pushing gently, and twisting clockwise until it locks.
 - e. Restore power.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power supply; Loose wiring; Faulty bulb; Faulty switch.	Check circuit breaker; Verify wiring connections; Replace bulb; Test/replace switch.
Light flickers.	Loose bulb connection; Incorrect bulb type; Voltage fluctuations.	Ensure bulb is securely twisted in; Use correct GU10 halogen bulb; Consult electrician for voltage issues.
Spotlight head does not stay in position.	Adjusting mechanism is loose.	Gently tighten any visible screws on the pivot points if accessible, or contact customer support if the mechanism is faulty.

8. SPECIFICATIONS

Brand	PHILIPS
Model Name	My Living Runner
Model Number	53092/31/16
Material	Metal
Color	White
Light Type	Halogen
Bulb Base	GU10
Wattage	35 Watts (per bulb, bulbs not included)
Voltage	220 Volts
Light Colour	White (depends on bulb)
Color Temperature	2700 Kelvin (typical for halogen)

Average Life	2000 Hours (for typical halogen bulb)
Dimensions (LxWxH)	30.5 x 9 x 10.9 Centimeters
Item Weight	910 g
Usage	Indoor use only

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official PHILIPS website. Keep your proof of purchase for any warranty claims.
Manufacturer: Signify Innovations India Limited

© 2024 PHILIPS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question