

Gewa PS350110

Gewa Violin Case PS350110 4/4 Instruction Manual

Model: PS350110 | Size: 4/4

1. INTRODUCTION

The Gewa Violin Case PS350110 is designed to provide secure and reliable protection for your 4/4 size violin. Constructed with a durable Styrofoam shell and a robust exterior, it features a plush velvet interior to cradle your instrument safely. This manual outlines the proper use, setup, and care of your violin case.

Key Features:

- Styrofoam shell for lightweight yet sturdy protection.
- Screw-attached cover with an integrated music sheet pocket.
- Padded back and sides for enhanced instrument safety.
- Suspension carrying system to minimize impact.
- Two detachable rucksack straps and one shoulder strap for versatile carrying options.
- Dark blue TEX exterior and dark blue velvet interior.



Image: Side view of the violin case, highlighting its construction and protective feet.

2. SETUP AND INITIAL USE

Before placing your violin into the case, ensure all straps are correctly attached and the case is on a stable, flat surface.

1. **Attaching Straps:** The case comes with two detachable rucksack straps and one shoulder strap. Locate the D-rings on the back and sides of the case. Attach the metal clips of the straps securely to these D-rings. For backpack style, use the two rucksack straps on the back. For shoulder carry, use one strap on the side D-rings.
2. **Opening the Case:** Unzip the main zipper completely. Release the latches if present (this model primarily uses zippers and a screw-attached cover).
3. **Inspecting the Interior:** Before first use, check the velvet interior for any debris or loose particles that could scratch your instrument.



Image: Rear view of the violin case showing the attachment points for the two rucksack straps.

3. OPERATING INSTRUCTIONS

Properly securing your violin and accessories within the case is crucial for their protection during transport.

1. **Placing the Violin:** Gently place your 4/4 violin into the molded velvet interior. Ensure it sits snugly without force. The suspension system is designed to hold the instrument securely.
2. **Securing Bows:** The case features dedicated bow holders. Carefully place your bows into these holders and secure them with the rotating clips or Velcro straps provided.
3. **Accessory Compartments:** Utilize the various compartments for rosin, shoulder rest, and other small accessories. Ensure these items are secure and do not shift during transport.
4. **Music Sheet Pocket:** The screw-attached cover includes a pocket for music sheets. Place your sheets flat to prevent creasing.
5. **Closing the Case:** Ensure no items are protruding from the case before closing. Gently lower the lid and zip the main zipper completely. If applicable, secure any latches.



Image: Interior view of the violin case, highlighting the velvet lining and compartments.



Image: Detailed view of the interior velvet lining and bow holder mechanism.



Image: Close-up of the case handle and zipper closure.

4. MAINTENANCE AND CARE

Regular maintenance will prolong the life of your violin case and ensure continued protection for your instrument.

- **Exterior Cleaning:** Wipe the TEX exterior with a damp cloth to remove dust and dirt. Avoid harsh chemicals or abrasive cleaners.
- **Interior Cleaning:** Gently vacuum the velvet interior with a soft brush attachment to remove dust and rosin residue. Spot clean any stains with a mild fabric cleaner, testing on an inconspicuous area first. Allow to air dry completely before closing the case.
- **Zipper Care:** Periodically check zippers for smooth operation. If they become stiff, apply a small amount of zipper lubricant.
- **Strap Inspection:** Regularly inspect straps and their attachment points for signs of wear or damage. Replace worn straps immediately to prevent accidental drops.
- **Storage:** Store the case in a cool, dry place away from direct sunlight and extreme temperature fluctuations when not in use.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your violin case.

- **Problem:** Zipper is stuck or difficult to move.
Solution: Check for fabric caught in the zipper teeth. Apply a small amount of zipper lubricant (e.g., beeswax or a specialized zipper wax) to the teeth and gently work the zipper back and forth.
- **Problem:** Straps detach unexpectedly.
Solution: Ensure the metal clips are fully closed and securely latched onto the D-rings. Inspect the clips and D-rings for damage or deformation. If damaged, replace the strap or seek professional repair.
- **Problem:** Interior velvet appears flattened or dusty.

Solution: Use a soft brush or a vacuum cleaner with a low-power setting and brush attachment to gently lift the pile and remove dust.

- **Problem:** Case does not close properly.
Solution: Verify that no items inside the case are obstructing the lid or zipper path. Ensure the violin and accessories are correctly seated in their designated areas.

6. SPECIFICATIONS

Detailed specifications for the Gewa Violin Case PS350110 4/4.

| Feature | Detail |
|---------------------|--|
| Model Number | PS350110 |
| Size | 4/4 Violin |
| Exterior Material | TEX Fabric (Dark Blue) |
| Interior Material | Velvet (Dark Blue) |
| Shell Type | Styrofoam |
| Item Weight | Approximately 2.0 kg (4.4 lbs) |
| Product Dimensions | 30.91 x 11.02 x 5.69 inches (approximate exterior) |
| Carrying Options | 2 Detachable Rucksack Straps, 1 Shoulder Strap |
| Additional Features | Music Sheet Pocket, Padded Back and Sides, Suspension System |



Image: Front view of the Gewa Violin Case PS350110.






7. WARRANTY AND SUPPORT

For information regarding warranty coverage, product support, or replacement parts, please refer to the official Gewa website or contact your authorized Gewa dealer. Keep your purchase receipt as proof of purchase.

Manufacturer: Gewa

Date First Available: February 11, 2014

Related Documents - PS350110

| | |
|---|---|
|  <p>GEWA KEYS QUICK START GUIDE GEWA UP355</p> | <p>GEWA UP355 Digital Piano Quick Start Guide</p> <p>This quick start guide provides essential information for setting up and using the GEWA UP355 digital piano. It covers safety precautions, package contents, assembly, operation, connections, Bluetooth features, the GEWA Piano Remote App, and technical specifications. Multilingual instructions are included to access the full user manual.</p> |
|  <p>GEWA KEYS USER MANUAL GEWA Digital Piano UP405</p> | <p>GEWA Digital Piano UP405 User Manual - Features, Setup, and Operation</p> <p>Comprehensive user manual for the GEWA Digital Piano UP405. Learn about setup, operation, features, connectivity, and troubleshooting for your GEWA UP405 digital piano.</p> |
|  <p>DEUTSCH G3 Drum-Modul</p> | <p>GEWA G3 Drum-Modul Bedienungsanleitung</p> <p>Umfassende Bedienungsanleitung für das GEWA G3 Drum-Modul von GEWA music GmbH. Erfahren Sie mehr über Einrichtung, Funktionen, Sicherheit und technische Details dieses digitalen Schlagzeugmoduls.</p> |
|  <p>SETUP RACK GEWA G3</p> | <p>GEWA G3 Setup Rack Assembly Instructions</p> <p>Step-by-step guide for assembling the GEWA G3 Setup Rack, including a detailed parts list and helpful assembly tips.</p> |
|  <p>GEWA KEYS QUICK START GUIDE GEWA PP-3</p> | <p>GEWA PP-3 Schnellstartanleitung</p> <p>Diese Schnellstartanleitung führt Sie durch die grundlegende Einrichtung und Bedienung Ihres GEWA PP-3 Digitalpianos, einschließlich Sicherheitshinweisen, Anschlüssen und erster Inbetriebnahme.</p> |



[GEWA G3 & G5 Drum Module Quick Start Guide](#)

Quickly set up and operate your GEWA G3 or G5 Drum Module with this comprehensive guide. Learn about features, safety, connections, and troubleshooting for an enhanced electronic drumming experience.