

## Nuwave COMINHKR048654

# NuWave Party Mixer Blender User Manual

Model: COMINHKR048654

## 1. INTRODUCTION

Thank you for choosing the NuWave Party Mixer Blender. This 48-ounce, 400-watt appliance is designed for efficient blending and chopping, making it ideal for preparing a variety of beverages and food items. Its BPA-free pitcher and dual blades ensure reliable performance for your kitchen needs.



Image 1.1: The NuWave Party Mixer Blender, showcasing its design and a prepared smoothie with fresh fruit.

## 2. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using your NuWave Party Mixer Blender. Failure to follow these safety guidelines may result in injury or damage to the appliance.

- Always unplug the blender from the power outlet before assembling, disassembling, or cleaning.
- Keep hands and utensils out of the pitcher while blending to reduce the risk of severe personal injury.
- Do not blend hot liquids. Allow hot ingredients to cool before processing to prevent pressure buildup and potential injury.
- Ensure the lid is securely in place before operating the blender.
- Never operate the blender with a damaged cord or plug, or after the appliance malfunctions or has been

dropped or damaged in any manner.

- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not immerse the motor base in water or other liquids.
- Use only attachments and accessories recommended by the manufacturer.

### 3. PARTS IDENTIFICATION

Familiarize yourself with the components of your NuWave Party Mixer Blender:

1. **Motor Base:** Contains the 400-watt motor and control button.
2. **48-ounce Pitcher:** The main blending container, made from BPA-free material, with measurement markings and a handle.
3. **Dual Blade Assembly:** Permanently attached to the pitcher's central shaft, designed for chopping and blending.
4. **Cover Guard with Pour Shield:** The lid for the pitcher, designed to prevent splashes and facilitate pouring.
5. **Storage Lid:** An additional lid for storing contents in the pitcher after blending.



Image 3.1: The blender pitcher with its lid being removed, illustrating the internal dual blade assembly.

## 4. SETUP AND ASSEMBLY

Before first use, wash all parts except the motor base in warm, soapy water. Rinse thoroughly and dry. The pitcher and lid are dishwasher safe (top rack only).

1. Place the motor base on a clean, dry, and stable surface.
2. Ensure the pitcher is empty and clean.



3. Carefully place the pitcher onto the motor base, aligning the pitcher's bottom with the base. It should sit securely.
4. Add your desired ingredients to the pitcher. Do not exceed the 'MAX' fill line.
5. Place the cover guard with pour shield onto the pitcher and twist or press down firmly until it is securely locked in place.



Image 4.1: Proper assembly of the blender, showing the motor base being placed onto the pitcher.

## 5. OPERATING INSTRUCTIONS

The NuWave Party Mixer Blender features a simple push-button operation for effective blending.

1. After assembling the blender and adding ingredients (refer to Section 4), plug the power cord into a standard electrical outlet.
2. To begin blending, press and hold the power button located on the top of the motor base. The blender will operate as long as the button is held down.
3. For best results with ice or hard ingredients, use short pulses rather than continuous blending. This allows

ingredients to fall back onto the blades.

4. Blend until desired consistency is achieved.
5. Release the power button to stop blending.
6. Unplug the blender from the outlet.
7. Carefully remove the lid and pour out the contents.

## Recommended Uses:

- **Iced Beverages:** Ideal for smoothies, milkshakes, margaritas, and other crushed ice drinks.
- **Food Preparation:** Excellent for making salsas, dips, appetizers, and desserts.



Image 5.1: Examples of beverages and food items that can be prepared using the NuWave Party Mixer Blender.

## Video Demonstration: Strawberry Watermelon Smoothie

Your browser does not support the video tag.

Video 5.1: A demonstration of how to prepare a Strawberry Watermelon Smoothie using the NuWave Party Mixer Blender. This video illustrates the blending process and the types of ingredients suitable for the appliance.

## 6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your blender.

1. **Always unplug the blender before cleaning.**
2. **Motor Base:** Wipe the motor base with a damp cloth. Do not immerse it in water or any other liquid.
3. **Pitcher and Lids:** The 48-ounce pitcher and both lids are dishwasher safe (top rack recommended). For hand washing, use warm, soapy water and a non-abrasive sponge. Rinse thoroughly.
4. **Blades:** The dual blade assembly is permanently attached to the pitcher. Exercise extreme caution when cleaning around the blades as they are sharp. Use a brush to safely clean around the blades if necessary.
5. **Storage:** Ensure all parts are completely dry before storing. Store the blender assembled or with the pitcher inverted over the motor base to save space.

## 7. TROUBLESHOOTING

If you encounter issues with your NuWave Party Mixer Blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; power outlet malfunction; motor base not properly seated; safety mechanism engaged.	Ensure the blender is securely plugged into a working outlet. Check if the pitcher is correctly seated on the motor base.
Ingredients are not blending smoothly.	Too many ingredients; not enough liquid; ingredients are too large or hard.	Reduce the amount of ingredients. Add more liquid. Cut larger ingredients into smaller pieces. Use pulse function for hard items like ice.
Blender leaks from the bottom of the pitcher.	Pitcher not properly sealed to the motor base; pitcher damaged.	Ensure the pitcher is correctly and securely placed on the motor base. Inspect the pitcher for cracks or damage.
Motor smells or overheats.	Overloading the motor; continuous operation for too long.	Unplug the blender and allow it to cool down for at least 15-20 minutes. Reduce the load and use pulse blending.

## 8. SPECIFICATIONS

- **Brand:** Nuwave
- **Model Number:** COMINHKR048654
- **Power:** 400 watts
- **Capacity:** 48 fluid ounces (1.5 quarts)
- **Material:** BPA-Free Plastic (Container)
- **Color:** Black
- **Control Type:** Push Button (1 speed)
- **Special Feature:** Portable design
- **Item Weight:** 3.75 pounds



- **Package Dimensions:** 12.9 x 8.7 x 6.9 inches
- **UPC:** 652185221918






## 9. WARRANTY AND SUPPORT

The NuWave Party Mixer Blender comes with a limited warranty. For specific warranty details, registration, or technical support, please refer to the warranty card included with your product or visit the official NuWave website. Keep your purchase receipt as proof of purchase for any warranty claims.


For further assistance, you may contact NuWave customer service through their official channels.

© 2023 Nuwave. All rights reserved.

### Related Documents - COMINHKR048654

	<p><a href="#">The NuWave Oven Complete Cookbook: Recipes, Tips, and More</a></p> <p>Discover the revolutionary NuWave Pro Infrared Cooking System with this comprehensive cookbook. Learn how to prepare delicious meals quickly and healthily, explore various cooking techniques, and find helpful tips and recipes for your NuWave oven.</p>
	<p><a href="#">NuWave Brio Healthy Digital 10Q Air Fryer Owner's Manual and Recipe Book</a></p> <p>Comprehensive guide for the NuWave Brio Healthy Digital 10Q Air Fryer, including operating instructions, safety precautions, maintenance, troubleshooting, and a complete recipe book. Learn how to use your air fryer for optimal results and explore various cooking options.</p>
	<p><a href="#">NuWave Brio 3Q Digital Air Fryer Owner's Manual &amp; Recipe Book</a></p> <p>Comprehensive guide for the NuWave Brio 3Q Digital Air Fryer, covering operation, safety, troubleshooting, and including a full recipe book for healthy cooking.</p>
	<p><a href="#">Nuwave On-The-Go Blender Owner's Manual and Limited Warranty</a></p> <p>Comprehensive guide for the Nuwave On-The-Go Blender, including operation instructions, cleaning, troubleshooting, and details on the limited warranty. Learn how to use and maintain your portable, rechargeable, self-cleaning blender.</p>
	<p><a href="#">NuWave PIC Pro Chef Owner's Manual and Recipe Book</a></p> <p>Comprehensive owner's manual and recipe book for the NuWave PIC Pro Chef induction cooktop, detailing operation, safety, maintenance, troubleshooting, and including a variety of recipes.</p>



 <p>The image shows the cover of the NuWave Moxie Pro High-Performance Blender Owner's Manual and Recipe Book. The cover is primarily red and white. At the top left, the 'nuwave' logo is visible. Below it, the text 'NuWave Moxie® Pro High-Performance Blender' is printed. In the center, there is a photograph of the black blender with a clear pitcher containing a green smoothie. To the right of the blender is a small icon of a book. At the bottom, the text 'Owner's Manual &amp; Complete Recipe Book' is printed. A circular seal in the top right corner of the cover reads 'RECIPES INCLUDED'.</p>	<p><a href="#">NuWave Moxie Pro High-Performance Blender Owner's Manual and Recipe Book</a></p> <p>Comprehensive guide for the NuWave Moxie Pro High-Performance Blender, including operating instructions, safety precautions, care and maintenance, troubleshooting, and a complete recipe book.</p>
---	--