#### Manuals+

Q & A | Deep Search | Upload

### manuals.plus /

- AudioQuest /
- AudioQuest AQCSKIT Screen Cleaner Kit User Manual

#### **AudioQuest AQCSKIT**

# AudioQuest AQCSKIT Screen Cleaner Kit User Manual

Model: AQCSKIT

## 1. Introduction

This manual provides instructions for the proper use and maintenance of your AudioQuest AQCSKIT Screen Cleaner Kit. This kit is designed for effective and safe cleaning of various display surfaces, including televisions, monitors, and other electronic screens.

# 2. SAFETY INFORMATION

- Keep the cleaning solution out of reach of children and pets.
- Do not ingest the cleaning solution. If swallowed, seek medical attention immediately.
- Avoid contact with eyes. In case of contact, flush thoroughly with water and seek medical advice if irritation persists.
- Use in a well-ventilated area.
- The cleaning solution is alcohol-free and safe for most screen types, but always test on an inconspicuous area first if unsure.
- Do not apply excessive pressure when cleaning screens, as this may cause damage.

## 3. PACKAGE CONTENTS

The AudioQuest AQCSKIT Screen Cleaner Kit includes the following items:

- 1x Large Bottle of CleanScreen Cleaning Gel (160 ml)
- 1x Travel-size Spray Bottle of CleanScreen Cleaning Gel
- 1x Microfiber Cleaning Cloth
- 1x Retractable Dusting Brush



**Figure 1:** Components of the AudioQuest AQCSKIT Screen Cleaner Kit. This image displays the large bottle of cleaning gel, a smaller travel-size spray bottle, a gray microfiber cleaning cloth, and a black retractable brush with red bristles.

# 4. SETUP

No assembly is required for the AudioQuest AQCSKIT. The kit components are ready for immediate use.

# 4.1 Preparing for Cleaning

- 1. Ensure the electronic device is turned off and cooled down.
- 2. Disconnect the device from its power source if possible.
- 3. Position the device in a well-lit area to clearly see dust and smudges.

# 5. OPERATING INSTRUCTIONS

Follow these steps for optimal screen cleaning results:

#### 5.1 Dust Removal

- 1. Use the retractable dusting brush to gently sweep away loose dust and debris from the screen surface. Avoid pressing hard.
- 2. For stubborn dust particles, a light touch with the brush is usually sufficient.

## 5.2 Cleaning Smudges and Fingerprints

- 1. Spray a small amount of CleanScreen cleaning gel onto the microfiber cloth**Do not spray directly onto the screen.**
- 2. Gently wipe the screen surface in a circular motion or in straight lines, starting from one edge and moving across.
- 3. Apply minimal pressure. The alcohol-free, no-drip gel is designed to lift dirt and oils effectively.
- 4. Use a clean, dry section of the microfiber cloth to buff the screen until it is streak-free and dry.
- 5. Repeat the process if necessary for heavily soiled areas, using a fresh section of the cloth.

Note: The CleanScreen gel is formulated to be safe on all screen surfaces, including LCD, LED, OLED, plasma, and touchscreens.

#### 6. MAINTENANCE

#### **6.1 Microfiber Cloth Care**

- · Wash the microfiber cloth regularly to maintain its effectiveness.
- Hand wash with mild soap and warm water, or machine wash on a gentle cycle with similar colors.
- Do not use fabric softener or bleach, as these can damage the microfiber and leave streaks on screens.
- Air dry or tumble dry on low heat.

#### 6.2 Dusting Brush Care

- Gently tap the brush to remove accumulated dust.
- If necessary, the bristles can be carefully cleaned with a soft, dry cloth. Avoid wetting the brush.

# 6.3 Storage

- Store the cleaning kit in a cool, dry place away from direct sunlight.
- Ensure bottle caps are tightly closed to prevent leakage or evaporation.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Streaks remain on screen after cleaning.	Too much cleaning gel applied.  Microfiber cloth is dirty or saturated.  Cloth contains fabric softener residue.	Use less gel; apply only to the cloth, not directly to the screen.  Wash the microfiber cloth thoroughly or use a clean, dry section.  Ensure the cloth is washed without fabric softener.
Dust not fully removed.	Insufficient use of dusting brush. Static electricity attracting dust.	Gently sweep the screen more thoroughly with the brush before applying liquid.  The CleanScreen gel has anti-static properties; ensure proper application.
Screen appears hazy or discolored.	Residue from previous cleaning products. Improper cleaning technique.	Re-clean the screen using the recommended method with a freshly washed microfiber cloth.  Ensure the screen is completely dry after cleaning.

# 8. SPECIFICATIONS

• Brand: AudioQuest

Model: AQCSKIT (CleanScreen TV Screen Cleaning Kit)
 Cleaning Solution Volume: 160 Milliliters (main bottle)

• Solution Type: Alcohol-free, no-drip gel

• Cloth Material: Microfiber

• Product Dimensions: 6.1 x 1.89 x 8.27 inches (packaging)


Item Weight: 7 ouncesUPC: 092592076501

• Date First Available: October 25, 2012

# 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official AudioQuest website or contact their customer service directly. Keep your purchase receipt for any warranty claims.

AudioQuest Official Website: www.audioquest.com

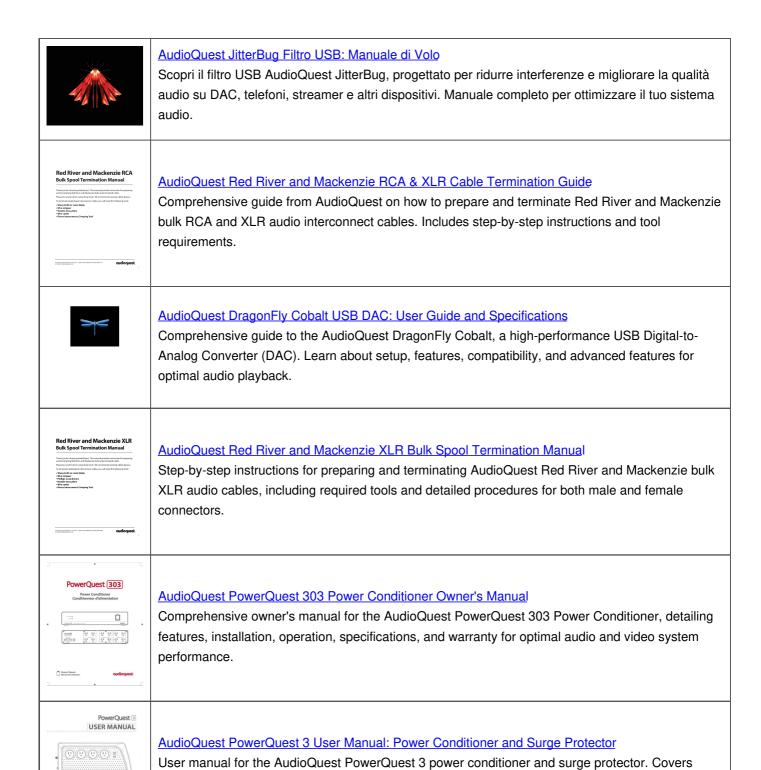

introduction, safety, installation, specifications, hook-up guide, operation, troubleshooting, and

warranty information.