

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SPINTSO](#) /

› [SPINTSO Referee Watch SPT100-GR User Manual](#)

SPINTSO SPT100-GR

SPINTSO Referee Watch SPT100-GR User Manual

Model: SPT100-GR

INTRODUCTION

The SPINTSO Referee Watch SPT100-GR is a digital timepiece designed to assist referees with precise timing and game management. It features a large display, multiple timing functions, and a unique vibration notification system, making it a reliable tool for various sports officiating needs.

This manual provides detailed instructions on how to set up, operate, and maintain your SPINTSO Referee Watch SPT100-GR.

PRODUCT OVERVIEW



Figure 1: Front view of the SPINTSO Referee Watch SPT100-GR, showing the large digital display and side buttons for control.



Figure 2: Rear view of the watch, highlighting the stainless steel back case and the watch strap.



Figure 3: Side view of the watch, showing the "UP/START" and "DOWN/RESET" buttons.



Figure 4: The watch packaging, including the outer box and clear display case.

1. Initial Power On and Time Setting

Upon first use or after battery replacement, the watch may require initial setup.

1. Press and hold the **SET/LIGHT** button (left top) until the time display flashes.
2. Use the **UP/START** (right top) and **DOWN/RESET** (right bottom) buttons to adjust the hour.
3. Press **MODE** (left bottom) to move to the next setting (minutes, year, month, day).
4. Repeat step 2 and 3 until all settings are correct.
5. Press **SET/LIGHT** to exit the setting mode.

2. 12/24 Hour Format Setting

To switch between 12-hour and 24-hour display formats:

- In time display mode, press the **UP/START** button to toggle between 12H and 24H format.

3. Summer Time Setting (DST)

The watch supports a summer time (Daylight Saving Time) setting:

- In time display mode, press and hold the **DOWN/RESET** button to activate or deactivate DST. An indicator will appear on the display when DST is active.

OPERATING INSTRUCTIONS

1. Game Set and Period Setting

This function allows setting the game duration and periods.

1. From the main time display, press **MODE** repeatedly until you reach the "GAME" mode.
2. Press and hold **SET/LIGHT** to enter setting mode.
3. Use **UP/START** and **DOWN/RESET** to adjust the game duration (e.g., 45 minutes for a half).
4. Press **MODE** to move to the number of periods. Adjust as needed.
5. Press **SET/LIGHT** to confirm and exit.

2. Count Up/Down and Lost Time Measurement

The watch can simultaneously display count-up time (game time), count-down time (remaining time), and lost time.

1. In "GAME" mode, press **UP/START** to begin the game timer. The count-up and count-down timers will start.
2. To pause the game, press **UP/START** again. The count-up and count-down timers will pause.
3. While paused, the lost time timer will automatically begin counting.
4. To resume the game and stop lost time counting, press **UP/START**.
5. To reset the timers for a new half or game, press and hold **DOWN/RESET**.

3. Stopwatch Function

The watch includes a 1/100 second stopwatch with a maximum measurement of 99 hours, 59 minutes, 59.99 seconds.

1. From the main time display, press **MODE** until you reach the "STOPWATCH" mode.
2. Press **UP/START** to start the stopwatch.
3. Press **UP/START** again to pause.

4. Press **DOWN/RESET** to reset the stopwatch to zero.
5. The watch also supports 20-lap memory. While the stopwatch is running, press **DOWN/RESET** to record a lap time.

4. Vibration Notification

All time notifications, including end of period and alarms, are indicated by vibration.

- The vibration function is automatically active for game time notifications.
- To use as an alarm clock, set an alarm time in the "ALARM" mode (accessed via **MODE** button). The watch will vibrate at the set time.

5. EL Backlight

The watch features an EL (Electroluminescent) backlight for visibility in low-light conditions.

- Press the **SET/LIGHT** button briefly to activate the backlight. It will illuminate for a few seconds.

MAINTENANCE

1. Battery Replacement

The watch uses two CR2032 batteries. Battery life is approximately 1 year, depending on usage frequency. A battery low indicator will appear on the display when replacement is needed.

1. Carefully remove the screws on the back case of the watch.
2. Gently lift the back cover. Note the position of the existing batteries.
3. Remove the old batteries and insert new CR2032 batteries, ensuring correct polarity (+/-).
4. Replace the back cover and tighten the screws securely to maintain water resistance.
5. After battery replacement, you may need to perform the initial time setting (refer to "Setup" section).

2. Water Resistance

The watch has a daily life water resistance of 5 BAR. This means it is suitable for everyday use and can withstand splashes or brief immersion in water. However, it is not suitable for swimming, diving, or showering with hot water.

- Do not operate buttons while the watch is submerged in water.
- Avoid exposing the watch to extreme temperature changes, as this can affect water resistance.

3. Cleaning

To clean the watch, wipe it with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by drying. Avoid using chemical cleaners or abrasive materials.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery or dead battery.	Replace the CR2032 batteries (refer to "Battery Replacement").
Watch freezes or displays erratic behavior.	Temporary software glitch or strong electromagnetic interference.	Remove batteries for a few minutes, then reinsert them. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Buttons are unresponsive or sticky.	Dirt or debris lodged around buttons; internal mechanism issue.	Clean around the buttons with a soft brush. If still unresponsive, contact customer support.
Vibration function is weak or not working.	Low battery; internal vibration motor issue.	Replace batteries. If the issue continues, contact customer support.

SPECIFICATIONS

- **Model Number:** SPT100-GR
- **Case Size:** Approximately 42mm (vertical) x 48mm (horizontal)
- **Power Source:** CR2032 battery x 2
- **Battery Life:** Approximately 1 year (varies with usage frequency)
- **Water Resistance:** 5 BAR (Daily life water resistance)
- **Functions:**
 - Vibration notification
 - Battery level warning display
 - Game set/period setting
 - Count up/down measurement (simultaneous display)
 - Stop timing (lost time conversion)
 - Summer time setting
 - 12/24 hour display setting
 - Stopwatch (1/100 second, max 99 hours 59 minutes 59.99 seconds)
 - 20-lap memory
 - EL backlight
- **Origin:** China

WARRANTY AND SUPPORT

This product comes with a warranty. Please refer to the warranty card included in the package for details regarding warranty period and conditions. For technical support, repairs, or inquiries not covered in this manual, please contact your retailer or the official SPINTSO customer service.

Keep your purchase receipt and warranty card in a safe place as proof of purchase.



[Spintso Referee Watch S1 PRO User Manual](#)

Comprehensive user manual for the Spintso Referee Watch S1 PRO, detailing its features, functions, setup, app connectivity, and specifications for referees and athletes.



[Spintso Referee Watch S1 User Manual](#)

Comprehensive user manual for the Spintso Referee Watch S1, covering setup, functions, app integration, and technical specifications.



[Spintso Refcom II Pro Radio System Manual](#)

Comprehensive manual for the Spintso Refcom II Pro radio system, detailing its features, setup, operation, and troubleshooting for referees and sports officials.



[Toshiba VEGETA Refrigerators 2025 Catalog: Advanced Freshness and Storage](#)

Explore the Toshiba VEGETA refrigerator lineup for 2025, featuring advanced technologies for superior freshness, large storage capacity, energy efficiency, and user-friendly designs. Discover models designed to fit modern kitchens and lifestyles, ensuring food stays fresh longer and storage is optimized.