

iball DJ22 2.1

iBall DJ22 2.1 Full Wood Multimedia Speaker User Manual

Model: DJ22 2.1

INTRODUCTION

Thank you for choosing the iBall DJ22 2.1 Full Wood multimedia speaker system. This manual provides essential information for setting up, operating, and maintaining your new speakers. The iBall DJ22 is designed to deliver a superb and natural sound effect, featuring 2.1 channel audio with multiple input options including USB and micro SD card playback, making it versatile for various audio sources like PCs and laptops. Its wooden cabinets for both the woofer and satellites ensure enhanced audio quality and durability.

PACKAGE CONTENTS

Please check the box for the following items:

- 1 x iBall DJ22 Subwoofer Unit
- 2 x iBall DJ22 Satellite Speakers
- 1 x Audio Input Cable (3.5mm to RCA)
- 1 x Power Cable
- 1 x User Manual (this document)

PRODUCT OVERVIEW



This image displays the complete iBall DJ22 2.1 speaker system. It features a central, larger subwoofer unit with a prominent front-facing port and control buttons, flanked by two smaller, cube-shaped satellite speakers. All components are black with a wood finish, indicating their construction material.

Front Panel (Subwoofer)

- **Power Indicator:** LED light indicating power status.
- **Volume Control:** Rotary knob or buttons to adjust the master volume.
- **Mode Button:** To switch between input modes (AUX, USB, SD).
- **Play/Pause Button:** For media playback control in USB/SD mode.
- **Previous/Next Track Buttons:** For navigation in USB/SD mode.
- **USB Port:** For connecting USB pen drives.
- **Micro SD Card Slot:** For inserting micro SD cards.

Rear Panel (Subwoofer)

- **Audio Input (RCA):** Connects to your audio source (PC, laptop, mobile device) using the provided audio cable.
- **Satellite Speaker Outputs:** Connects the two satellite speakers to the subwoofer.
- **Power Switch:** Main power on/off switch.
- **AC Power Input:** Connects the power cable to a wall outlet.

SETUP

Follow these steps to set up your iBall DJ22 speaker system:

1. **Unpack Components:** Carefully remove all components from the packaging. Retain the packaging for future transport or storage.
2. **Speaker Placement:** Place the subwoofer on a stable, flat surface, preferably on the floor or a sturdy desk, to maximize bass response. Position the two satellite speakers equidistant from your listening position, typically on either side of your monitor or TV, for optimal stereo separation.
3. **Connect Satellite Speakers:** Connect the cables from the satellite speakers to the corresponding output jacks on the rear panel of the subwoofer unit. Ensure a secure connection.

4. **Connect Audio Source:** Use the provided 3.5mm to RCA audio cable. Connect the 3.5mm end to the audio output jack of your PC, laptop, or mobile device. Connect the RCA ends (red and white) to the corresponding audio input jacks on the rear panel of the subwoofer.
5. **Connect Power:** Insert the power cable into the AC power input on the rear of the subwoofer, then plug the other end into a standard wall power outlet.
6. **Power On:** Flip the main power switch on the rear panel of the subwoofer to the 'ON' position. The power indicator on the front panel should illuminate.

OPERATING INSTRUCTIONS

Power On/Off

- To turn on the speakers, ensure the rear power switch is ON, then press the power button on the front panel (if available) or simply turn on the rear switch.
- To turn off, press the power button on the front panel or switch off the main power switch on the rear.

Audio Input Modes

Press the **Mode** button on the front panel to cycle through available input sources: AUX, USB, and SD.

USB/Micro SD Playback

- Insert a USB pen drive or micro SD card into the respective slot on the front panel.
- Switch the mode to USB or SD. The system will automatically detect and begin playing compatible audio files.
- Use the Play/Pause, Previous, and Next buttons to control playback.

Auxiliary Input (AUX)

- Ensure your audio source (PC, laptop, mobile) is connected to the AUX input on the rear panel.
- Switch the mode to AUX. Audio from your connected device will now play through the speakers.

Volume Control

Adjust the master volume using the dedicated volume control knob or buttons on the front panel of the subwoofer.

MAINTENANCE

Proper care will ensure the longevity of your iBall DJ22 speakers:

- **Cleaning:** Use a soft, dry cloth to wipe the surfaces of the speakers. Do not use liquid cleaners or abrasive materials, as they may damage the wooden finish or electronic components.
- **Ventilation:** Ensure the subwoofer has adequate ventilation. Do not block any vents or place the unit in an enclosed space that could lead to overheating.
- **Environment:** Keep the speakers away from direct sunlight, heat sources, excessive dust, and moisture.
- **Handling:** Avoid dropping or subjecting the speakers to strong impacts.

TROUBLESHOOTING

If you encounter issues with your iBall DJ22 speakers, refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power	Power cable not connected; Power switch off; Wall outlet faulty.	Ensure power cable is securely plugged in; Turn on rear power switch; Try a different wall outlet.
No sound	Incorrect input mode; Volume too low; Audio cable loose/faulty; Source device muted/low volume.	Press Mode button to select correct input; Increase speaker volume; Check audio cable connections; Ensure source device is playing and volume is up.
Distorted sound	Volume too high; Poor audio source quality; Loose connections.	Reduce speaker volume; Try a different audio source; Check all cable connections.
USB/SD not playing	Incorrect mode; Incompatible file format; Corrupted media; Media not inserted correctly.	Switch to USB/SD mode; Ensure files are MP3/WAV; Try different USB/SD media; Reinsert media firmly.

SPECIFICATIONS

Detailed specifications for the iBall DJ22 2.1 Full Wood multimedia speaker:

Feature	Detail
Model Name	DJ22 2.1
Speaker Type	Woofer (2.1 System)
Special Feature	USB Charging (for connected devices, not speaker charging)
Recommended Uses	Music
Compatible Devices	Laptop, Personal Computer, Mobile Devices
Surround Sound Channel Configuration	2.1
Colour	Wood (Black finish)
Waterproof	No
Speaker Count	2 (Satellites) + 1 (Subwoofer)
Power Source	AC
Wattage	10.00 W
Connectivity Technology	USB, Auxiliary (3.5mm), Micro SD
Audio Output Mode	Stereo
Mounting Type	Mixed_mount (Freestanding)
Material	Wood
Manufacturer	BEST IT WORLD INDIA PVT.LTD.

Feature	Detail
Date First Available	30 October 2012

WARRANTY AND SUPPORT

The iBall DJ22 2.1 Full Wood multimedia speaker comes with a **1 Year Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your purchase receipt as proof of purchase for any warranty claims. For technical support, service, or warranty inquiries, please contact iBall customer service through their official website or the contact information provided with your product packaging. Do not attempt to repair the unit yourself, as this may void the warranty and pose safety risks.