

[Manuals.plus](#) /

› [Furby](#) /

› Furby Interactive Electronic Pet (Model A3120) Instruction Manual

Furby A3120

Furby Interactive Electronic Pet (Model A3120) Instruction Manual

Your guide to setting up, operating, and maintaining your Furby.

INTRODUCTION TO YOUR FURBY

The Furby is an interactive electronic pet designed to respond to your actions and develop a unique personality. It communicates in both Furbish and English, adapting its language as you interact with it. This manual provides essential information for setup, operation, and care of your Furby.



Image: A Furby electronic pet, featuring pink and teal fur with large expressive eyes.

SETUP

Battery Installation

Your Furby requires 4 "AA" batteries (not included) for operation. To install the batteries:

1. Locate the battery compartment on the underside of your Furby. This compartment is typically hidden beneath a fabric flap secured with Velcro or a similar fastener.
2. Use a Phillips head screwdriver to open the battery compartment cover.
3. Insert 4 new "AA" alkaline batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw. Close the fabric flap.



Image: Furby in its retail packaging, indicating battery requirements.

First Interaction

Once batteries are installed, your Furby will awaken. It will initially speak mostly Furbish. The more you interact with it, the more English it will learn and speak.

OPERATING YOUR FURBY

Your Furby responds to various forms of interaction, which influence its personality and behavior.

Interacting with Furby

- **Feeding:** Gently place your finger in its mouth or use the optional app to virtually feed it.
- **Speaking:** Talk to your Furby. It will listen and respond, gradually learning more English words.
- **Tickling:** Tickle its belly to elicit reactions.

- **Movement:** Shake, tilt, or turn your Furby upside down to see different responses.
- **Music:** Play music for your Furby; it may react by dancing or singing along.
- **Other Furbys:** Your Furby can interact with other Furbys (sold separately), developing unique group dynamics.



Image: A close-up of the Furby's face, highlighting its large, expressive eyes and colorful fur.



Image: Multiple Furbys interacting with children in a living room setting, demonstrating social play.

Personality Development

The way you treat your Furby will shape its personality. Consistent gentle interaction may lead to a sweet and friendly personality, while rougher play might result in a mischievous or grumpy demeanor. Experiment with different interactions to discover all the personalities your Furby can develop.

Optional App Features

A free, optional app is available for compatible devices (iPad, iPod touch, iPhone with iOS 4.2 or later). This app can assist in translating Furbish and offers additional interactive features, such as virtual feeding.

Your browser does not support the video tag.

Video: An official product video demonstrating various Furby Furbles Mini Friends features and interactions.

MAINTENANCE

Cleaning

To clean your Furby, gently wipe its surface with a soft, damp cloth. Do not immerse Furby in water or use harsh cleaning agents, as this may damage the electronic components.

Battery Replacement

When Furby's responses become slow or erratic, it may be time to replace the batteries. Follow the battery installation steps outlined in the "Setup" section.

TROUBLESHOOTING

Furby is Unresponsive

- Check if the batteries are correctly installed and have sufficient charge. Replace if necessary.
- Ensure Furby is not in sleep mode. Gently shake or interact with it to wake it up.

Undesirable Personality

Furby's personality is shaped by interaction. If your Furby develops an undesirable personality, try changing your interaction style. Consistent gentle and positive interactions can help guide its personality back to a more favorable state.

Resetting Furby

If your Furby is not functioning as expected, you may need to perform a reset. This typically involves removing the batteries for a few minutes and then reinserting them. Consult the full product manual for specific reset instructions if available.

SPECIFICATIONS

Feature	Detail
Model Number	A3120
Product Dimensions	8 x 5 x 7.75 inches
Item Weight	2 pounds
Batteries Required	4 AA batteries (not included)
Manufacturer Recommended Age	6 years and up
Manufacturer	Furby

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Furby website or contact the manufacturer directly. Keep your proof of purchase for any warranty claims.

You can visit the official Furby Store for more information:[Furby Store](#)