

[Manuals.plus](#) /

› [Ameriwood Home](#) /

› Ameriwood Home London Craft Desk - Instruction Manual

Ameriwood Home 9358196

Ameriwood Home London Craft Desk - Instruction Manual

Model: 9358196

INTRODUCTION

Thank you for choosing the Ameriwood Home London Craft Desk. This manual provides essential information for the safe assembly, proper use, and maintenance of your new desk. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

The London Craft Desk is designed to offer a generous work surface and ample storage, making it suitable for home offices, craft spaces, dorm rooms, bedrooms, and homeschooling environments. It features a universal style and 12 storage cubbies to help keep your workspace organized.



Image: The Ameriwood Home London Craft Desk, showcasing its L-shaped design with a desk surface and integrated shelving in an espresso finish.

SAFETY INFORMATION

- Always assemble the product on a soft, clean surface to prevent scratches.
- Ensure all parts and hardware are present before beginning assembly. Refer to the included assembly instructions

for a complete list.

- Do not overtighten screws or fasteners, as this may damage the material.
- It is recommended that two people assemble this desk for safety and ease.
- Keep small parts away from children during assembly.
- Do not stand or sit on the desk during assembly or use, beyond its intended purpose.
- Place the desk on a level surface to ensure stability.

PACKAGE CONTENTS


Before assembly, carefully unpack all components and compare them with the parts list provided in the separate assembly instructions manual. Ensure all pieces are accounted for and undamaged. If any parts are missing or damaged, please contact customer support.

Note: The assembly instructions manual included with your product contains a detailed list of all parts and hardware. Please refer to that document for specific component identification.

SETUP AND ASSEMBLY INSTRUCTIONS

Assembly of the Ameriwood Home London Craft Desk requires two people and common household tools such as a drill, hammer, and screwdriver. Please follow the step-by-step instructions provided in the separate assembly manual included in your product packaging.

Important Tip: While a small amount of wood glue is typically provided for dowels, many users recommend having additional wood glue on hand to reinforce joints for increased stability. Apply glue generously to dowels and mating surfaces where indicated in the assembly manual.

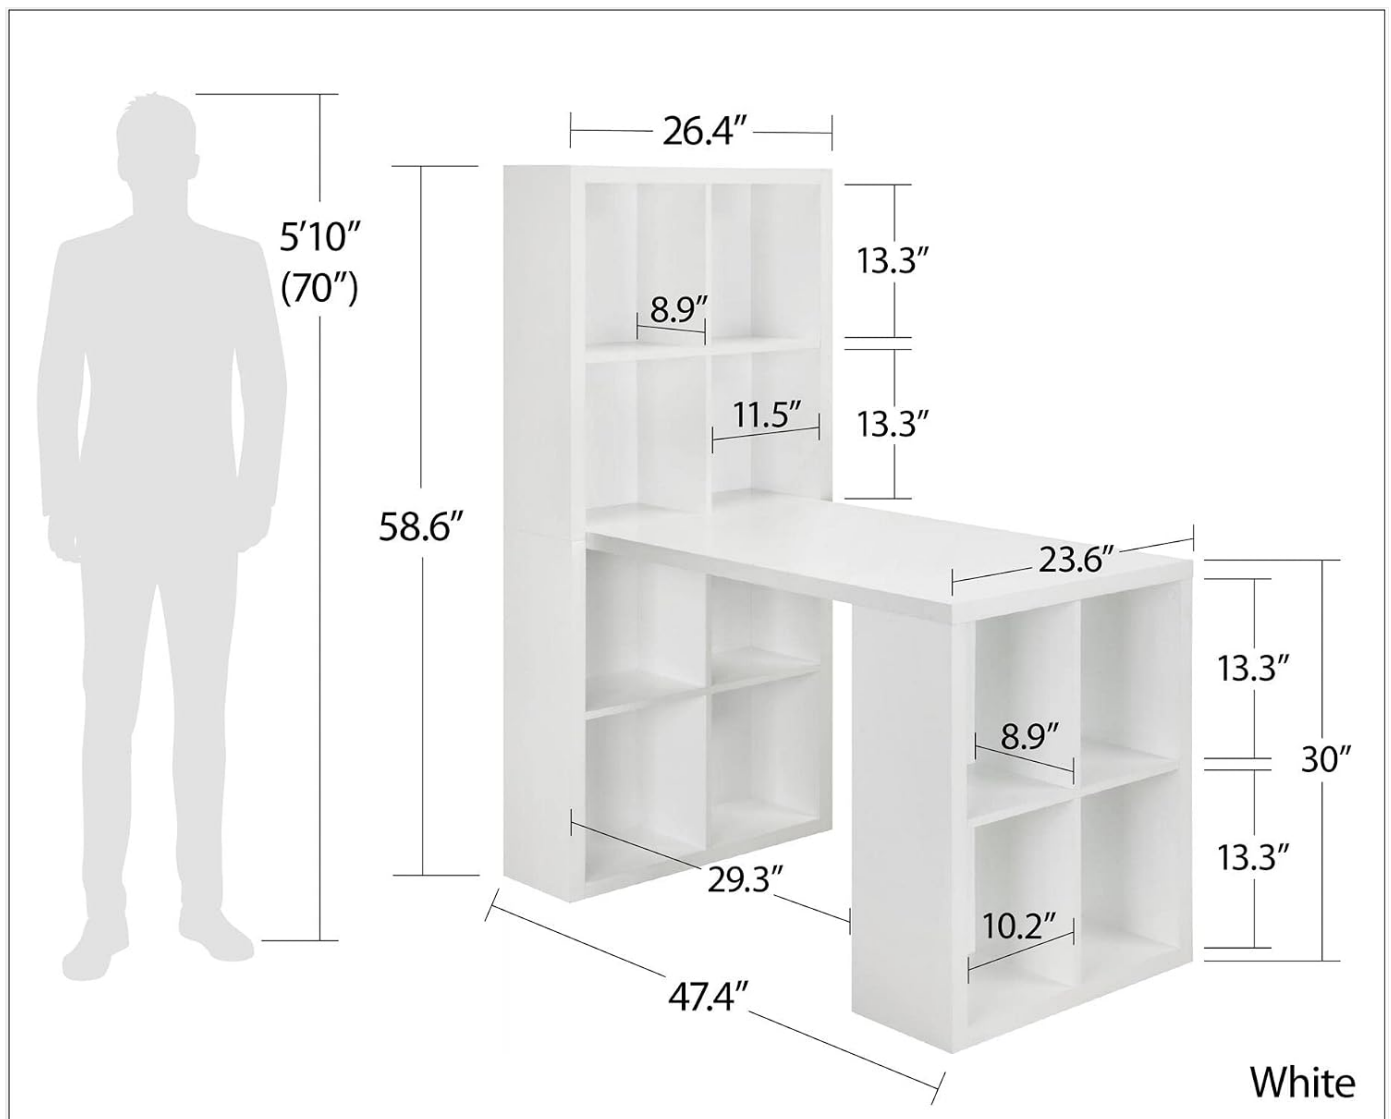

Product Dimensions

47.4 in. W x 26.4 in. D x 58.6 in. H

Weight Limit: Desktop - 80 lbs.

Each Cubby - 10 lbs.; Each Bottom Cubby - 15 lbs.



Espresso

Gray Oak

Ivory Oak

Image: A detailed diagram illustrating the dimensions of the London Craft Desk, including the overall height (58.6 inches), width (47.4 inches), and depth (26.4 inches), along with cubby measurements.

Ensure all cam bolts and cam locks are securely fastened. Periodically check all connections and tighten as necessary to maintain the desk's structural integrity.

OPERATING THE DESK

The London Craft Desk is designed for versatile use as a computer table, craft station, or general home office desk. Its 12 integrated storage cubbies provide convenient access to books, binders, craft supplies, and other essentials, helping to keep your workspace organized and clutter-free.



Image: The London Craft Desk set up with a sewing machine, books, and various decorative items, demonstrating its functionality as a craft and study area. The desk surface has a maximum weight capacity of 75 lbs. Distribute weight evenly across the surface and within the cubbies to prevent stress on the structure.

MAINTENANCE

To maintain the appearance and longevity of your Ameriwood Home London Craft Desk, follow these simple care instructions:

- Wipe the desk surfaces with a dry, soft cloth to remove dust and debris.
- Avoid using harsh chemicals, abrasive cleaners, or polishes, as these can damage the finish.
- Protect the surface from moisture and extreme temperatures. Use coasters for drinks and avoid placing hot items directly on the desk.
- Periodically check all hardware connections and tighten them if they become loose.

TROUBLESHOOTING

Desk feels wobbly or unstable:

If your desk feels unstable after assembly, consider the following:

- **Check all fasteners:** Ensure all cam locks, screws, and dowels are fully engaged and tightened. Do not overtighten, but ensure a snug fit.
- **Add more wood glue:** The provided wood glue may be insufficient for optimal stability. Applying additional wood glue to all dowel holes and mating surfaces during assembly can significantly improve rigidity.
- **Verify alignment:** Confirm that all panels are correctly aligned according to the assembly instructions. Misaligned panels can lead to instability.
- **Level surface:** Ensure the desk is placed on a completely flat and level floor. Uneven surfaces can cause wobbling.
- **Backing panels:** Make sure any backing panels are securely attached, as they contribute to the overall structural integrity.

SPECIFICATIONS

Feature	Detail
Brand	Ameriwood Home
Model Name	London
Model Number	9358196
Color	Espresso
Product Dimensions (D x W x H)	26.4"D x 47.4"W x 58.6"H
Item Weight	75.2 Pounds
Maximum Weight Recommendation (Top)	75 Pounds
Material Type	Engineered Wood
Number of Shelves	12 (Cubbies)
Required Assembly	Yes
Recommended Number of People for Assembly	2
Tools Recommended For Assembly	Drill, Hammer, Screw Driver
Product Care Instructions	Wipe with Dry Cloth

WARRANTY AND SUPPORT

The Ameriwood Home London Craft Desk comes with a **1 Year Limited Warranty**, ensuring peace of mind regarding manufacturing defects. For warranty claims, missing parts, or any product-related inquiries, please refer to the contact

information provided in your product packaging or visit the Ameriwood Home official website for customer support details.
Manufacturer: Dorel Home Furnishings

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question