

Flash Furniture RSRB1023-GG

Flash Furniture Jamie 30-inch Round Table Set with 4 Barstools User Manual

Model: RSRB1023-GG

INTRODUCTION

This manual provides essential instructions for the assembly, operation, maintenance, and troubleshooting of your Flash Furniture Jamie 30-inch Round Natural Laminate Table Set with Round Base and 4 Ladder Back Metal Barstools. Please read these instructions carefully before assembly and use to ensure safe and proper handling of your product.

IMPORTANT SAFETY INFORMATION

- Always assemble the product on a soft, clean surface to prevent scratches.
- Ensure all bolts, screws, and connectors are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not stand on the table or chairs.
- Keep small parts away from children during assembly.
- Do not use power tools for assembly unless specifically instructed, as over-tightening can damage components.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, do not proceed with assembly. Contact customer support for assistance.

- 1 x 30-inch Round Natural Laminate Table Top
- 1 x Round Table Base (Pedestal and Base Plate)
- 4 x Ladder Back Metal Barstools (Backrest, Seat Frame, Seat Cushion, Leg Assembly)
- Hardware Pack (screws, bolts, washers, Allen wrench)

SETUP AND ASSEMBLY

Assembly is required for both the table and the barstools. A power drill may be helpful for attaching the tabletop and seat cushions, as pre-drilled holes may not be present.

Tools Required:

- Phillips Head Screwdriver
- Adjustable Wrench (or appropriate size wrench for bolts)
- Power Drill (optional, for tabletop and seat cushion attachment)
- Measuring Tape (optional, for precise alignment)

Table Assembly:

1. Attach the pedestal to the base plate using the provided bolts and washers. Ensure a secure connection.
2. Carefully place the table top upside down on a soft, protected surface.
3. Center the assembled table base onto the underside of the table top. Mark the screw locations.
4. Using a power drill (if needed) or screwdriver, attach the table top to the base using the provided screws. Ensure the base is firmly secured to the top.
5. Carefully flip the assembled table upright.

Barstool Assembly (Repeat for each of 4 barstools):

1. Attach the backrest to the seat frame using the designated hardware.
2. Connect the leg assembly to the seat frame. Ensure all connections are snug but do not fully tighten bolts yet.
3. Place the seat cushion onto the seat frame. Align and attach with screws. A power drill may be helpful if no pilot holes are present.
4. Once all components are loosely assembled, place the barstool on a level surface and apply slight pressure to ensure it sits evenly. Then, fully tighten all bolts and screws.



Figure 1: Assembled Flash Furniture Jamie 30-inch Round Table Set with 4 Barstools.

OPERATING INSTRUCTIONS

This table and barstool set is designed for indoor use in dining areas, breakrooms, cafeterias, and similar environments. Ensure the table and chairs are placed on a level surface to prevent wobbling and ensure stability.

- **Table Use:** The laminate table top is suitable for dining, work, and general surface use. Avoid placing excessively hot items directly on the surface without protection.
- **Barstool Use:** The barstools are designed for seating one person at a time. Do not exceed the weight capacity (typically 250 lbs per stool, consult manufacturer for exact limits). Sit centrally on the seat to maintain balance.

MAINTENANCE AND CARE

Regular maintenance will help preserve the appearance and longevity of your furniture set.

Laminate Table Top Care:

- Clean the laminate table top using a mild detergent and water.
- Immediately dry the surface with a clean, soft cloth to prevent water spots and moisture damage.

- Avoid abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the laminate finish.
- The surface is heat, scratch, and moisture resistant, but it is recommended to use coasters and placemats for added protection.



Figure 2: Detail of the natural laminate table top.

Metal Frame and Vinyl Seat Care:

- Wipe metal frames with a damp cloth and mild soap, then dry thoroughly to prevent rust.
- For vinyl seats, use a damp cloth with mild soap and water. Avoid harsh cleaners that can dry out or crack the vinyl.
- Periodically check all bolts and screws and re-tighten them to ensure structural integrity.



Figure 3: Detail of the black vinyl seat.

TROUBLESHOOTING

If you encounter issues during assembly or use, refer to the following common solutions:

- **Wobbly Table/Chair:** Ensure all bolts and screws are fully tightened. If still wobbly, loosen all fasteners slightly, place the item on a level surface, apply even pressure, and then re-tighten all fasteners. Check that floor glides are intact and level.
- **Difficulty Aligning Parts:** Do not fully tighten any fasteners until all parts are loosely assembled. This allows for minor adjustments. If parts still do not align, double-check the orientation of each component against the assembly diagrams.
- **Missing Hardware:** Refer to the package contents list. If hardware is missing, contact customer support for replacement parts. Do not attempt to substitute with incorrect hardware.
- **Scratches or Minor Damage:** For minor scratches on the laminate, furniture repair kits may be used. For deeper damage, contact customer support for advice.

SPECIFICATIONS

Feature	Detail
Model Number	RSRB1023-GG
Table Dimensions (Overall)	30"W x 30"D x 42"H
Chair Dimensions (Overall)	17"W x 18"D x 42.25"H
Seat Dimensions	16.75"W x 16.5"D x 31"H (from floor)
Backrest Dimensions	15"W x 12"H
Material (Table Top)	Natural Laminate (Engineered Wood: Medium Density Fiberboard)
Material (Chairs/Base)	Steel Frame, Black Vinyl Seat (Foam, Plywood, PVC)
Color	Natural Top/Black Vinyl Seat
Number of Pieces	5 (1 table, 4 chairs)
Item Weight	124 pounds (total)
Additional Features	Moisture Resistant, Scratch Resistant (Table Top)

WARRANTY INFORMATION

This Flash Furniture product is covered by a **5-year limited manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, abuse, accidents, modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For assistance with assembly, missing parts, or warranty claims, please contact Flash Furniture customer support. Refer to the contact information provided with your purchase or visit the official Flash Furniture website for support details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question