

Casdon 650

Casdon Morphy Richards Toy Coffee Maker Model 650 Instruction Manual

For ages 36 months to 96 months

INTRODUCTION

This manual provides essential information for the safe and proper use of your Casdon Morphy Richards Toy Coffee Maker, Model 650. Please read these instructions carefully before assembly and play. Keep this manual for future reference.

SAFETY INFORMATION

- **Age Recommendation:** Suitable for children aged 36 months to 96 months.
- **Small Parts:** This product contains small parts (spoons) which may pose a choking hazard for younger children. Adult supervision is recommended, especially for children under 3 years.
- **Water Use:** Only use clean, cold water with this toy. Do not use hot water or any other liquids.
- **Adult Supervision:** Always supervise children during play, especially when water is involved.
- **Cleaning:** Refer to the Maintenance section for proper cleaning instructions.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Toy Coffee Maker
- 1 x Coffee Pot (Carafe)
- 2 x Cups
- 2 x Saucers
- 2 x Spoons (Note: Spoons are small parts)



Image: The Casdon Morphy Richards Toy Coffee Maker, showing the main unit, coffee pot, two red cups, two red saucers, and two small spoons.

PRODUCT OVERVIEW

The Casdon Morphy Richards Toy Coffee Maker is designed for imaginative role-play, mimicking the functionality of a real coffee machine. Key features include:

- **Fillable Water Chamber:** Allows water to be poured into the top and drip through.
- **Water Level Indicator:** A clear indicator on the side shows the water level in the reservoir.
- **Dripping Function:** Water drips from the chamber into the coffee pot below.
- **Removable Coffee Pot:** The coffee pot can be removed for pouring.
- **Realistic Design:** Features a design similar to a real Morphy Richards coffee maker.



Image: Front view of the toy coffee maker, highlighting the control dial, water level indicator, and coffee pot.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, wash the coffee pot, cups, saucers, and spoons with mild soap and water. Wipe the main coffee maker unit with a damp cloth. Ensure all parts are dry before use.
3. **Placement:** Place the toy coffee maker on a stable, flat surface.
4. **Assemble:** Ensure the coffee pot is correctly placed on the warming plate area of the main unit.

OPERATING INSTRUCTIONS

1. **Open Lid:** Lift the lid on top of the coffee maker unit.
2. **Fill Water:** Carefully pour clean, cold water into the water chamber. Observe the water level indicator

on the side to avoid overflowing.

3. **Close Lid:** Securely close the lid.
4. **Place Coffee Pot:** Ensure the coffee pot is positioned correctly under the water outlet. The toy features a spring-loaded mechanism that allows water to drip only when the pot is in place.
5. **Observe Dripping:** Water will begin to drip from the chamber into the coffee pot.
6. **Serve:** Once the water has collected in the coffee pot, remove the pot and pour the water into the included cups.



Image: A child demonstrates pouring water into the top chamber of the toy coffee maker.

MAINTENANCE

- **Cleaning:** Regularly clean the coffee pot, cups, saucers, and spoons with mild soap and water. Rinse thoroughly and allow to air dry.
- **Main Unit:** Wipe the main coffee maker unit with a damp cloth. Do not immerse the main unit in water.
- **Storage:** Store the toy in a clean, dry place away from direct sunlight when not in use.

TROUBLESHOOTING

- **Water Not Dripping:** Ensure the coffee pot is fully and correctly seated on the warming plate. The spring-loaded mechanism requires the pot to be in place for water to flow.
- **No Sounds or Lights:** This toy is designed for realistic water-dripping action and does not include electronic sounds, lights, or functional buttons.
- **Water Leaks:** Check that the lid is securely closed and that the coffee pot is properly aligned. Do not overfill the water chamber beyond the MAX indicator.

SPECIFICATIONS

Brand:	Casdon
Model Number:	650
ASIN:	B00A2MLHQM
UPC:	798256258244
Age Range:	36 months to 96 months
Material:	Plastic
Item Dimensions (L x W x H):	7.68 x 7.48 x 7.28 inches
Item Weight:	367 Grams
Color:	Red/Grey/Black
Educational Objective:	Imagination Development, Role Play

WARRANTY AND SUPPORT

This product is sold without a manufacturer's warranty. For any product-related inquiries, please refer to the retailer where the item was purchased.