

Accutime US9282

Accutime US9282 Sport Watch User Manual

Model: US9282

PRODUCT OVERVIEW

The Accutime US9282 Sport Watch is an ana-digital timepiece designed for daily wear. It features a robust metal case, a comfortable silicone strap, and a quartz movement that provides both analog and digital time displays. This manual provides essential information for setting up, operating, and maintaining your watch.



Figure 1: Front view of the Accutime US9282 Sport Watch, showing the dial, hands, and digital sub-dials.

SETUP

Initial Setup and Time Setting

Your Accutime US9282 watch comes with a pre-installed battery. Follow these steps to set the time and date:

- Analog Time Setting:** Pull out the crown (the knob on the side of the watch case) to the first or second click position (refer to watch specific instructions for exact crown positions). Turn the crown to adjust the analog hour and minute hands to the correct time. Push the crown back in to secure the setting.
- Digital Time Setting:** The watch features digital sub-dials. Press the "MODE" button (usually on the bottom left) repeatedly until the time setting mode is displayed. Use the "RESET" (bottom right) and "ST/STOP" (top right) buttons to adjust hours, minutes, and other digital settings like date, day, and alarm.
- 12/24 Hour Format:** In digital time setting mode, you can typically toggle between 12-hour and 24-hour formats using one of the adjustment buttons.

Wearing the Watch



Figure 2: The Accutime US9282 Sport Watch worn on a wrist, demonstrating its size and fit.

Adjust the silicone strap to ensure a comfortable and secure fit on your wrist. The buckle closure allows for easy adjustment. Ensure the watch is not too tight to allow for proper circulation.

OPERATING INSTRUCTIONS

Digital Display Functions

The Accutime US9282 features multiple digital functions accessible via the side buttons:

- **Time Display:** Shows current time in 12-hour or 24-hour format.
- **Date Display:** Shows the current date (month, day, year).
- **Alarm:** Set a daily alarm. To activate/deactivate the alarm, navigate to the alarm mode and use the appropriate button (refer to specific button functions on your watch).
- **Stopwatch:** Use the "ST/STOP" button to start and stop the stopwatch. The "RESET" button clears the stopwatch.
- **EL Backlight:** Press the "LIGHT" button (usually top left) to illuminate the digital display for a few seconds in low-light conditions.

Button Functions Overview

Button	Function
LIGHT (Top Left)	Activates EL backlight.
MODE (Bottom Left)	Cycles through digital modes (Time, Date, Alarm, Stopwatch).
ST/STOP (Top Right)	Starts/stops stopwatch; adjusts values in setting mode.
RESET (Bottom Right)	Resets stopwatch; selects items or confirms settings in setting mode.
Crown (Right Side)	Adjusts analog time when pulled out.

MAINTENANCE

Cleaning

To maintain the appearance of your watch:

- Wipe the watch case and strap with a soft, dry cloth.
- For silicone straps, a slightly damp cloth can be used, then dry thoroughly.
- Avoid using harsh chemicals, solvents, or abrasive cleaners.

Battery Replacement

The watch is powered by a product-specific battery. When the display dims or functions become erratic, it may be time for a battery replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and function.

Water Resistance

Important: This watch is **not water resistant**. Avoid exposure to water, including rain, splashes, showering, or swimming. Water exposure can damage the internal components and void any potential warranty.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Analog hands not moving.	Crown is pulled out; battery low/dead.	Push crown back in; replace battery.
Digital display is blank or dim.	Battery low/dead.	Replace battery.
Digital time is incorrect.	Not set correctly.	Refer to "Digital Time Setting" in the Setup section.
Buttons are unresponsive.	Low battery; internal malfunction.	Replace battery; if problem persists, seek professional service.

SPECIFICATIONS

- **Model Number:** US9282
- **Movement:** Quartz (Analog and Digital)
- **Case Material:** Metal
- **Case Diameter:** 44 mm
- **Strap Material:** Silicone with silver-tone links
- **Display:** Analog and Digital
- **Functions:** Time, Date, Alarm, Stopwatch, EL Backlight, 12/24-hour format
- **Battery:** 1 Product specific (included)
- **Product Dimensions (L x W x H):**9.91 x 8.1 x 7.39 cm
- **Weight:** 240 grams
- **Water Resistance:** Not water resistant

WARRANTY AND SUPPORT

Information regarding specific warranty terms for the Accutime US9282 watch is typically provided with the product packaging or can be obtained from the point of purchase. Please retain your proof of purchase for warranty claims.



Figure 3: The Accutime US9282 Sport Watch presented in its original product box.

For technical support or service inquiries, please contact the manufacturer, U.S. Polo Assn. Sport, or the retailer from whom you purchased the watch. Information on spare parts availability is currently unavailable.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question