

[Manuals.plus](#) /

> [Accutime](#) /

> Accutime U.S. Polo Assn. Sport Men's US9281 Sport Watch User Manual

Accutime US9281

U.S. Polo Assn. Sport Men's US9281 Sport Watch User Manual

Brand: Accutime

INTRODUCTION

Thank you for choosing the Accutime U.S. Polo Assn. Sport Men's US9281 Sport Watch. This timepiece combines classic analog display with modern digital functions, offering versatility and style. Please read this manual carefully to understand the features and proper operation of your new watch.





Figure 1: Front view of the U.S. Polo Assn. Sport Men's US9281 Sport Watch, showcasing its black and silver-tone design with analog and digital displays.

SETUP

Battery Installation

Your watch comes with a C battery included. If the watch is not functioning upon arrival, or if the display dims, the battery may need to be replaced. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and function.

Initial Time Setting

Upon first use, you will need to set both the analog and digital times.

1. **Analog Time:** Pull out the crown (center knob on the right side) to the first position. Rotate the crown to set the hour and minute hands to the correct time. Push the crown back in to secure the setting.
2. **Digital Time:** Refer to the 'Operating' section for detailed instructions on setting the digital time, including 12/24 hour format.

OPERATING INSTRUCTIONS

Setting Digital Time and Date

1. Press the **MODE** button (bottom left) repeatedly until the time setting mode is displayed (usually indicated by flashing digits).

2. Use the **RESET** button (bottom right) to cycle through the settings: seconds, hours, minutes, month, date, day of the week.
3. Use the **ST/STOP** button (top right) to adjust the flashing digit or setting.
4. Press **MODE** again to exit the setting mode.

Using the Chronograph (Stopwatch)

1. Press the **MODE** button until the chronograph display appears (usually '00:00:00').
2. Press **ST/STOP** to start the stopwatch.
3. Press **ST/STOP** again to pause/resume the stopwatch.
4. Press **RESET** to reset the stopwatch to zero.

Setting and Using the Alarm

1. Press the **MODE** button until the alarm setting display appears.
2. Use **RESET** to select hours or minutes.
3. Use **ST/STOP** to adjust the alarm time.
4. Press **MODE** to confirm and exit.
5. To activate/deactivate the alarm, press **RESET** while in the normal time display mode. An alarm icon will appear/disappear.

EL Backlight

Press the **LIGHT** button (top left) to illuminate the digital display for a few seconds in low-light conditions.



Figure 2: The watch displayed on a wrist, highlighting its comfortable silicone band and large case design.

Your browser does not support the video tag.

Video 1: A 21-second product video showcasing the U.S. Polo Assn. Sport Men's US9281 Sport Watch from various angles, highlighting its design and features.

MAINTENANCE

Cleaning

To clean your watch, wipe it gently with a soft, dry cloth. For the silicone band, a damp cloth with mild soap can be used, followed by drying thoroughly.

Water Resistance

IMPORTANT: This watch is NOT water resistant. Avoid all contact with water, including showering, swimming, or submersion. Exposure to water will damage the watch and void the warranty.

Battery Replacement

When the battery needs replacement, it is recommended to take the watch to a professional watch repair service. This ensures the correct battery type is used and the watch case is properly sealed upon reassembly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Analog hands not moving	Crown is pulled out; Dead battery	Push crown in; Replace battery
Digital display is blank or dim	Low or dead battery	Replace battery
Digital time is incorrect	Time not set properly	Follow 'Setting Digital Time and Date' instructions
Buttons are unresponsive	Watch may be in a specific mode; Low battery	Try pressing MODE repeatedly; Replace battery

SPECIFICATIONS

- Model Number:** US9281
- Case Diameter:** 44 mm
- Case Material:** Metal
- Band Material:** Silicone
- Movement:** Quartz with Analog/Digital Displays
- Backlight:** EL Backlight
- Water Resistance:** Not Water Resistant
- Battery:** 1 C battery (included)
- Features:** Digital chronograph subdials, alarm, 12/24 hour indices





Figure 3: The watch presented within its official U.S. Polo Assn. branded box, indicating original packaging.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Accutime website. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question