

[Manuals.plus](#) /

› [Landmann](#) /

› Landmann L12093 Tennessee Gas Smoker BBQ User Manual

Landmann 12093

Landmann L12093 Tennessee Gas Smoker BBQ

User Manual

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation, assembly, and maintenance of your Landmann L12093 Tennessee Gas Smoker BBQ. Please read this manual thoroughly before assembly or use to ensure proper function and to prevent injury or damage.

IMPORTANT SAFETY INFORMATION

FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN FIRE, EXPLOSION, OR BURN HAZARD WHICH COULD CAUSE PROPERTY DAMAGE, PERSONAL INJURY, OR DEATH.

- Always operate the smoker outdoors in a well-ventilated area.
- Keep children and pets away from the smoker during operation.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Ensure all gas connections are tight and leak-free before lighting. Use soapy water to check for leaks.
- Do not move the smoker while it is in use or still hot.
- Always wear protective gloves when handling hot components.
- Keep the area around the smoker clear and free from combustible materials.
- Do not block the flow of combustion and ventilation air.
- Disconnect the gas supply when the smoker is not in use.

CAUTION: Accessible surfaces may become very hot. Keep hands and face away.

COMPONENTS OVERVIEW

Familiarize yourself with the main parts of your Landmann Gas Smoker:

- **Main Smoker Body:** The primary chamber for smoking food.
- **Door Thermometer:** Integrated into the door for monitoring internal temperature.
- **Adjustable Burner:** Gas-powered burner for heat generation.
- **Wood Chip Drawer:** For adding smoking chips.
- **Water Pan Drawer:** For adding water to maintain humidity and catch drippings.
- **Cooking Grates:** Multiple levels for placing food.
- **Suspension Device:** For hanging meat or fish.
- **Ventilation Discs:** Adjustable vents for smoke and temperature control.
- **Carry Handles:** For easier transport when cool.



Figure 1: Front view of the Landmann L12093 Tennessee Gas Smoker BBQ, showing the main body, control panel, and drawers.



Figure 2: Interior view of the smoker, highlighting the multiple cooking grates and the suspension device for hanging food.



Figure 3: Close-up of the control panel with the igniter button and burner control knob, along with the spring-style handles for the drawers.

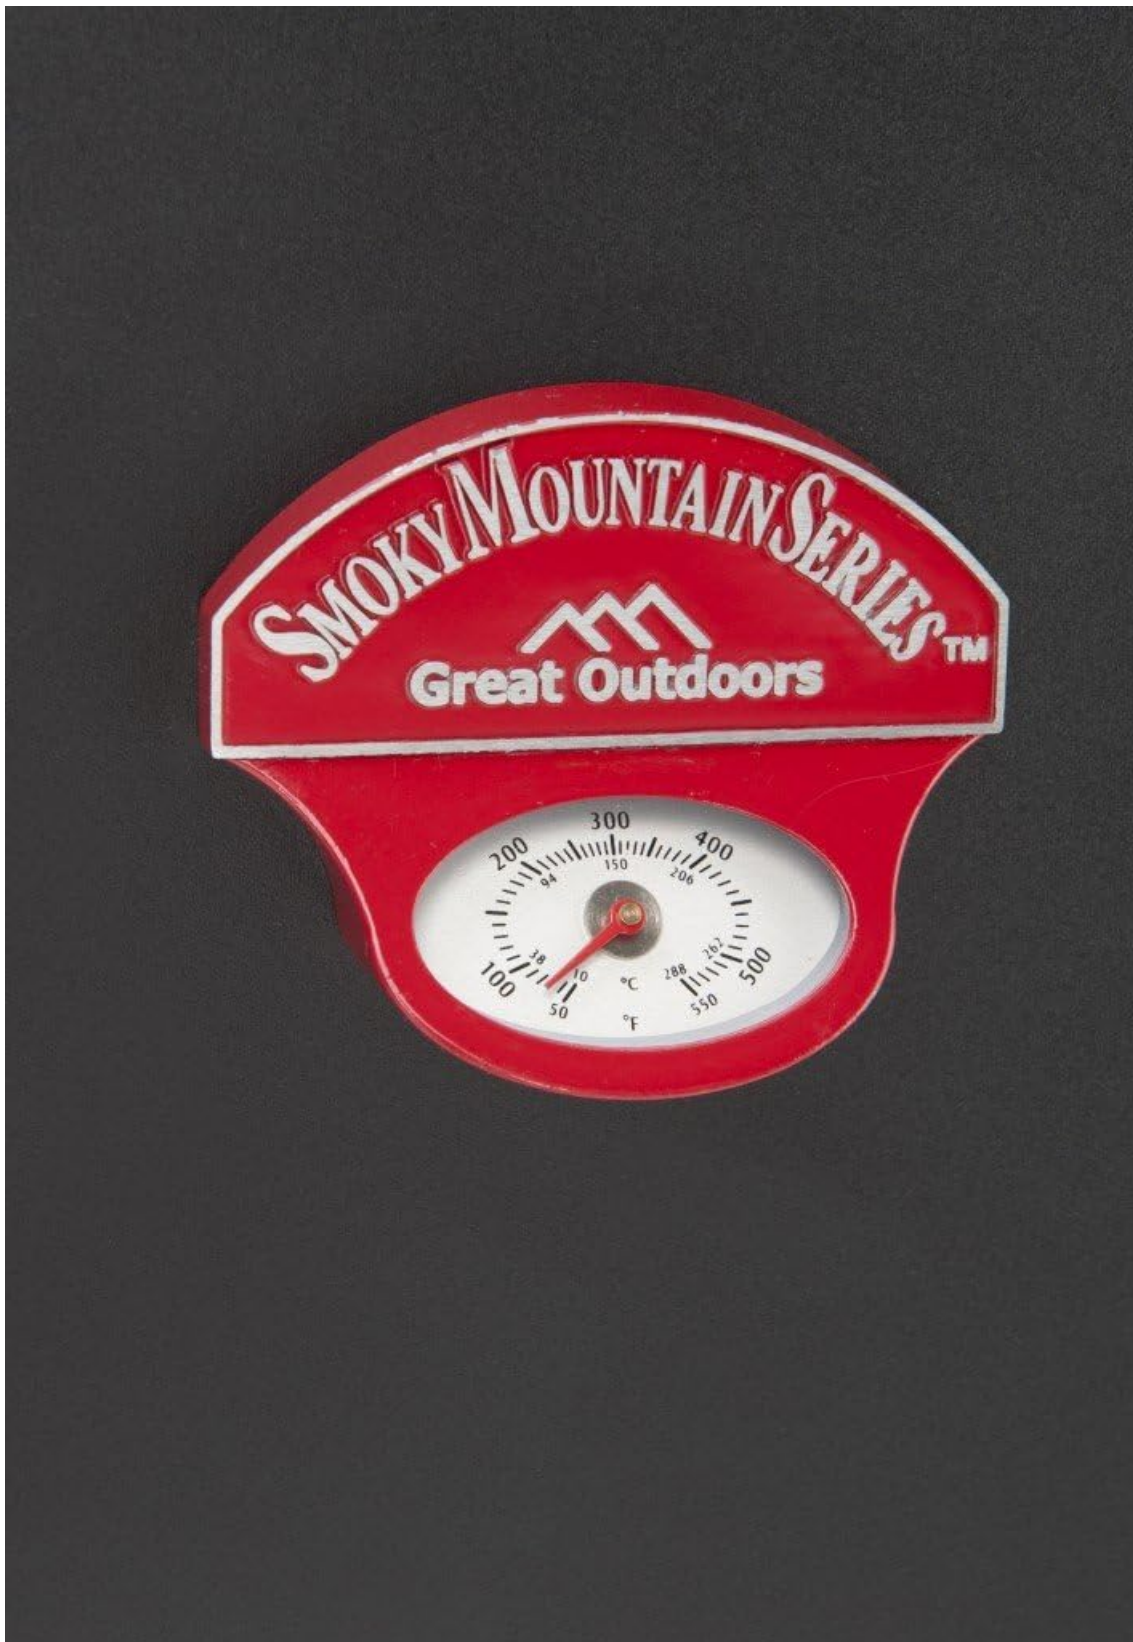


Figure 4: Detailed view of the "Smoky Mountain Series Great Outdoors" thermometer located on the smoker's door, displaying temperature in both Fahrenheit and Celsius.

SETUP AND ASSEMBLY

The Landmann L12093 Tennessee Gas Smoker BBQ requires some assembly. It is recommended to have two people for easier assembly. Ensure all parts are present before beginning.

Pre-Assembly Checklist:

- Unpack all components and verify against the parts list (not provided in this manual, refer to packaging).
- Ensure you have the necessary tools (e.g., screwdriver, wrench).
- Choose a flat, stable, and non-combustible surface for assembly and operation.

Assembly Steps (General Guidance):

1. Attach the legs to the main smoker body using the provided hardware.
2. Secure the gas burner assembly to the base of the smoker.
3. Install the door and ensure it opens and closes smoothly.
4. Insert the wood chip and water pan drawers.
5. Place the cooking grates and suspension device inside the smoker.
6. Connect the gas hose to the burner and ensure it is securely fastened.
7. Perform a leak test on all gas connections using a soapy water solution. Bubbles indicate a leak.

For detailed, step-by-step assembly instructions, please refer to the diagrams and instructions included with your product packaging.

OPERATING INSTRUCTIONS

Before First Use:

- Clean all cooking grates and the water pan with warm, soapy water. Rinse thoroughly and dry.
- Season the smoker by running it empty at a medium temperature for 30-60 minutes to burn off any manufacturing oils.

Connecting Gas Supply:

- Ensure the burner control knob is in the "OFF" position.
- Connect the gas regulator to your propane tank. Tighten securely.
- Open the propane tank valve slowly.
- Perform a leak test on all connections.

Lighting Instructions:

Refer to the control panel (Figure 3) for visual guidance.

1. Ensure the smoker door is **OPEN** during lighting.
2. Open the main gas supply valve on the propane tank.
3. Push and turn the burner control knob to "HIGH".
4. Push the igniter button and hold for 3-5 seconds. You should hear a click and see the burner ignite.
5. If ignition does not occur within 5 seconds, turn the burner control knob to "OFF", wait 5 minutes, and repeat the lighting procedure.

Smoking Food:

- **Prepare Wood Chips:** Soak wood chips in water for at least 30 minutes before use to produce more smoke and prevent rapid burning. Place soaked chips in the wood chip drawer.

- **Fill Water Pan:** Fill the water pan drawer with water, broth, or other liquids to add moisture and flavor to your food.
- **Preheat Smoker:** Once lit, close the smoker door and allow the smoker to preheat to your desired smoking temperature. Monitor the door thermometer (Figure 4).
- **Add Food:** Place food on the cooking grates or hang it from the suspension device. Avoid overcrowding to allow for proper smoke circulation.
- **Adjust Temperature:** Use the burner control knob to adjust the heat. The Landmann L12093 is designed for smoking at slightly lower temperatures. Adjust ventilation discs to fine-tune temperature and smoke intensity.
- **Monitor:** Periodically check the internal temperature of your food using a separate meat thermometer. Refill water and wood chips as needed.

CARE AND MAINTENANCE

Regular cleaning and maintenance will extend the life of your smoker and ensure optimal performance.

- **After Each Use:**
 - Allow the smoker to cool completely.
 - Remove cooking grates, wood chip drawer, and water pan. Clean them with warm, soapy water and a non-abrasive brush.
 - Wipe down the interior and exterior surfaces with a damp cloth.
 - Empty and clean the grease tray (if applicable).
- **Burner Maintenance:** Periodically inspect the burner ports for blockages (e.g., spider webs, food debris). Clean with a wire brush if necessary.
- **Storage:** Store the smoker in a dry, protected area when not in use. If storing outdoors, use a weather-resistant cover. Disconnect and store the propane tank separately.
- **Gas Hose Inspection:** Regularly check the gas hose for cuts, abrasions, or excessive wear. Replace if any damage is found.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Burner does not light.	• No gas flow. • Igniter not sparking. • Burner ports clogged.	• Check propane tank level and ensure valve is open. • Ensure igniter wire is connected and igniter button is pressed firmly. • Clean burner ports with a wire brush.

Problem	Possible Cause	Solution
Low flame or inconsistent heat.	• Low gas pressure. • Regulator "bypass" mode activated. • Ventilation discs closed too much.	• Check propane tank level. • Turn off all gas, disconnect regulator, wait 30 seconds, reconnect, and open tank valve slowly. • Adjust ventilation discs to allow more airflow.
Excessive smoke or bitter taste.	• Too many wood chips. • Improper wood type. • Insufficient airflow.	• Reduce the amount of wood chips. • Use appropriate smoking wood (e.g., hickory, apple, cherry). • Open ventilation discs slightly.

If you encounter issues not listed here, or if solutions do not resolve the problem, please contact customer support.

PRODUCT SPECIFICATIONS

Brand	Landmann
Model Number	12093
Product Dimensions (Assembled)	56 x 108.5 x 46.5 cm
Item Weight	2 kg (4.41 Pounds)
Grill Area	36cm x 31cm x 3cm
Power Source	Gas Powered
Inner Material	Stainless Steel
Fuel Type (for smoking chips)	Wood

WARRANTY AND SUPPORT

For information regarding warranty coverage, please refer to the warranty card included with your product packaging or visit the official Landmann website. Keep your proof of purchase for warranty claims.

If you require technical assistance, replacement parts, or have questions not covered in this manual, please contact Landmann customer support. Contact details can typically be found on the manufacturer's website or on the product packaging.

Landmann Official Website: www.landmann.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question